



TW120

ROTARY CUTTER

Rev 09-16


S/N 14609-Current

Part No. 00762120P

PART'S MANUAL




An Operator's Manual was shipped with the equipment in the Manual Canister. This Operator's Manual is an integral part of the safe operation of this machine and must be maintained with the unit at all times. **READ, UNDERSTAND, and FOLLOW** the Safety and Operation Instructions contained in this manual before operating the equipment. If the Operator's Manual is not with the equipment, contact your dealer or Servis-Rhino (800-446-5158) to obtain a Free copy before operating the equipment.

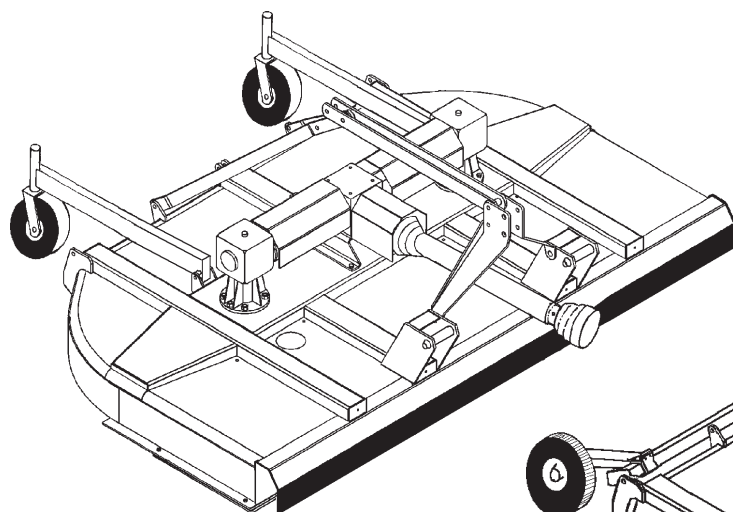

ATENCIÓN!

LEA EL INSTRUCTIVO

Si No Lee Ingles, Pida Ayuda a Alguien
Que Si Lo Lea Para Que le Traduzca las
Medidas de Seguridad.

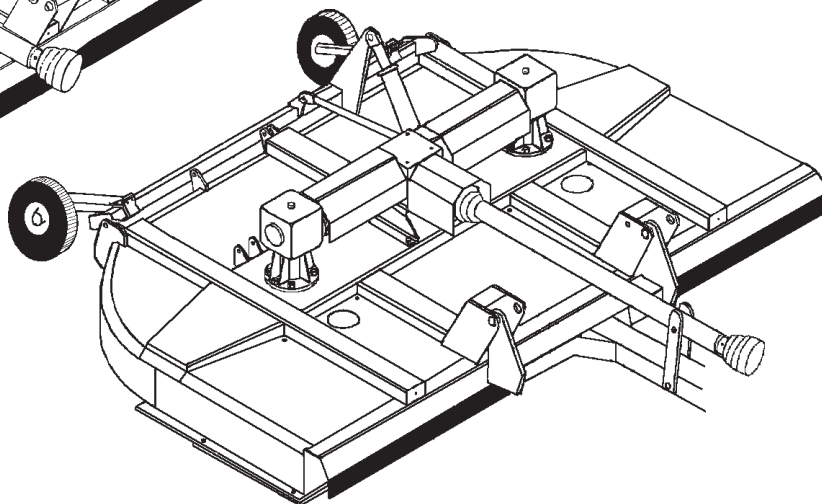

RHINO®

1020 S. Sangamon Ave.

Gibson City, IL 60936

800-446-5158

Email: parts@servis-rhino.com

© 2007 Alamo Group Inc.



TO THE OWNER/OPERATOR/DEALER

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.


BEFORE YOU START!! Read the safety messages on the implement and shown in your manual.
Observe the rules of safety and common sense!



DANGER

FAILING TO FOLLOW SAFETY MESSAGES AND OPERATING INSTRUCTIONS CAN CAUSE SERIOUS BODILY INJURY OR EVEN DEATH TO OPERATOR AND OTHERS IN THE AREA.

1.

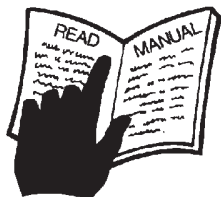

2. NO RIDERS, NO CHILDREN OPERATORS



3. USE SAFETY SHOES, HARD HAT, SAFETY GLASSES, SEAT BELTS, & ROPS



4. BLOCK UP SECURELY BEFORE WORKING UNDER.



1. Study and understand Operator's Manuals, Safety Signs, and Instructional Decals for tractor & flail mower to prevent misuse, abuse, & accidents. Practice before operating mower in a confined area or near passersby.

- Learn how to stop engine suddenly in an emergency. Be alert for passersby and especially children.

2. Allow no children on or near implement or tractor. Allow no riders on tractor or implement. Falling off can cause serious injury or death from being runover by tractor or mower or contact with Flail Mower Blades.

3. Operate only with tractor having Roll-Over Protective Structure (ROPS) and with seatbelt fastened securely and snugly to prevent injury and possible death from falling off or tractor overturn. Personal Protective Equipment such as Hard Hat, Safety Glasses, Safety Shoes, and Ear Plugs are recommended.

4. Block up or support raised machine and all lifted components securely before putting hands or feet under or working underneath any lifted component to prevent crushing injury or death from sudden dropping or inadvertent operation of controls. Make certain that area is clear before lowering or folding.

5. Before transporting, put Lift Lever in detent or full-lift position. Install Transport Safety Devices securely on folding implements. Slow down when turning and on hillsides.

- Install **Restrictor in folding circuit to slow down lowering and unfolding if action is faster than is desirable.

6. Make certain that SMV sign, Warning Lights, and Reflectors are clearly visible. Follow local traffic codes.

7. Never operate with Flail Mower or Folding Section raised if passersby, bystanders or traffic are in the area to reduce possibility of injury or death from objects thrown by Blades under Shields or implement structure.

8. Before dismounting, secure flail mower in transport position or lower to ground.

• Put tractor in park or set brake, disengage PTO, stop engine, remove key, and wait until noise of rotation has ceased to prevent entanglement in rotating parts which may cause injury or death.

- Never mount or dismount a moving vehicle. Crushing from runover may cause injury or death.

5. TRANSPORT SAFELY, LOCK UP.



WARRANTY INFORMATION

6. USE SMV, LIGHTS, & REFLECTORS.



7. DO NOT OPERATE WITH MOWER OR WING RAISED.



8. DO NOT MOUNT OR DISMOUNT WHILE MOVING.



002369

Read and understand the complete Warranty Statement found in this Manual. Fill out the Warranty Registration Form in full and return it within 30 Days. Make certain the Serial Number of the Machine is recorded on the Warranty Card and on the Warranty Form that you retain. The use of "will-fit" parts will void your warranty and can cause catastrophic failure with possible injury or death.

PARTS SECTION

PARTS ORDERING GUIDE

The following instructions are offered to help eliminate needless delay and error in processing purchase orders for the equipment in this section.

1. The Parts Section is prepared in logical sequence and grouping of parts that belong to the basic machine featured in this manual. Part Numbers and Descriptions are given to help locate the parts and quantities required.
2. The Purchase Order must include the name and address of the person or organization ordering the parts, who should be charged, and if possible, the serial number of the machine for which the parts are ordered.
3. The Purchase Order must clearly list the quantity of each part, the complete and correct part number (be sure to include all periods), and the basic name of the part.
4. The Manufacturer reserves the right to substitute parts where applicable.
5. Some parts are unlisted items which are special production items not normally stocked and are subject to special handling. Request a quotation for such parts before sending a Purchase Order.
6. The Manufacturer reserves the right to change prices without prior notice.

NOTE: Please refer to The Safety Section in the front of this Manual for the proper Part Number when ordering Replacement Safety Decals.



For maximum safety and to guarantee optimum product reliability, always use genuine Servis-Rhino Parts. The use of inferior replacement parts may cause premature or catastrophic failure which could result in serious injury or death. Direct any questions regarding parts to:




RHINO®
1020 S. Sangamon Ave.
Gibson City, IL 60936
800-446-5158
Email: parts@servis-rhino.com

PART NAME INDEX


A-FRAME ASSEMBLY -CAT II & III S/N 10785 -CURRENT	4
AXLE ASSEMBLY S/N 15244 -BELOW Rev 08-07	6
AXLE ASSEMBLY S/N 15245 -CURRENT Rev 08-07	5
BLADE PAN ASSEMBLY S/N 11840 -CURRENT	9
CASTER WHEEL AND HUB ASSEMBLY S/N 14609 -CURRENT	10
CHAIN GUARD ASSEMBLY S/N 10001 -CURRENT	11, 12
CONTROL ROD ASSEMBLY S/N 14453 - CURRENT	13
CYLINDER ATTACHMENT- PULL TYPE S/N 10001 - CURRENT	14
CYLINDER, HYDRAULIC (OPTIONAL) S/N 12894 - CURRENT	15
DEFLECTOR ASSEMBLY -FRONT S/N 10001 -CURRENT	16
DEFLECTOR ASSEMBLY -REAR S/N 10001 -CURRENT	17
DRIVELINE - OUTER S/N 14285 - CURRENT.....	18
DRIVELINE - PULL TYPE 1000 RPM S/N 13755 -CURRENT Rev 08-07.....	25
DRIVELINE -PULL TYPE 540 RPM S/N 13755 -CURRENT.....	24
DRIVELINE ASSEMBLY -CV S/N 13640 -CURRENT	26
DRIVELINE ASSY -LIFT TYPE 1000RPM S/N 13564 -CURRENT.....	22
DRIVELINE ASSY -LIFT TYPE 540 RPM S/N 13564 -CURRENT.....	20
GEARBOX ASSEMBLY -OUTER S/N 11840 - CURRENT	32
GEARBOX DIVIDER - 540 RPM S/N 10001 - CURRENT.....	30
GEARBOX DIVIDER -1000RPM S/N 10001 -CURRENT	31
GEARBOX MOUNT PLATE S/N 10001 - CURRENT	29
JACKSHAFT ASSEMBLY - CV Rev 03-05.....	28
JACKSHAFT ASSEMBLY - PULL TYPE Rev 03-05.....	7
JACKSHAFT SUPPORT - PULL TYPE S/N 13413 - CURRENT	8
SHIELD ASSY S/N 14595 - CURRENT & SMV ASSY S/N 10001 -CURRENT	34
SKID SHOE ASSEMBLY S/N 10001 -CURRENT.....	35
SLIP CLUTCH ASSEMBLY S/N 13640 - CURRENT	36
SPRING SHOCK ASSEMBLY S/N 10001 -CURRENT.....	37
TAILWHEEL ASSY -LIFT MODEL S/N 10001 -CURRENT	38
TIRES S/N 10001 -CURRENT	39
TONGUE & JACKSHAFT ASSY -CV DRIVELINE OPTION S/N 10001 -CURRENT.....	40
TONGUE ASSEMBLY S/N 10001 -CURRENT	42
WHEEL HUB ASSEMBLY -S/N 15245 -CURRENT Rev 08-07.....	43
WHEEL HUB ASSEMBLY S/N 15244 -BELOW Rev 08-07	44

A-FRAME ASSEMBLY -CAT II & III S/N 10785 -CURRENT

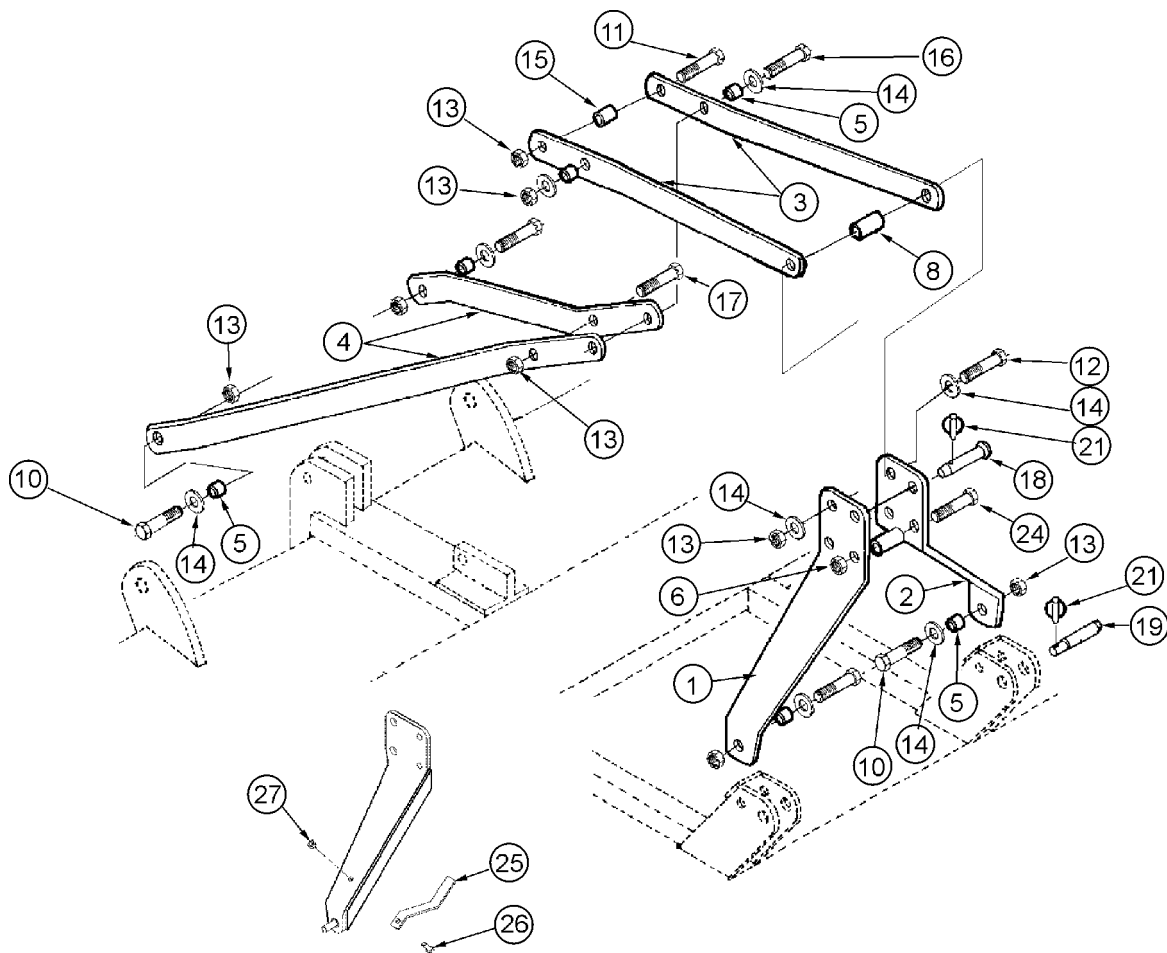


ITEM	PART NO.	QTY.	DESCRIPTION
1	0758550010	1	WLDMT, A FRAME LEG - RIGHT
2	0758550020	1	WLDMT, A FRAME LEG - LEFT
3	00766516	2	BAR FRONT BRACE
4	00766515	2	BAR,REAR BRACE SUPPORT
5	0758550070	6	BSHG
6	5JRC16140	1	LOCKNUT 1 -14 TLDT GC ZP
8	0758550030	2	SPACER
10	00037100	2	HEXB 3/4 NC 2-1/2 PL5
11	02959391	1	HHCS 3/4 NC 2-1/4 PL5
12	00009500	2	BOLT-HEX 3/4 NC 4-1/2 PL5
13	00037200	9	NUT TOPLOCK 3/4 NC PLC
14	5312316	8	WASHER (SPECIAL)
15	00761267	1	SPACER
16	00007800	2	HEXB 3/4 NC 3 PL5
17	00037100	1	HEXB 3/4 NC 2-1/2 PL5
18	3730110M	1	PIN-TOP LINK
19	69141	2	PIN, HITCH CAT II & III
21	2196	3	CLIP (LYNCH PIN), 13/32 DIA.
23	0758550031	1	ORDER 165 MIN HT BUSHING
24	7AH5161436	1	HHCS 1-14 4-1/2 PL
25	00778651	1	DRIVELINE HOLDER BRACKET
26	00748823	1	HHCS 1/2-13UNC 1-1/2 PL5
27	00001800	1	LOCKNUT TLM 1/2 NC PLB

AXLE ASSEMBLY S/N 15245 -CURRENT Rev 08-07

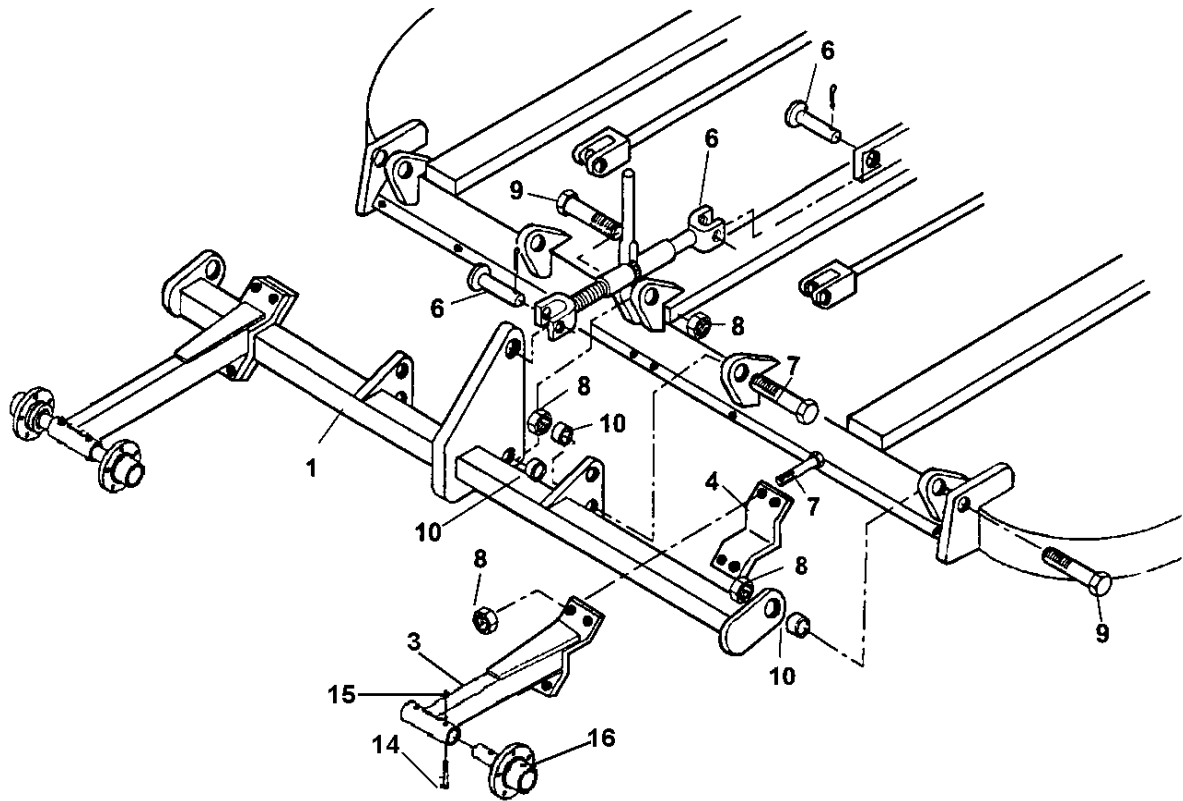


ITEM	PART NO.	QTY.	DESCRIPTION
1	00762106	1	WLDMT-CTR.AXLE
3	00785548	2	WLDMT-AXLE ARM
4	00761174	2	FLAT CLAMP
6	00554600	1	RATCHET JACK
7	00037100	10	HEXB 3/4 NC 2-1/2 PL5
8	00037200	13	NUT TOPLOCK 3/4 NC PLC
9	00007800	3	HEXB 3/4 NC 3 PL5
10	8327	5	BUSHING-LEVEL & ROD
14	000245	2	HHCS 1/2NC X 3 PL5 (OPTIONAL PART)
15	00001800	2	LOCKNUT TLM 1/2 NC PLB (OPTIONAL PART)
16	00775616A	2	HUB & SPINDLE ASSY

AXLE ASSEMBLY S/N 15244 -BELOW Rev 08-07

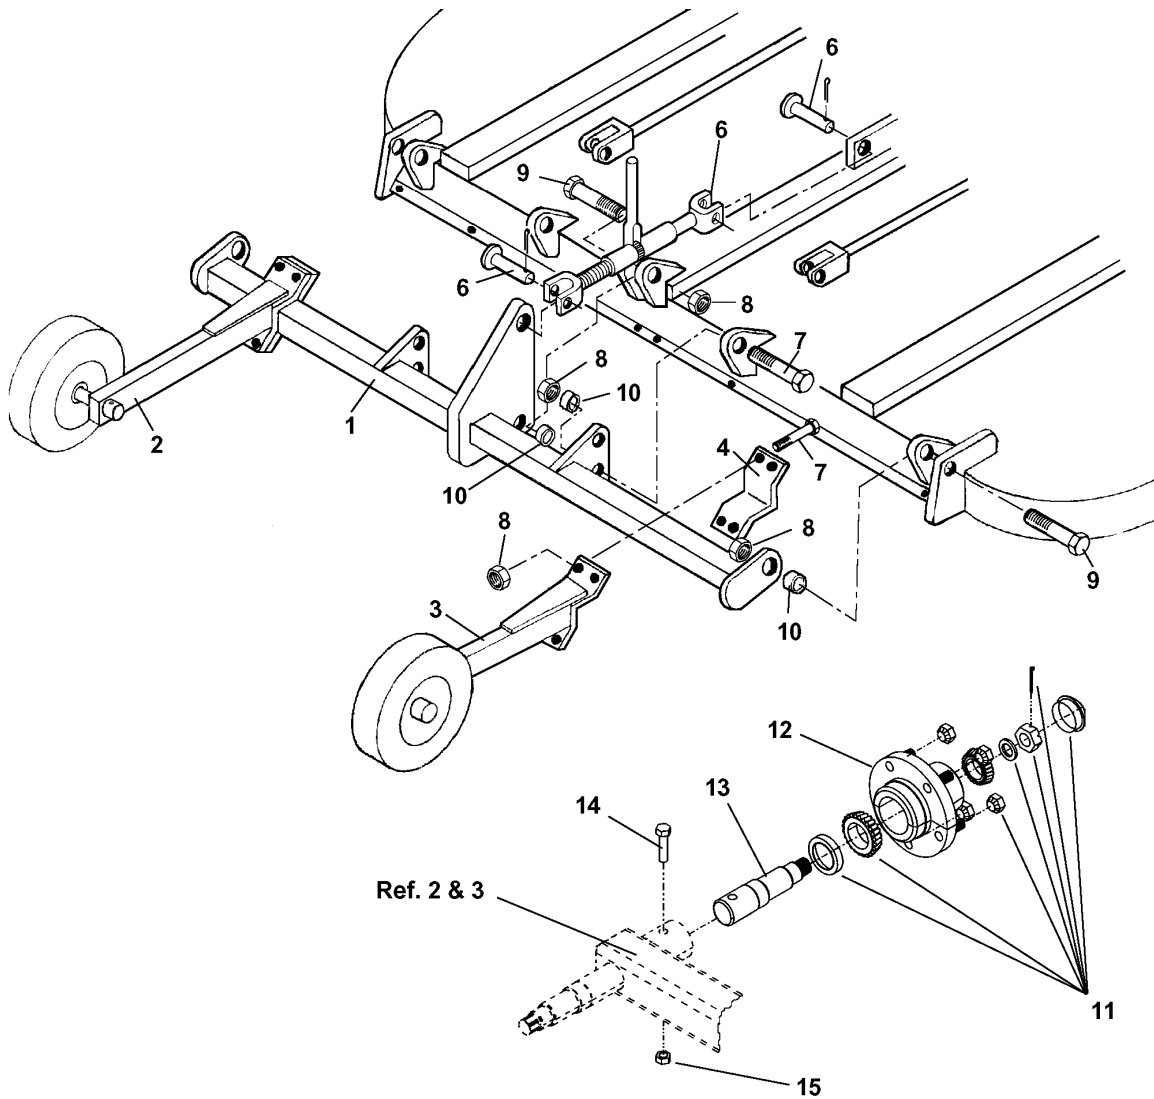

ITEM	PART NO.	QTY.	DESCRIPTION
1	00762106	1	WLDMT-CTR.AXLE
2	00761175	1	WLDMT-AXLE ARM LH
3	00761073	1	WLDMT-AXLE ARM RH
4	00761174	2	FLAT CLAMP
6	00554600	1	RATCHET JACK
7	00037100	10	HEXB 3/4 NC 2-1/2 PL5
8	00037200	13	NUT TOPLOCK 3/4 NC PLC
9	00007800	3	HEXB 3/4 NC 3 PL5
10	8327	5	BUSHING-LEVEL & ROD
11	00756528	2	WHEEL HUB ACCESS. KIT (OPTIONAL PART)
12	00756489	2	HUB W/ CUPS & STUBS (OPTIONAL PART)
13	00771296	2	SPINDLE-AUX. (OPTIONAL PART)
14	000245	2	HHCS 1/2NC X 3 PL5 (OPTIONAL PART)
15	00001800	2	LOCKNUT TLM 1/2 NC PLB (OPTIONAL PART)


JACKSHAFT ASSEMBLY - PULL TYPE Rev 03-05

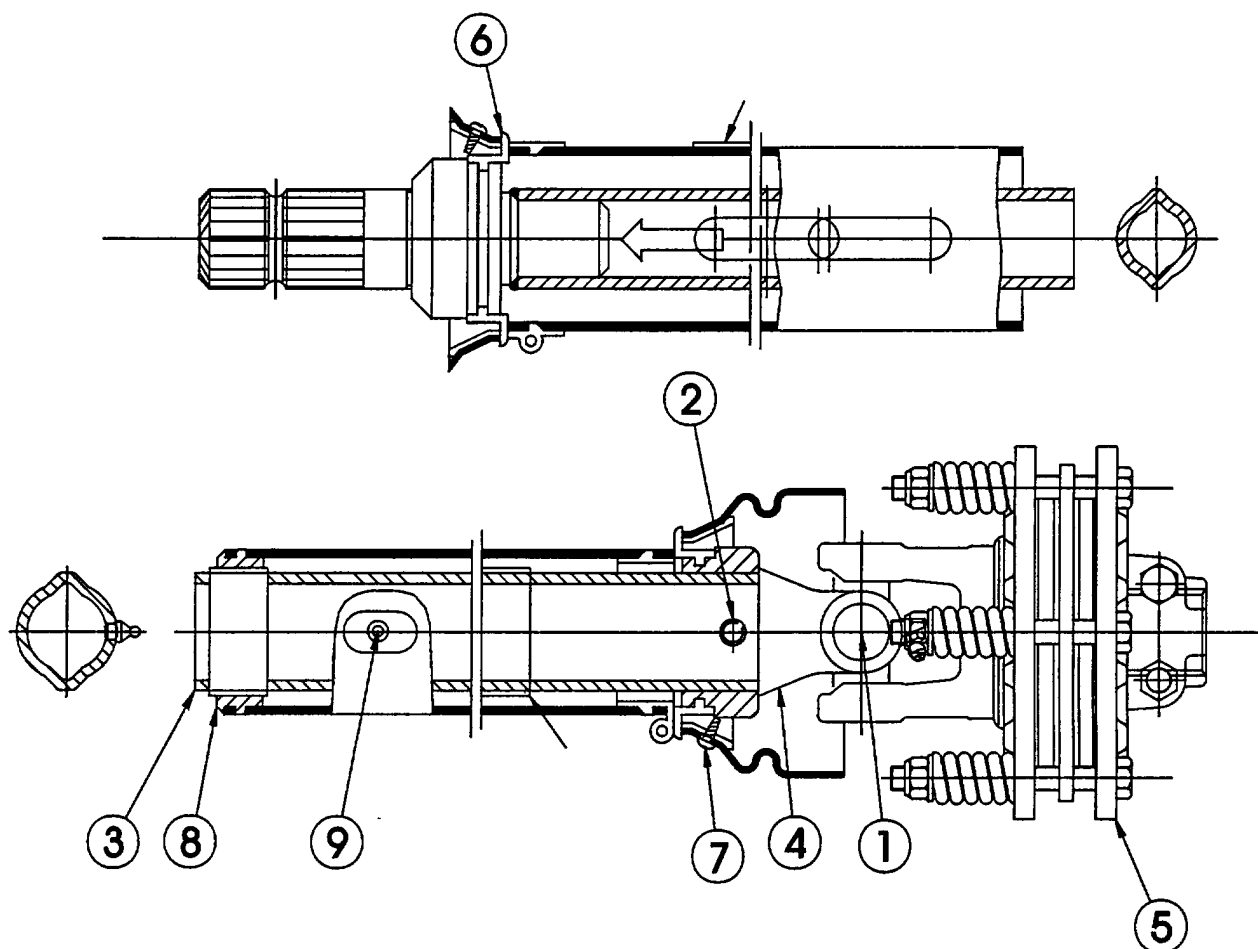

Order replacement parts from this page if the profile of your driveline is lemon shaped.

ITEM	PART NO.	QTY.	DESCRIPTION
	00775357	-	DRIVELINE ASSEMBLY
1	W279R	1	CROSS & BEARING KIT
2	8384	1	SPRING PIN
3	00775374	1	PROFILE & SLEEVE
4	00775318	1	INBOARD YOKE
5	00775331	1	FRICTION CLUTCH
6	8393	2	BEARING RING
7	4797	2	SCREW
8	8974	1	SUPPORT BEARING
9	1416601	1	GREASE FITTING
	00775360	1	OUTER SHIELD HALF
	00775361	1	INNER SHIELD HALF

JACKSHAFT SUPPORT - PULL TYPE S/N 13413 - CURRENT

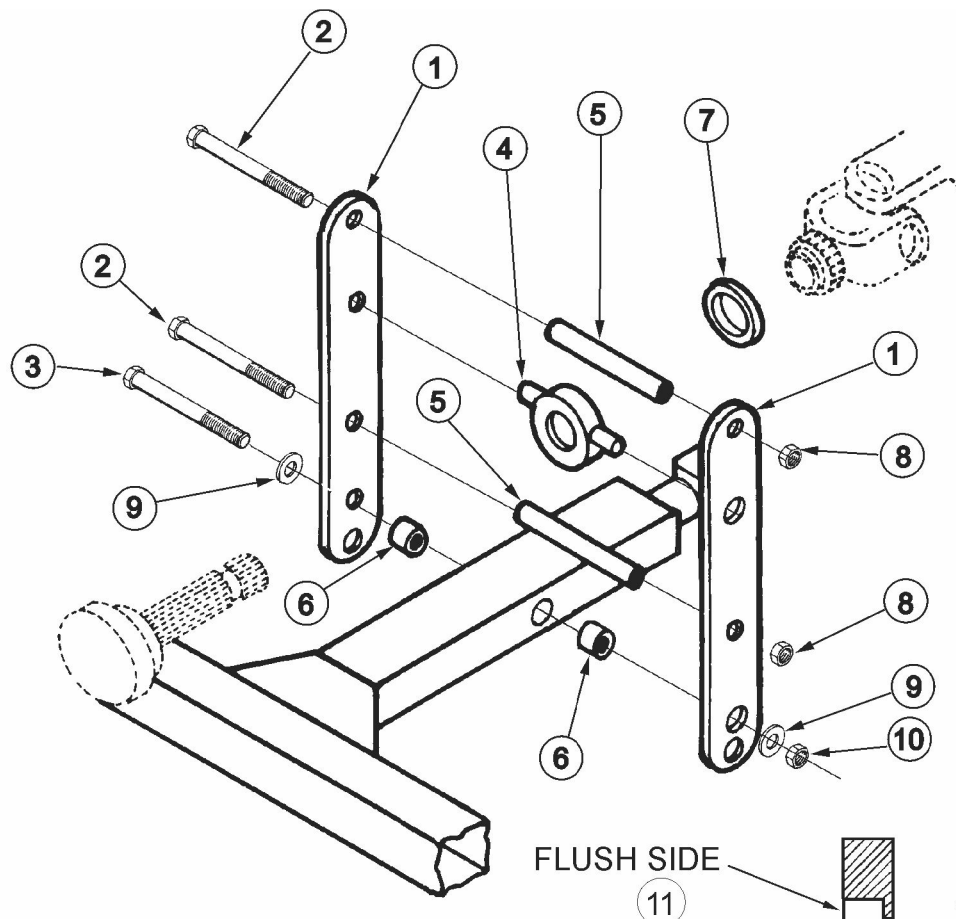


****NOTE:** IF YOU HAVE A CV DRIVELINE
SEE PARTS SECTION- 40

FLUSH SIDE
11

Install bearing assembly with flush side toward Jackshaft. Apply locktite when installing bearing onto Jackshaft.


ITEM	PART NO.	QTY.	DESCRIPTION
1	00764455	2	FLAT-BEARING-SUPPORT
2	02956953	2	HEXB 1/2 NC 8 PL5
3	00016400	1	HHCS 5/8 NC 8 PL5
4	00764416	1	BEARING, ASY, W/HSG
	00764417	1	BEARING,BALL 1-1.77IDX3.346OD
5	00764457	2	PIPE-SPACER
6	0811180520	2	BUSHING 7/8 X .635 X 21/32
7	00768652	1	TUBE, SPACER
8	00001800	2	LOCKNUT TLM 1/2 NC PLB
9	00001400	2	FLATWASHER 5/8 PL STD
10	00695100	1	NUT, TOPLOCK 5/8 NC PLB
11	00774171	1	RETAINING RING

BLADE PAN ASSEMBLY S/N 11840 -CURRENT

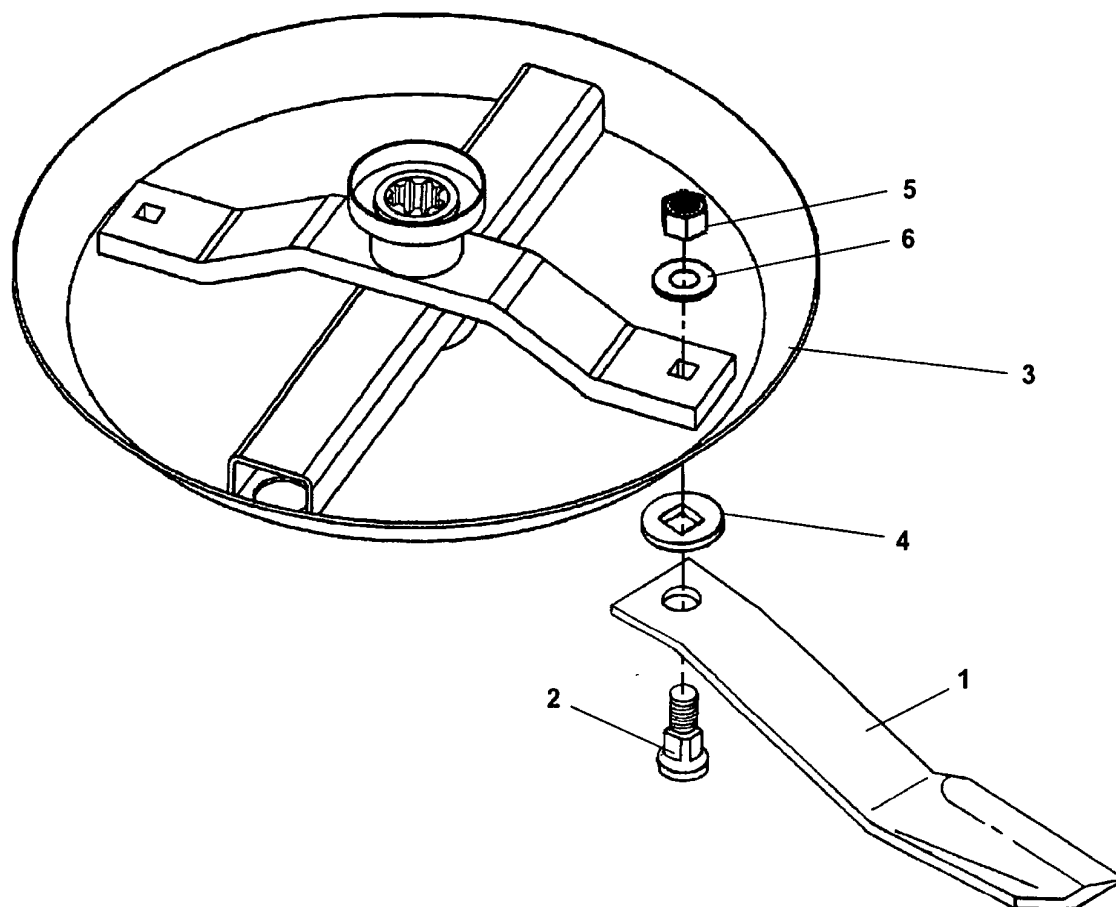


ITEM	PART NO.	QTY.	DESCRIPTION
1	8589A	2	BLADE CCW
	8590A	2	BLADE (CW ROTATION)
2	8251	2	BLADE BOLT SPECIAL
3	00770392	1	WLDMT-DISHPAN
4	00758579	2	WASHER-BLADE
5	5JRC16140	2	LOCKNUT 1 -14 TLDT GC ZP
6	9216	2	WASHER, 1 STRUCTURAL

CASTER WHEEL AND HUB ASSEMBLY S/N 14609 -CURRENT

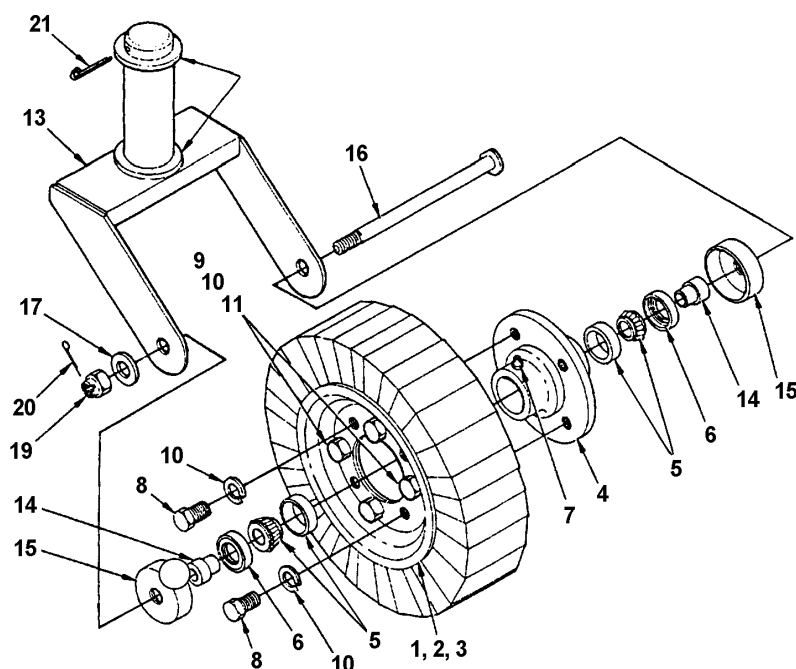


ITEM	PART NO.	QTY.	DESCRIPTION
	00776220	1	ASSY CASTER FORK & WHEEL
1	373024H	1	WHEEL & TIRE ASSY
2	373024A	1	TIRE, 4 X 8 LAMINATED
3	373024B	1	WHEEL 4 X 8 W/NUTS
4	00776214	1	HUB 4 BOLT
5	00776213	2	BEARING
6	00776219	2	SEAL OIL 40 X 62 X 8
7	00772082	1	NIPPLE, GREASE M8X1
8	00776216	4	BOLT M12 X 1.5 X 25
9	7A6166	4	HHCS 3/8 NC 3/4
10	00776215	4	LUG BOLT FLAT WASHER
11	00012101	4	LOCKWASHER 3/8 PL HVY
12	00013901	4	NUT HEX 3/8 NC PL
13	0585020210A	1	WLDMT CASTER FORK
14	00772017	2	BUSHING SPINDLE STEP
15	00772018	2	DUST CAP
16	00776211	1	BOLT SPINDLE M24 X 2 X 186
17	02822500	1	FLATWASHER 1 PL STD
18	15B2400	2	FLATWASHER NAR 1-1/2 PL
19	00776212	1	NUT SPINDLE M24 X 2
20	00771620	1	PIN, COTTER 5/32X2-1/2 PL
21	00758899	1	PIN COTTER 3/8X2-1/2 PL EXTEND

CHAIN GUARD ASSEMBLY S/N 10001 -CURRENT

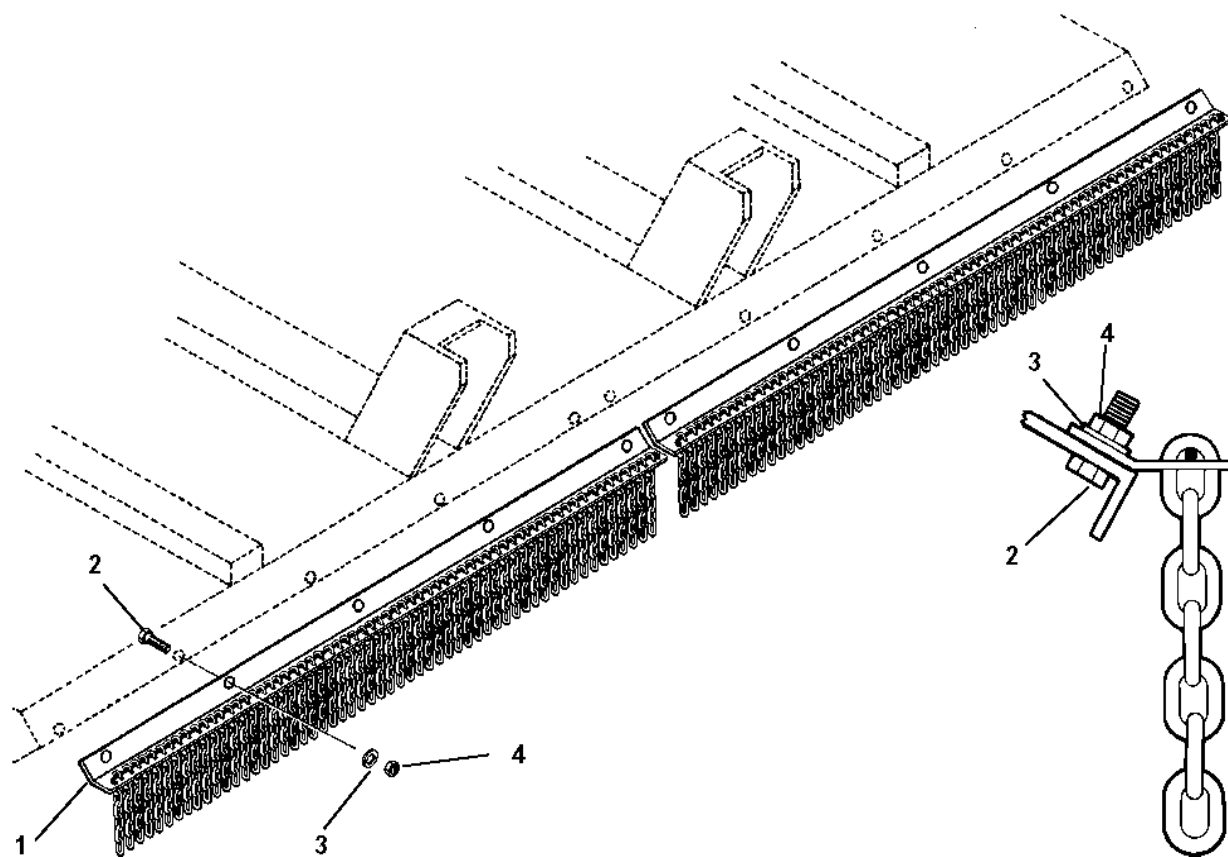


ITEM	PART NO.	QTY.	DESCRIPTION
1	00762181	1	BNDL-FRONT CHAINGUARD (BLACK)
	00769005	1	BNDL-FRONT DOUBLE CHAINGUARD
2	02030700	10	HHCS 1/2-13UNC 1-1/4 PL5
3	00002700	10	WASHER
4	4526	10	NUT LOCK FLG WHIZ 1/2-13 NC PL

CHAIN GUARD ASSEMBLY S/N 10001 -CURRENT

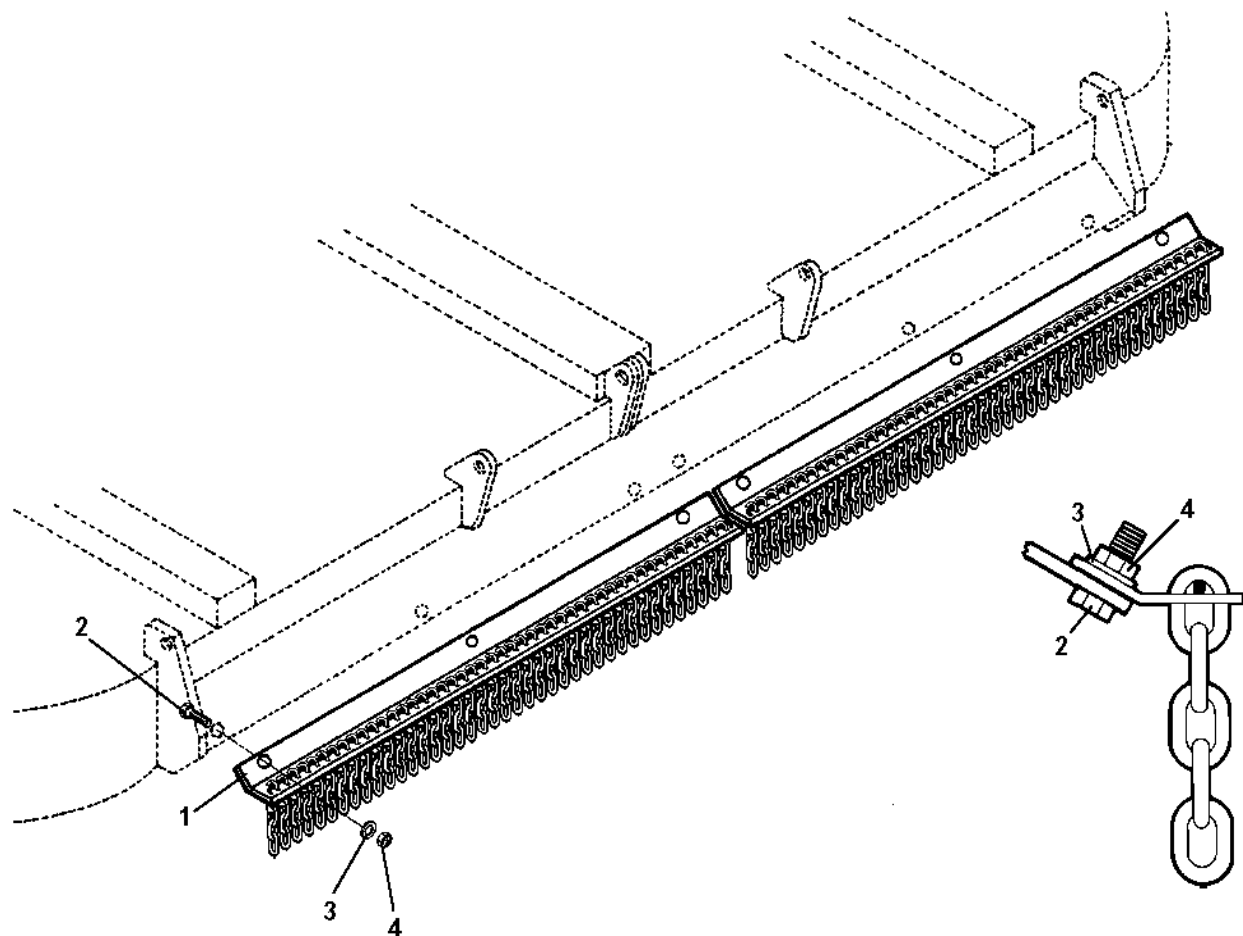


ITEM	PART NO.	QTY.	DESCRIPTION
1	00762182	2	BNDL-REAR CHAINGUARDS (BLACK)
	00769006	2	BNDL-REAR DOUBLE CHAINGUARDS
2	02030700	6	HHCS 1/2-13UNC 1-1/4 PL5
3	00002700	6	WASHER
4	4526	6	NUT LOCK FLG WHIZ 1/2-13 NC PL

CONTROL ROD ASSEMBLY S/N 14453 - CURRENT

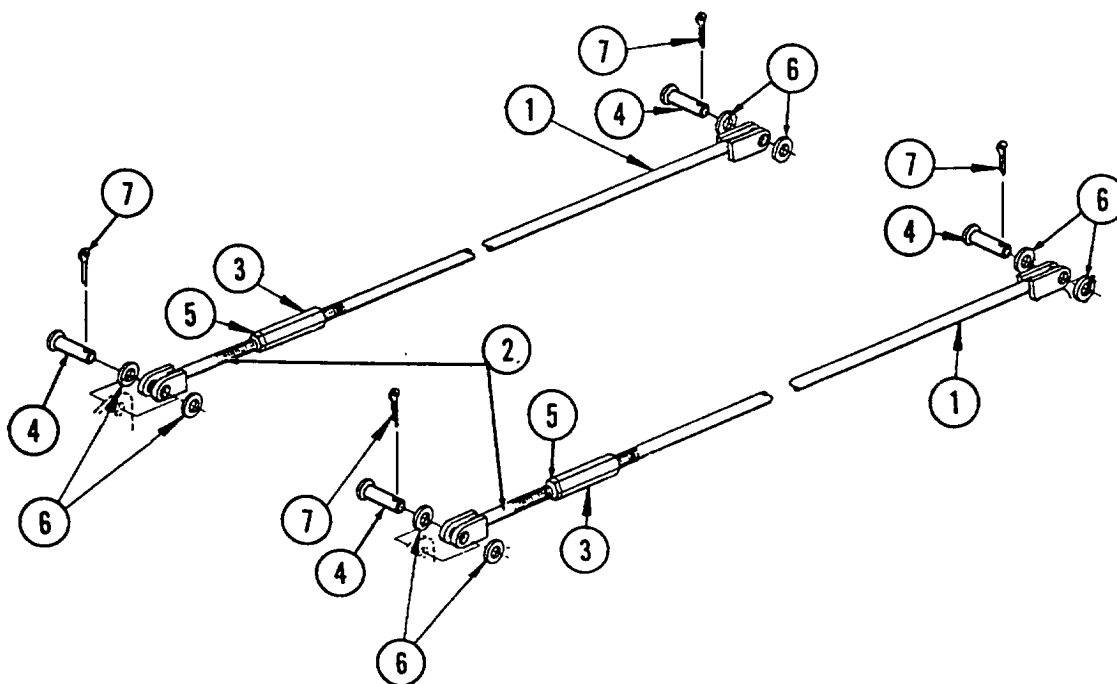


ITEM	PART NO.	QTY.	DESCRIPTION
	00762147	-	ASY-LEVEL ROD (RHINO)
1	743031	2	WLDMT-LEVEL ROD
2	00758643	2	ROD,CONTROL
3	00778159	2	NUT, 9
4	651102	4	PIN-DRILLED
5	5C1490	2	HEXNUT 7/8 JAM ZP
6	15B1200	8	WASHER 3/4 P SAE
7	00755153	4	PIN-COTTER 3/16 X 1-1/2 PLATED

CYLINDER ATTACHMENT- PULL TYPE S/N 10001 - CURRENT

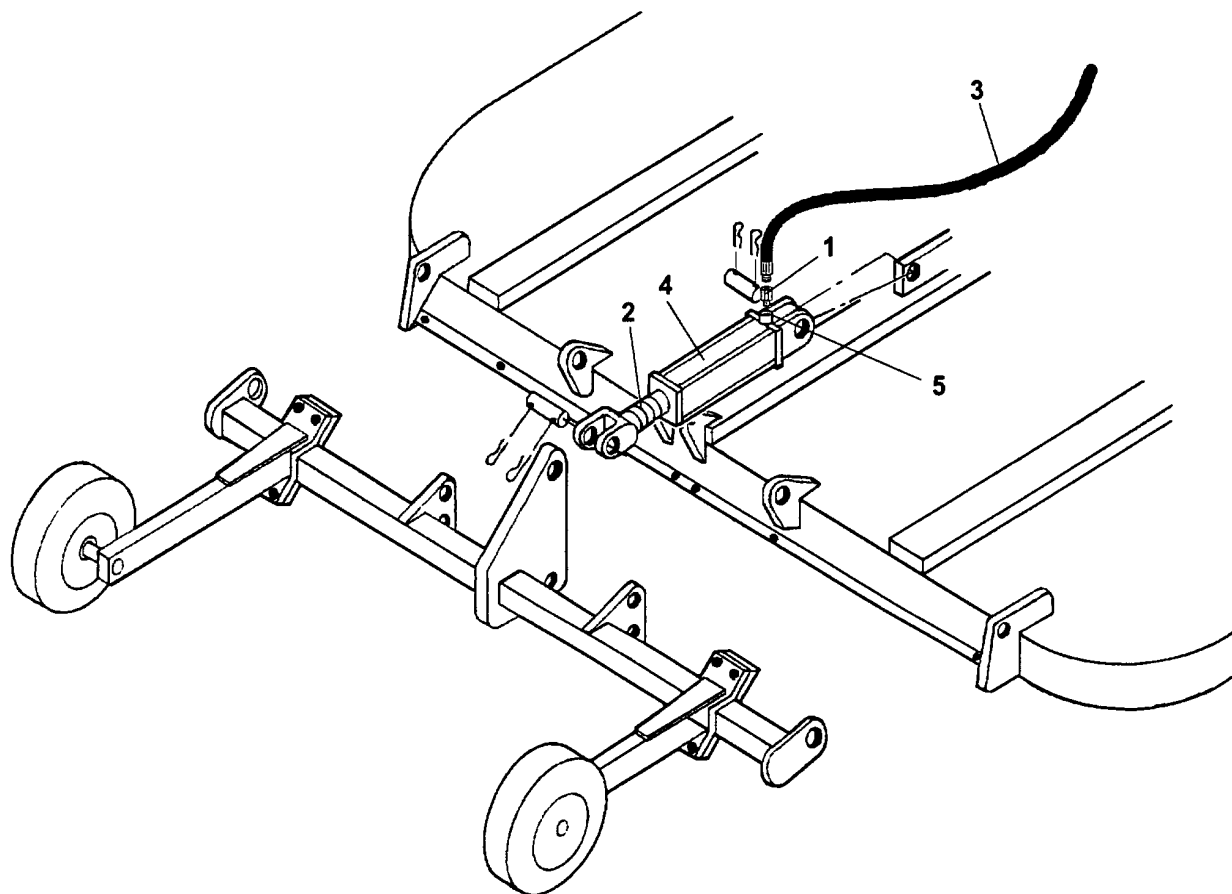


ITEM	PART NO.	QTY.	DESCRIPTION
1	7329	1	ADAPTER, HYD, STGHT RESTRICTOR
2	00755234	1	CONTROL SPACER KIT
3	651132	1	HOSE #6 - 8MP - 8MP - 144LG
4	8727A	1	CYLINDER HYD 2-1/2 8
	8727	1	HYDRAULIC CYLINDER, T
5	0652141311	1	ADP HYD STGHT 8MB - 8FP

CYLINDER, HYDRAULIC (OPTIONAL) S/N 12894 - CURRENT

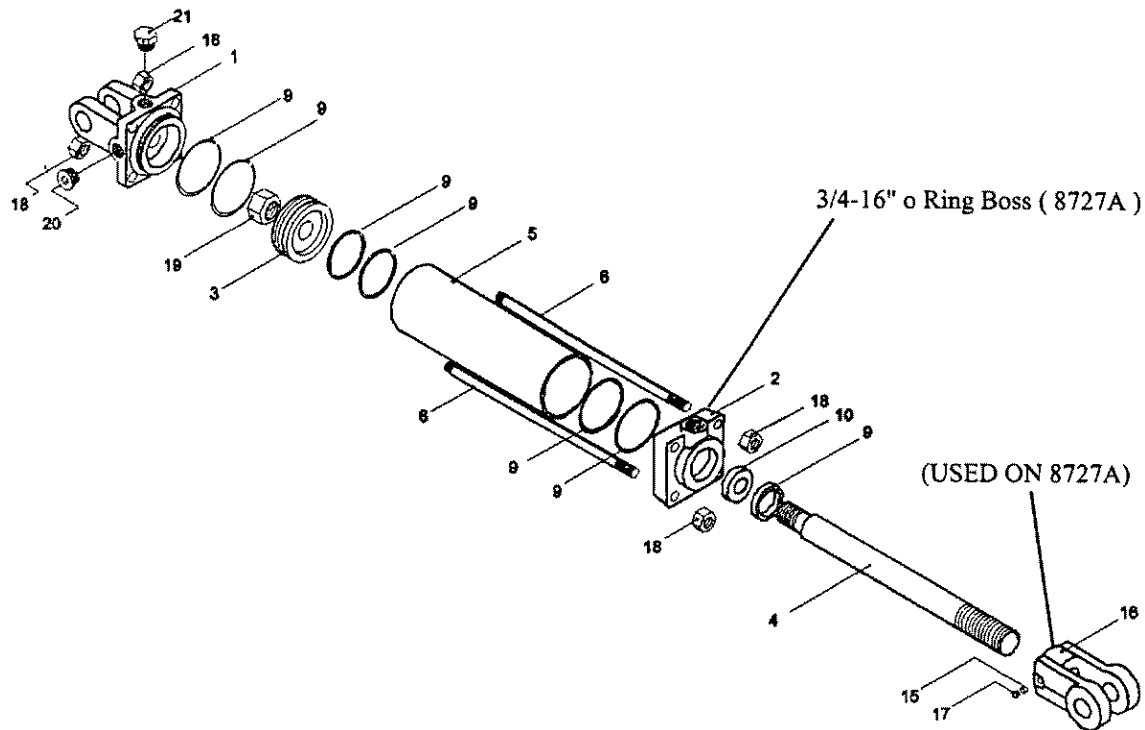


ITEM	PART NO.	QTY.	DESCRIPTION
	8727A		CYLINDER HYD 2-1/2 8
1	00774729	1	CLEVIS CAP 2.5-3/4 ORB-1.00
2	00774734	1	ROD CAP 2.50-1.25-3/4 ORB
3	00774730	1	PISTON 2.5-0.75-S HALL W/RING
4	00774753	1	ROD CYL 1.25-08-0.75-1.25-A
5	3047111	1	CYLINDER TUBE
6	3047112	4	TIE ROD
9	00774760	1	SEAL KIT
15	3047117	1	THREAD LOCK
16	1917140	1	ROD CLEVIS
17	00774740	1	SC SCKT SET 3/8UNCX1/2 KNUR
18	33003H5C	8	HEX NUT 3/8-16 GR.5
19	5JRC12160	1	NUT TOPLOCK 3/4 NF PLC
20	1917132	1	SCKT HD O-RNG PLUG,3/4-16 UNF,
21	2417154	1	BREATHER,CYLINDER #8 ORB
	651132	2 ref	HOSE #6 - 8MP - 8MP - 144LG (NOT SHOWN)
	94514	2 ref	ADAPTER, HYD, ELBOW SWIVEL (NOT SHOWN)
	0652141311	2 ref	ADP HYD STGHT 8MB - 8FP (NOT SHOWN)
	8354	2 ref	PIN-HYD. CYLINDER (NOT SHOWN)
	00606000	2 ref	PIN-COTTER 3/16 X 2 (NOT SHOWN)

DEFLECTOR ASSEMBLY -FRONT S/N 10001 -CURRENT

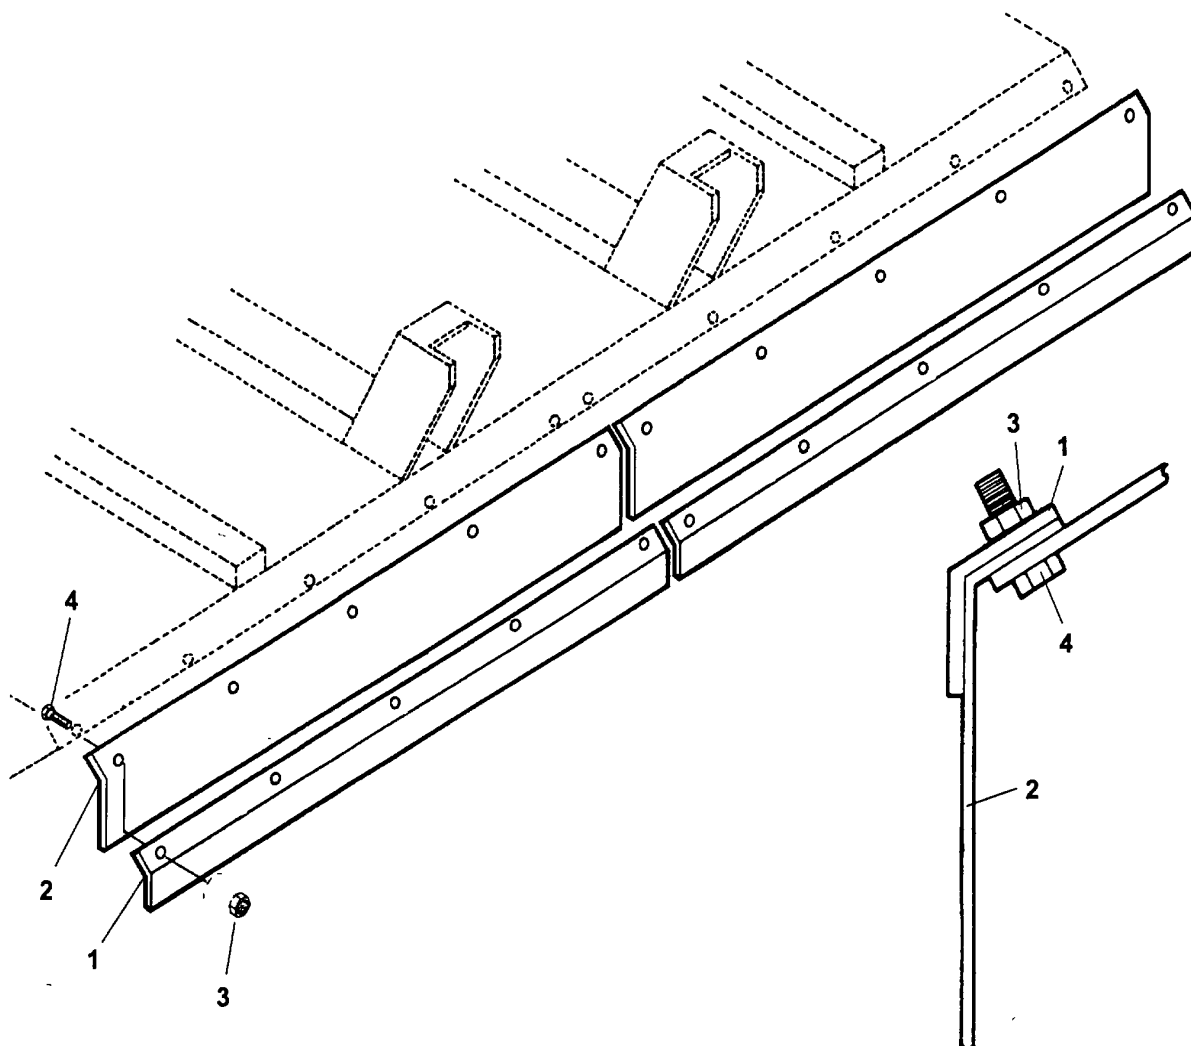


ITEM	PART NO.	QTY.	DESCRIPTION
	00762179	-	BNDL-DEFLECTOR FRONT(BLACK)
1	00762145	2	PLATE-STRAP (BLACK)
2	00762143	2	SHIELD-DEF.FRT.
3	4526	10	NUT LOCK FLG WHIZ 1/2-13 NC PL
4	02030700	10	HHCS 1/2-13UNC 1-1/4 PL5

DEFLECTOR ASSEMBLY -REAR S/N 10001 -CURRENT

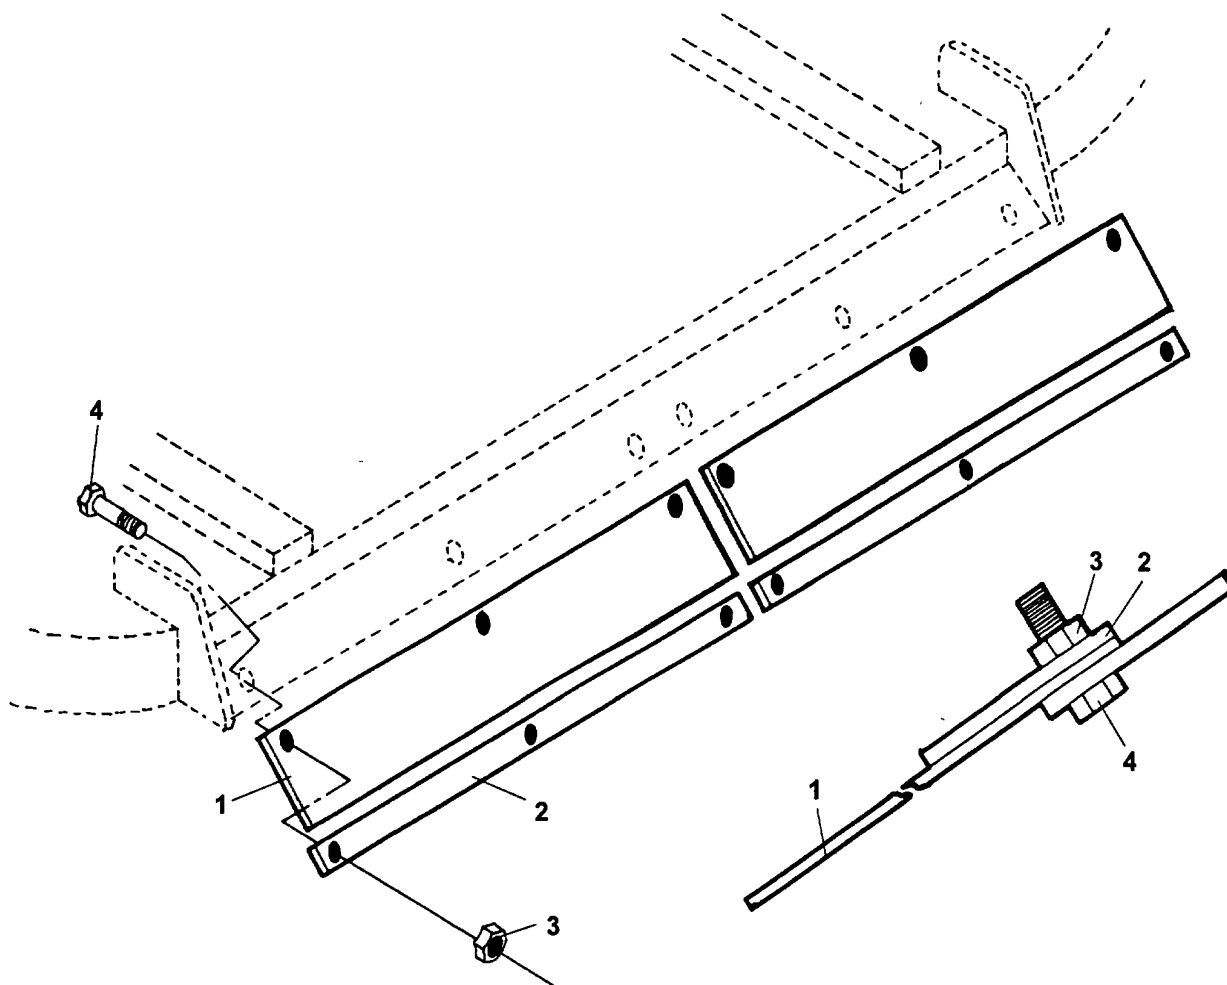

ITEM	PART NO.	QTY.	DESCRIPTION
	00762180	-	BNDL-DEFLECTOR REAR(BLACK)
1	00762142	2	SHIELD-DEF.REAR
2	00762144	2	BAR-STRAP (BLACK)
3	4526	6	NUT LOCK FLG WHIZ 1/2-13 NC PL
4	02030700	6	HHCS 1/2-13UNC 1-1/4 PL5

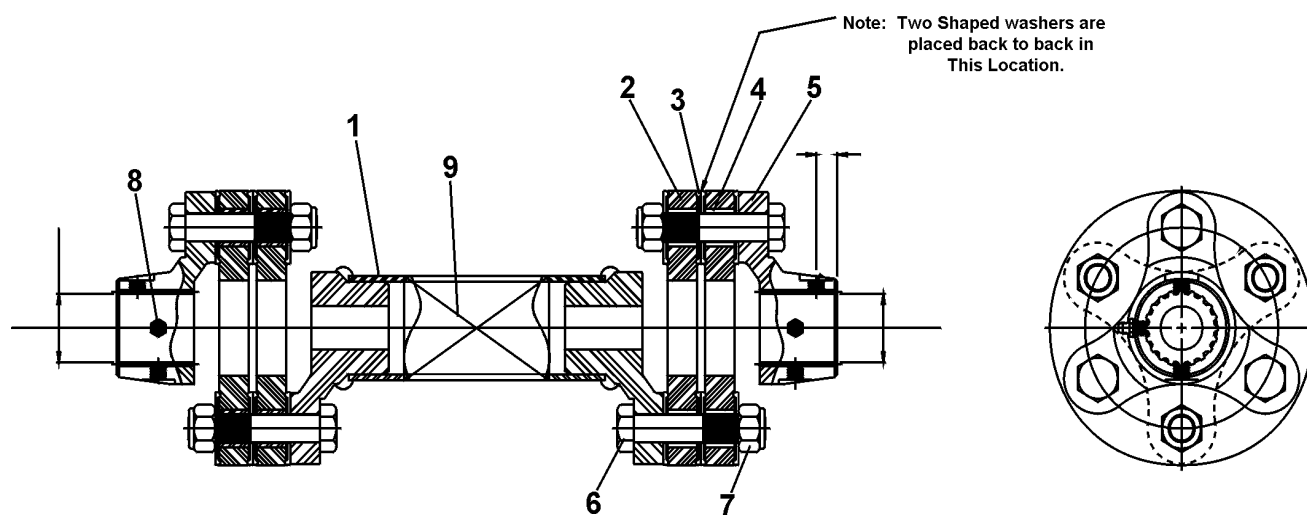


ITEM	PART NO.	QTY.	DESCRIPTION
	00776944	-	DRIVELINE ASSY
1	00776947	1	ASSY, DOUBLE FLEX YOKE & TUBE
2	00785557	4	DISC,RUBBER (W/O BUSHINGS)
3	00766475A	48	WASHER,BEADED D/L COUPLER
4	00771287	24	BUSHING,RUBBER DISK
5	00762216A	2	D/L SPIDER 1-3/4 20 SPL.
6	00765902	12	BOLT METRIC M16 X 90 UNI 5737
7	00765962	12	NUT MET TLE 16MM-P2.0 PL
8	00764386	2	GREASE FITTING,8MMX1 STRAIGHT
9	00756004	1	DECAL-SHIELD MISSING

THIS PAGE INTENTIONALLY LEFT BLANK

DRIVELINE ASSY -LIFT TYPE 540 RPM S/N 13564 -CURRENT

Order replacement parts from this page if the profile of your driveline is lemon shaped.

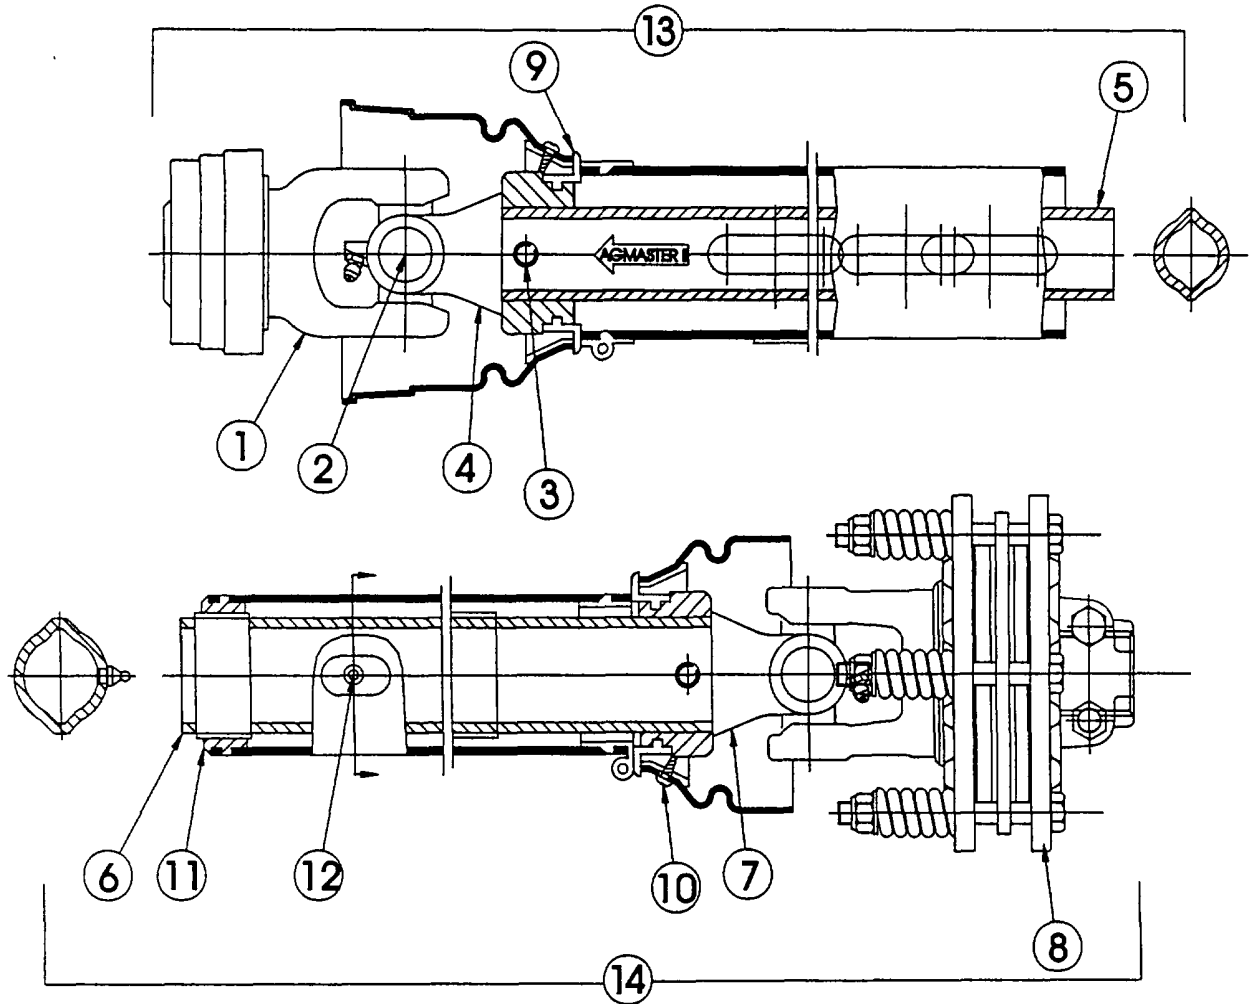


DRIVELINE ASSY -LIFT TYPE 540 RPM S/N 13564 -CURRENT

ITEM	PART NO.	QTY.	DESCRIPTION
	00775385	-	DRIVELINE 43.75 LG X 1-3/8-6QD
	00775386	-	DRIVELINE TRACTOR HALF CAT 4
	00775387	-	DRIVELINE IMPLEMENT HALF CAT 4
1	00775353	1	YOKE 1-3/8-6 SPLINE ASGE
2	00189700	2	CROSSKIT
3	8384	2	SPRING PIN 10MM X 90MM
4	00775317	1	YOKE INBOARD 1B
5	7413	1	INNER PROFILE
6	00775377	1	PROFILE & SLEEVE W.A.
7	00775318	1	YOKE INBOARD 2A
8	00775331	1	CLUTCH FRICTION
9	8393	2	BEARING RING
10	00759217	2	SCREW 1/2 LG END
11	8974	1	SUPPORT BEARING
12	1416601	1	ZERK
13	00775388	1	OUTER SHIELD HALF
14	00775389	1	INNER SHIELD HALF
	00767954	1	YOKE.Q.D.KIT - PLASTIC

DRIVELINE ASSY -LIFT TYPE 1000RPM S/N 13564 -CURRENT

Order replacement parts from this page if the profile of your driveline is lemon shaped.

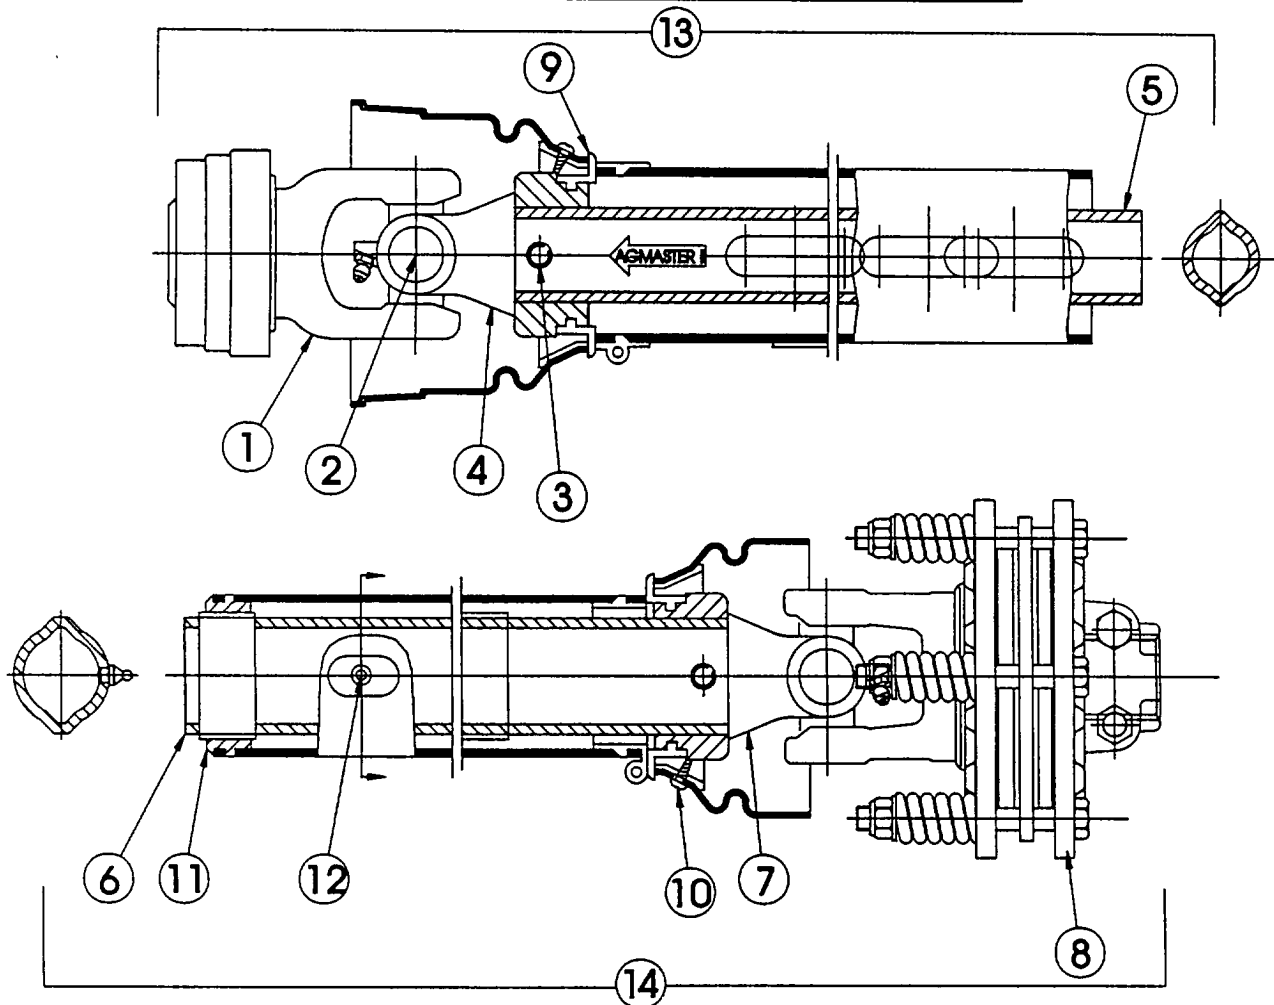


DRIVELINE ASSY -LIFT TYPE 1000RPM S/N 13564 -CURRENT

ITEM	PART NO.	QTY.	DESCRIPTION
	00775390	-	DRIVELINE 43.75 LG X 1-3/8-21
	00775387	-	DRIVELINE IMPLEMENT HALF CAT 4
	00775391	-	DRIVELINE TRACTOR HALF CAT 4
1	00761762	1	YOKE 1-3/8-21 SPL PAINT BLACK
2	00189700	2	CROSSKIT
3	8384	2	SPRING PIN 10MM X 90MM
4	00775317	1	YOKE INBOARD 1B
5	7413	1	INNER PROFILE
6	00775377	1	PROFILE & SLEEVE W.A.
7	00775318	1	YOKE INBOARD 2A
8	00775331	1	CLUTCH FRICTION
9	8393	2	BEARING RING
10	00759217	2	SCREW 1/2 LG END
11	8974	1	SUPPORT BEARING
12	1416601	1	ZERK
13	00775388	1	OUTER SHIELD HALF
14	00775389	1	INNER SHIELD HALF
	00767953	1	YOKE.Q.D.KIT - METAL


DRIVELINE -PULL TYPE 540 RPM S/N 13755 -CURRENT

Order replacement parts from this page if the profile of your driveline is lemon shaped.

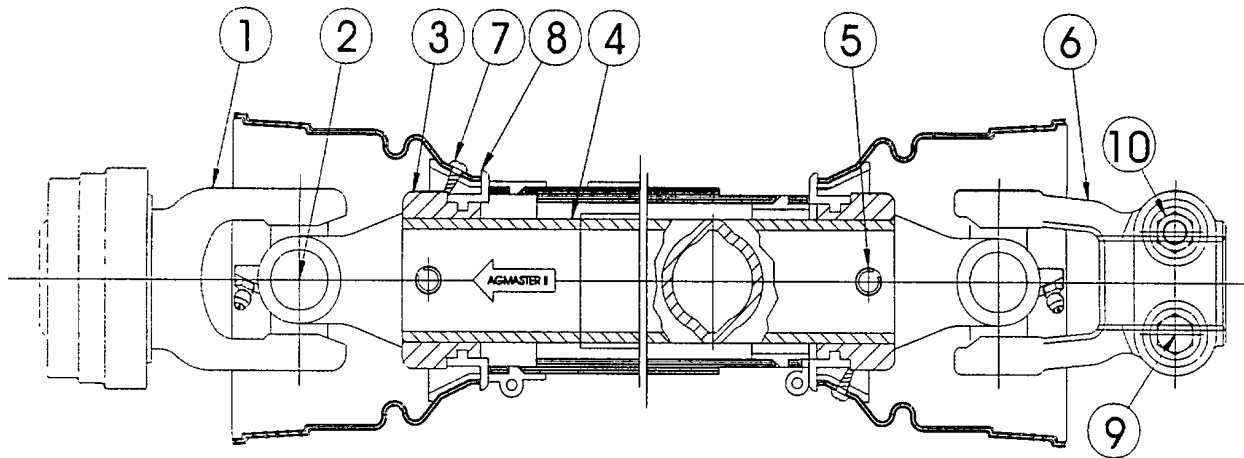


ITEM	PART NO.	QTY.	DESCRIPTION
	00775351	-	DRIVELINE MAIN 540 EQ ANGLE
1	00775353	1	YOKE 1-3/8-6 SPLINE
2	00189700	2	CROSSKIT
3	00775318	1	YOKE INBOARD 2A
4	00775354	1	OUTER PROFILE 2A
5	00756934	2	PIN,ROLL 10 X 80
6	00775316	1	YOKE 1-3/4-20 SPL I.C.
7	00759217	1	SCREW 1/2 LG END
8	8393	2	BEARING RING
9	00775384	2	BOLT P1.75 M12 X 60
10	00772648	1	NUT,HEX TOP LOCK-M12 X 1.75
	00775355	1	OUTER SHIELD HALF
	00775356	1	INNER SHIELD HALF
	00767954	1	YOKE.Q.D.KIT - PLASTIC (PART OF ITEM 1)

DRIVELINE - PULL TYPE 1000 RPM S/N 13755 -CURRENT Rev 08-07

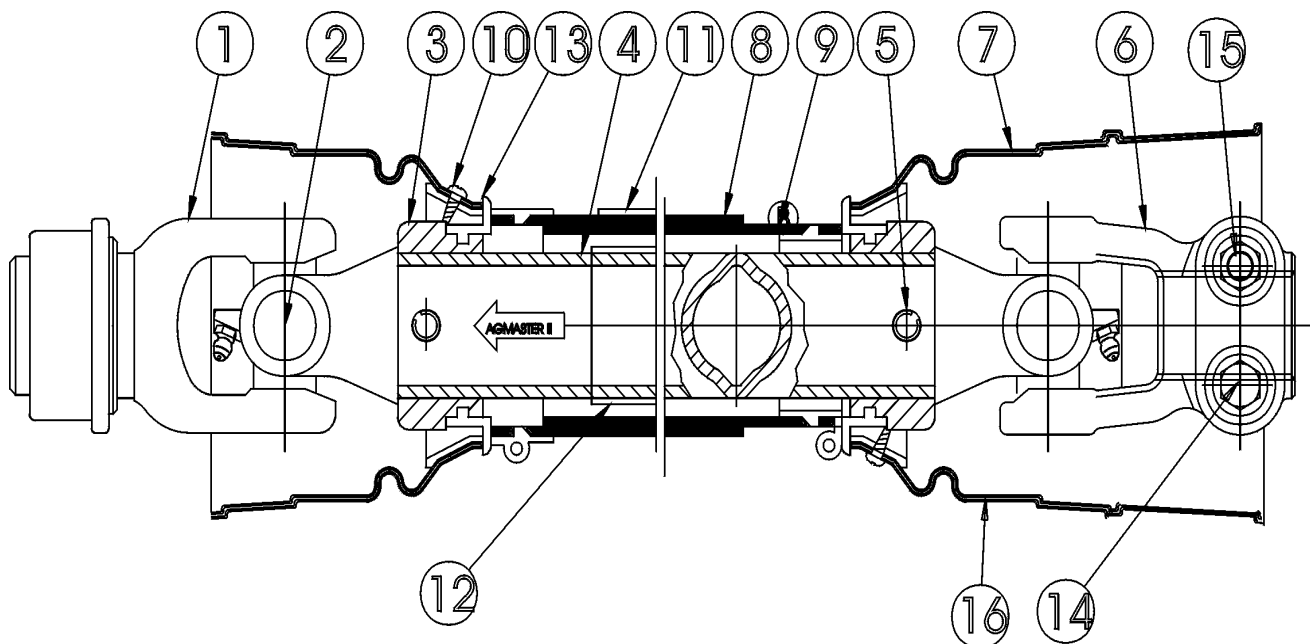

ITEM	PART NO.	QTY.	DESCRIPTION
	00775352	-	1000 RPM DRIVELINE ASSEMBLY
1	00761762	1	YOKE 1-3/8-21 SPL PAINT BLACK
2	00189700	2	CROSSKIT 35R U -JOINT KIT 35R
3	00775318	2	YOKE INBOARD 2A
4	00775354	1	OUTER PROFILE 2A
5	00756934	2	PIN,ROLL 10 X 80
6	00775316	1	YOKE 1-3/4-20 SPL I.C.
7	-----	2	SHIELD CONE
8	-----	1	OUTER SHIELD TUBE OVL.
9	-----	1	INNER SHIELD TUBE RND.
10	00759217	2	SCREW 1/2 LG #8 PAN
11	00756005	1	DECAL-ROTATING DRIVELINE
12	00756004	1	DECAL-SHIELD MISSING
13	8393	2	BEARING RING
14	00775384	2	BOLT P1.75 M12 X 60
15	00775327	2	NUT P1.75 M12
16	-----	1	SHIELD CONE EXTENDED
	00767953	1	YOKE.Q.D.KIT - METAL (PART OF ITEM 1)
	00775355	1	OUTER SHIELD HALF INCLUDES ITEMS 7,8,10,11, & 13
	00775356	1	INNER SHIELD HALF INCLUDES ITEMS 7,9,10, & 13


DRIVELINE ASSEMBLY -CV S/N 13640 -CURRENT

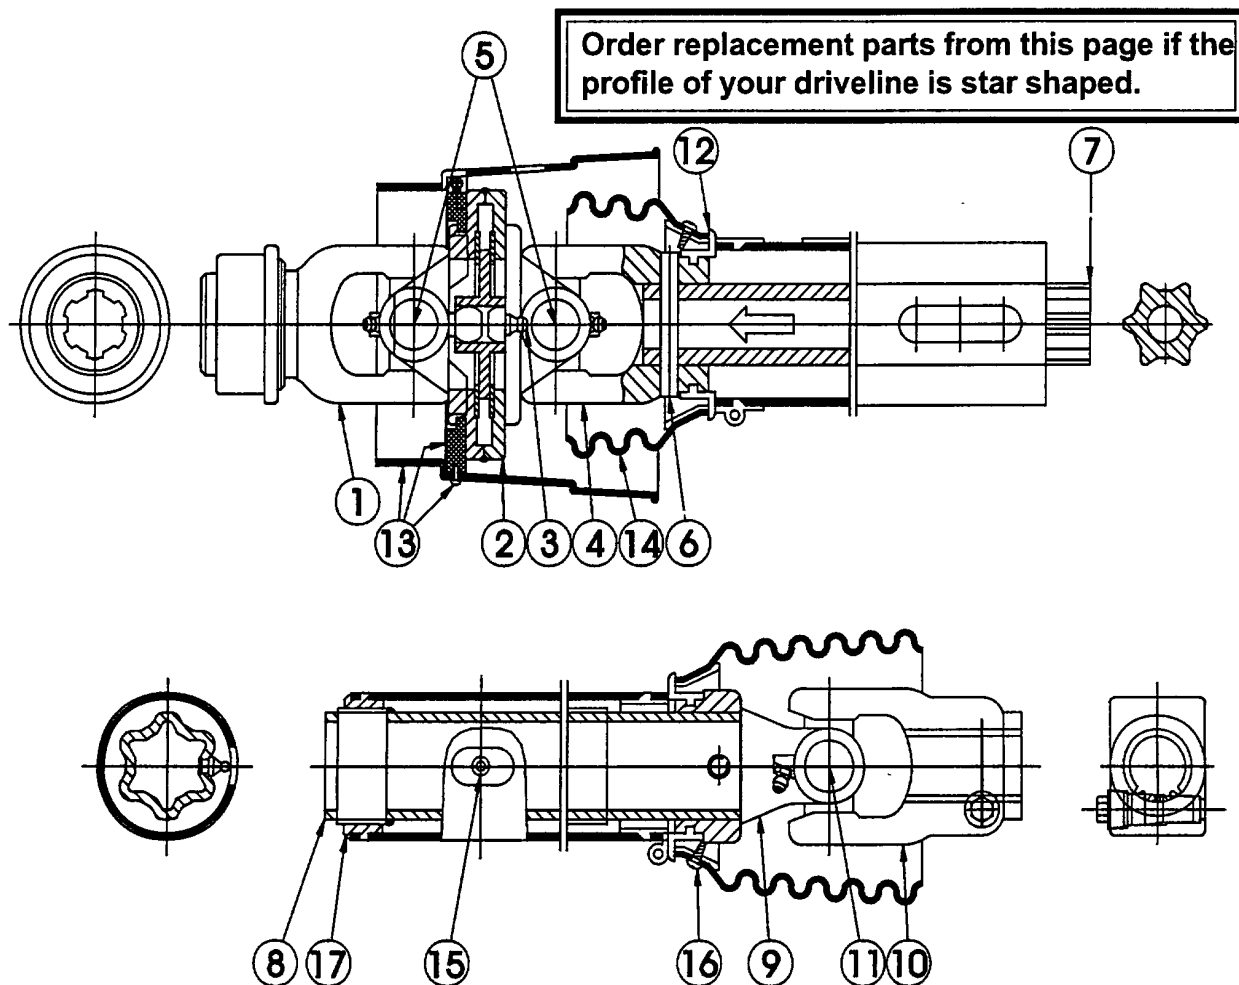

DRIVELINE ASSEMBLY -CV S/N 13640 -CURRENT


ITEM	PART NO.	QTY.	DESCRIPTION
	00775301	-	DRIVELINE 540 CV SR5 60 1/3/8-
	00775306	-	DRIVELINE 1000 CV CAT 4
	00775304	1	SHIELD 540 & 1000 RPM OUTER HALF
	00775305	1	SHIELD 540 & 1000 RPM INNER HALF
1	8380	1	YOKE - 1-3/8 6 SPLING COMP.
	00775379	1	YOKE 1-3/8-21 SPL ASG
2	8381	1	DOUBLE YOKE
3	8382	1	FITTING,GREASE M8 X 1
4	00775309	1	YOKE INBOARD S4
5	8396	2	CROSS & BEARING KIT
6	0921000333	2	PIN-SPRING 10 X 80
7	00775380	1	INNER PROFILE S4GA
8	00775381	1	SLEEVE & PROFILE W.A.
9	00775310	1	YOKE INBOARD S5
10	00775311	1	YOKE 1-3/4-20 SPL CC
11	8388	1	CROSS & BEARING KIT
12	8393	1	BEARING RING
13	00763951	1	DRIVELINE- CV CONE BRG ASY
14	8949	1	SHIELD CONE
15	1416601	1	ZERK
16	00759217	8	SCREW 1/2 LG END
17	8974	1	SUPPORT BEARING
18	00775303	1	DRIVELINE 540 & 1000 RPM IMPLEMENT HALF CV
19	00775302	1	DRIVELINE 540 RPM TRACTOR HALF CV
19	00775307	1	DRIVELINE 1000 RPM TRACTOR HALF CV
	00767953	1	YOKE.Q.D.KIT - METAL
	00774208	1	LOCK ASY CC YOKE
	00775307	1	DRIVELINE TRACTOR HALF CV

JACKSHAFT ASSEMBLY - CV Rev 03-05

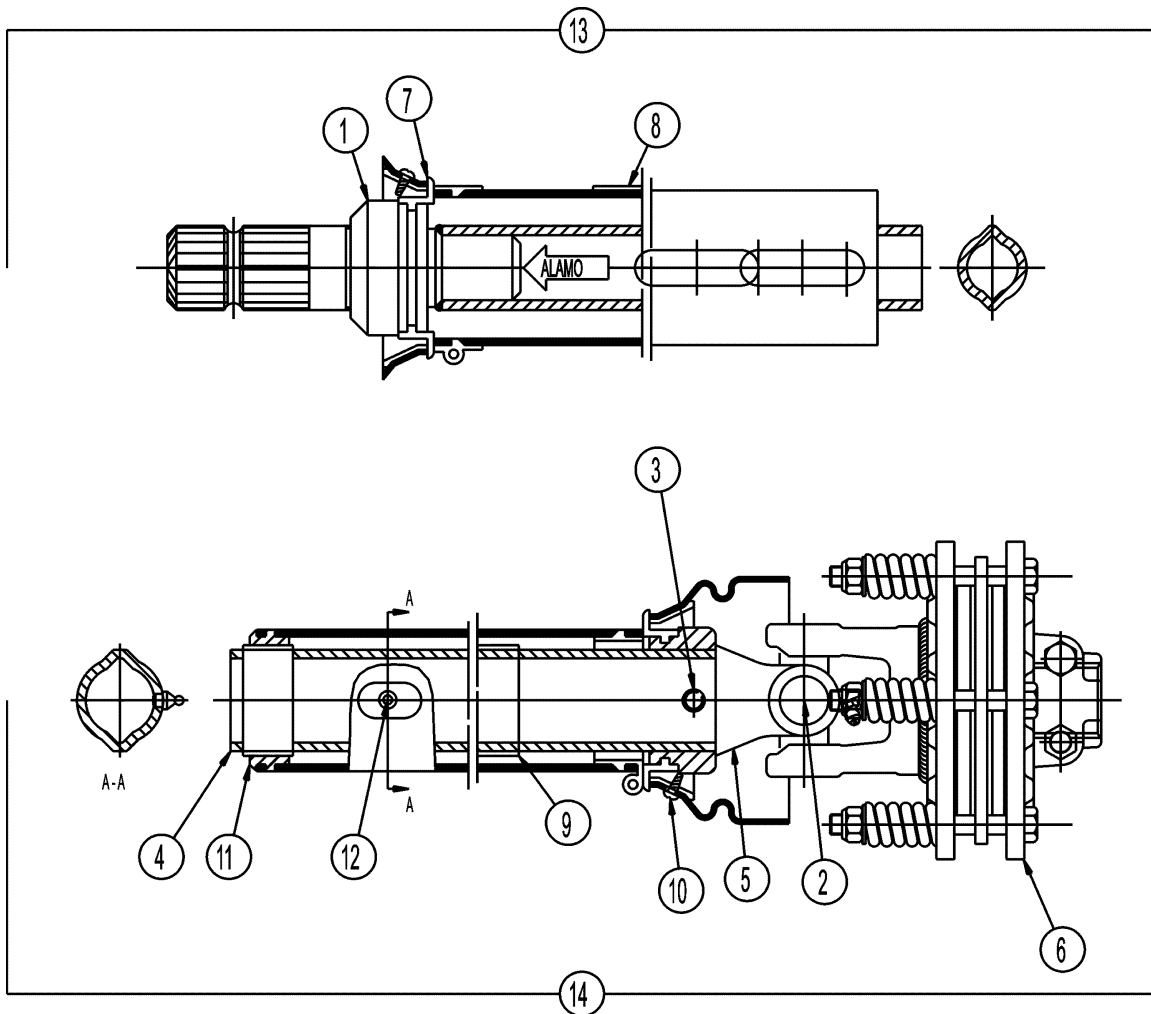


ITEM	PART NO.	QTY.	DESCRIPTION
	00776419	-	D/L 1-3/4-20 CAT4 1000 RPM
1	00776420	1	STUB AND PROFILE W.A.
2	00189700	1	CROSSKIT
3	00756934	1	PIN,ROLL 10 X 80
4	00776421	1	PROFILE AND SLEEVE W.A.
5	00775318	1	YOKE INBOARD 2A
6	00775331	1	CLUTCH FRICTION
7	8393	2	BEARING RING
8	00756005	1	DECAL-ROTATING DRIVE LINE
9	00756004	1	DECAL-SHIELD MISSING
10	00759217	2	SCREW 1/2 LG END
11	8974	1	SUPPORT BEARING
12	1416601	1	ZERK
13	00776422	1	OUTER SHIELD HALF
14	00776423	1	INNER SHIELD HALF

GEARBOX MOUNT PLATE S/N 10001 - CURRENT

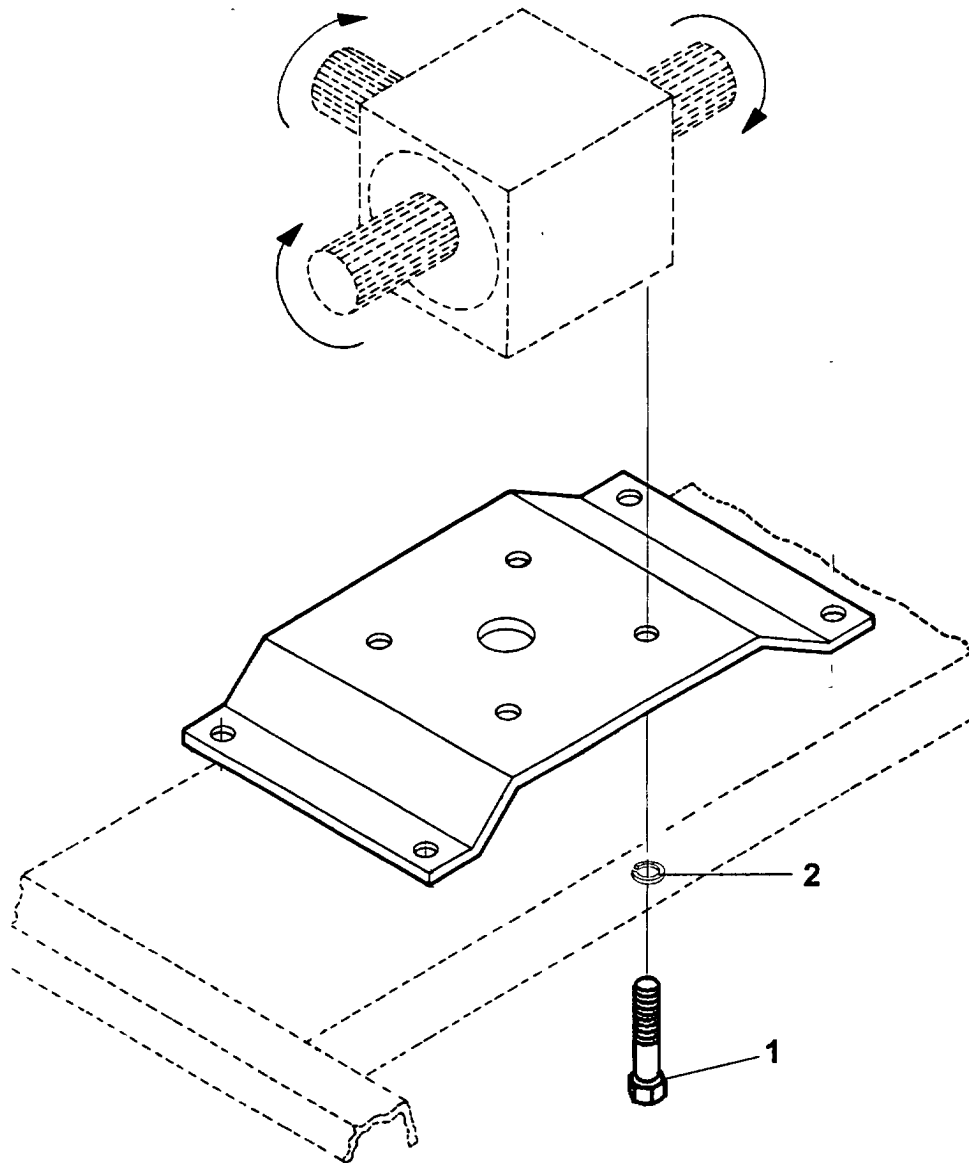


ITEM	PART NO.	QTY.	DESCRIPTION
1	02030700	4	HHCS 1/2-13UNC 1-1/4 PL5
2	00001300	4	LOCKWASHER 1/2 PL STD

GEARBOX DIVIDER - 540 RPM S/N 10001 - CURRENT

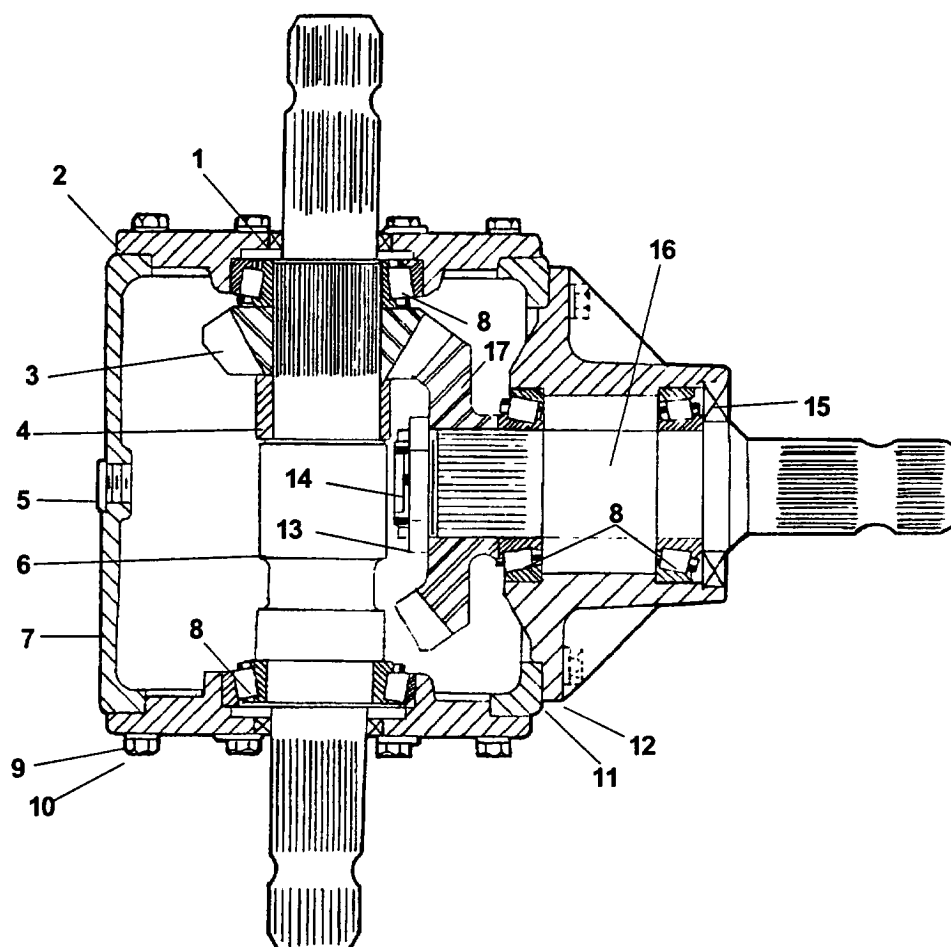

ITEM	PART NO.	QTY.	DESCRIPTION
	00760880	-	GEARBOX-2275-T90 1:1.46 RATIO
1	00758653	2	SEAL, INPUT SHAFT
2	00762516	2	CAP-THRU
3	00758693	1	GEAR,13 TOOTH
4	00758657	1	SPACER,INPUT SHAFT
5	00762517	2	PLUG,SOCKET HEAD 18M-P1.5
6	00762518	1	SHAFT-THRU
7	00762519	1	HOUSING
8	00769938	4	BEARING,TIMKEN 30210
9	00755954	24	LOCKWASHER M10
10	00758659	24	HHCS, M10X1.5X32
11	00748531	AR	SHIM KIT
12	00762520	1	CAP-HUB INPUT
13	00762121	1	NUT,HEX THIN SLOTTED
14	00026200	1	PIN-COTTER 5/32 X 1-1/2
15	00762521	1	SEAL,95.1MMX58MMX10MM DBL LIP
16	00762522	1	SHAFT-INPUT
17	00758694	1	GEAR,19 TOOTH
18	00762114	1	PLUG,VENT W/WASHER 18M-P1.5
	00765444	3 1/ 4qts	QT,ALAMO 000 GEAR LUBE

GEARBOX DIVIDER -1000RPM S/N 10001 -CURRENT

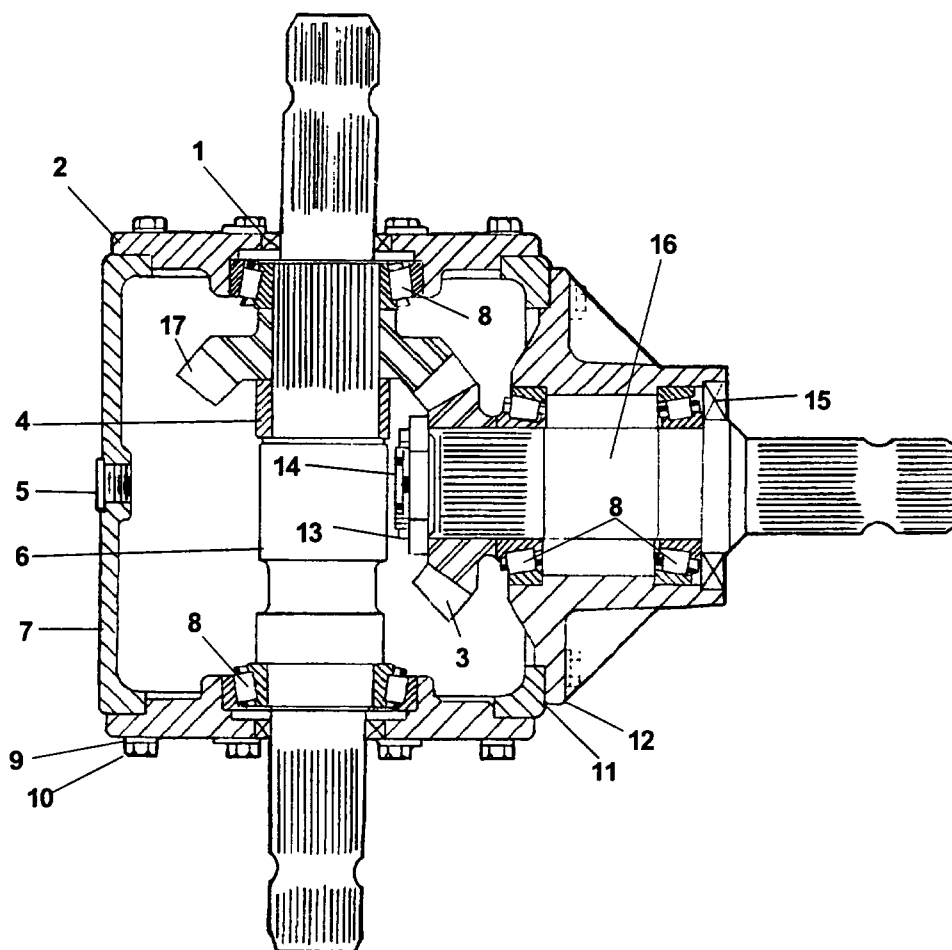


ITEM	PART NO.	QTY.	DESCRIPTION
	00758996	-	GEARBOX WW75 T-90 1.21:1 RATIO
1	00758653	2	SEAL, INPUT SHAFT
2	00762516	2	CAP-THRU
3	00759487	1	GEAR, 14 TOOTH
4	00758657	1	SPACER, INPUT SHAFT
5	00762517	2	PLUG, SOCKET HEAD 18M-P1.5
6	00762518	1	SHAFT-THRU
7	00762519	1	HOUSING
8	00769938	4	BEARING, TIMKEN 30210
9	00755954	24	LOCKWASHER M10
10	00758659	24	HHCS, M10X1.5X32
11	00748531	AR	SHIM KIT
12	00762520	1	CAP-HUB INPUT
13	00762121	1	NUT, HEX THIN SLOTTED
14	00026200	1	PIN-COTTER 5/32 X 1-1/2
15	00762521	1	SEAL, 95.1MMX58MMX10MM DBL LIP
16	00762522	1	SHAFT-INPUT
17	00759488	1	GEAR, 17 TOOTH
18	00762114	1	PLUG, VENT W/WASHER 18M-P1.5
	00765444	3 1/4qts	QT, ALAMO 000 GEAR LUBE

GEARBOX ASSEMBLY -OUTER S/N 11840 - CURRENT

P/N 00769918

EFFECTIVE


S/N 11840 and after

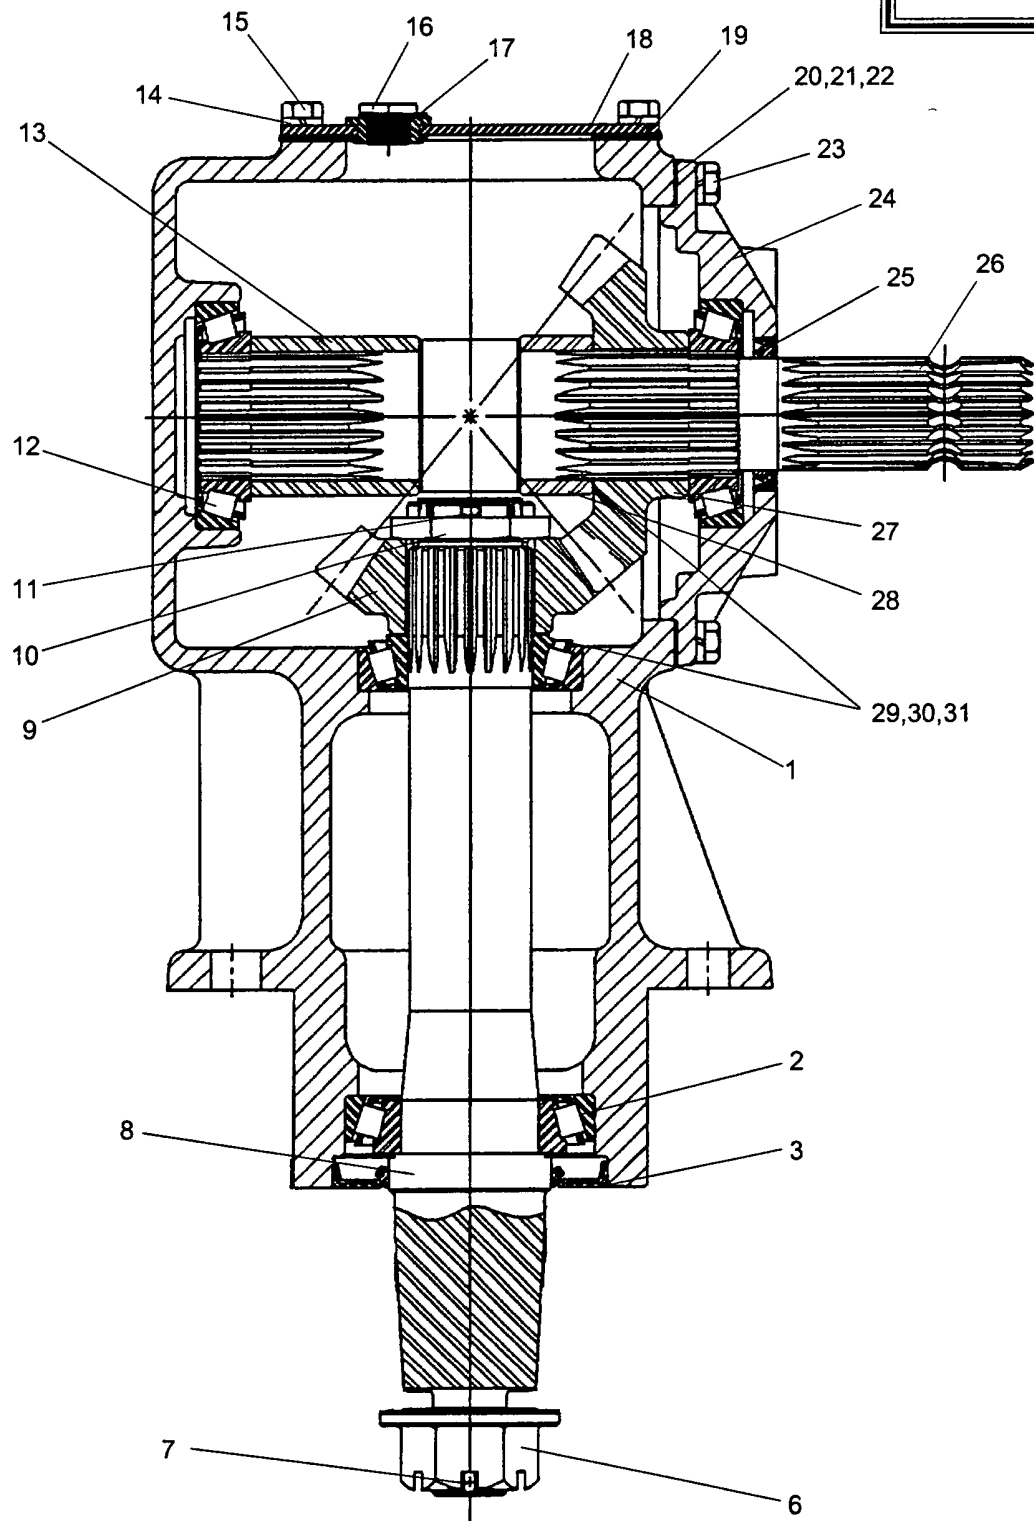

GEARBOX ASSEMBLY -OUTER S/N 11840 - CURRENT


ITEM	PART NO.	QTY.	DESCRIPTION
	00769918	-	GEARBOX
1	00770724	1	SUPER-AG-100 HOUSING
2	00770725	1	BEARING ASY.
3	00770726	1	OIL SEAL
6	00771226	1	NUT,M30-P2.00 FLANGED SLOTTED
7	01422502	1	PIN-COTTER 3/16 X 2-1/2
8	00770728	1	SUPER-AG-100 VERTICAL OUTPUT
9	00770738	1	PINION 14 TOOTH
10	00762121	1	NUT,HEX THIN SLOTTED
11	00606000	1	PIN-COTTER 3/16 X 2
12	00769938	3	BEARING,TIMKEN 30210
13	00770731	1	SUPER-AG-100 INPUT SHAFT SPCR
14	00766083	10	WASHER 0 10 UNI 6592
15	00754338	4	HEXB METRIC 10-P1.5 - 20MM
16	00762517	2	PLUG,SOCKET HEAD 18M-P1.5
17	00769321	3	WASHER,SEALING,17.8MX22MX3M
18	00770732	1	INSPECTION COVER
19	00770733	1	INSPECTION COVER GASKET
20	00758646	VAR	SHIM, ADJUSTMENT .004 OR .1M
21	00758647	VAR	SHIM, ADJUSTMENT .010 OR .25M
22	00758648	VAR	SHIM ,ADJUSTMENT 0.5
23	00765905	8	HEXB METRIC 10-P1.5 - 30MM
24	00770734	1	INPUT CAP
25	00758653	1	SEAL, INPUT SHAFT
26	00770735	1	SUPER-AG-100 INPUT SHAFT
27	00770739	1	GEAR 17 TOOTH
28	00758657	1	SPACER,INPUT SHAFT
29	00758667	VAR	SHIM .012
30	-----	VAR	SHIM (0.40)
31	00758668	VAR	SHIM,0.020
32	00762114	1	PLUG,VENT W/WASHER 18M-P1.5
33	-----	2	I.D. TAG RIVET
34	-----	1	I.D. TAG
	00765444	4qts	QT,ALAMO 000 GEAR LUBE

SHIELD ASSY S/N 14595 - CURRENT & SMV ASSY S/N 10001 -CURRENT

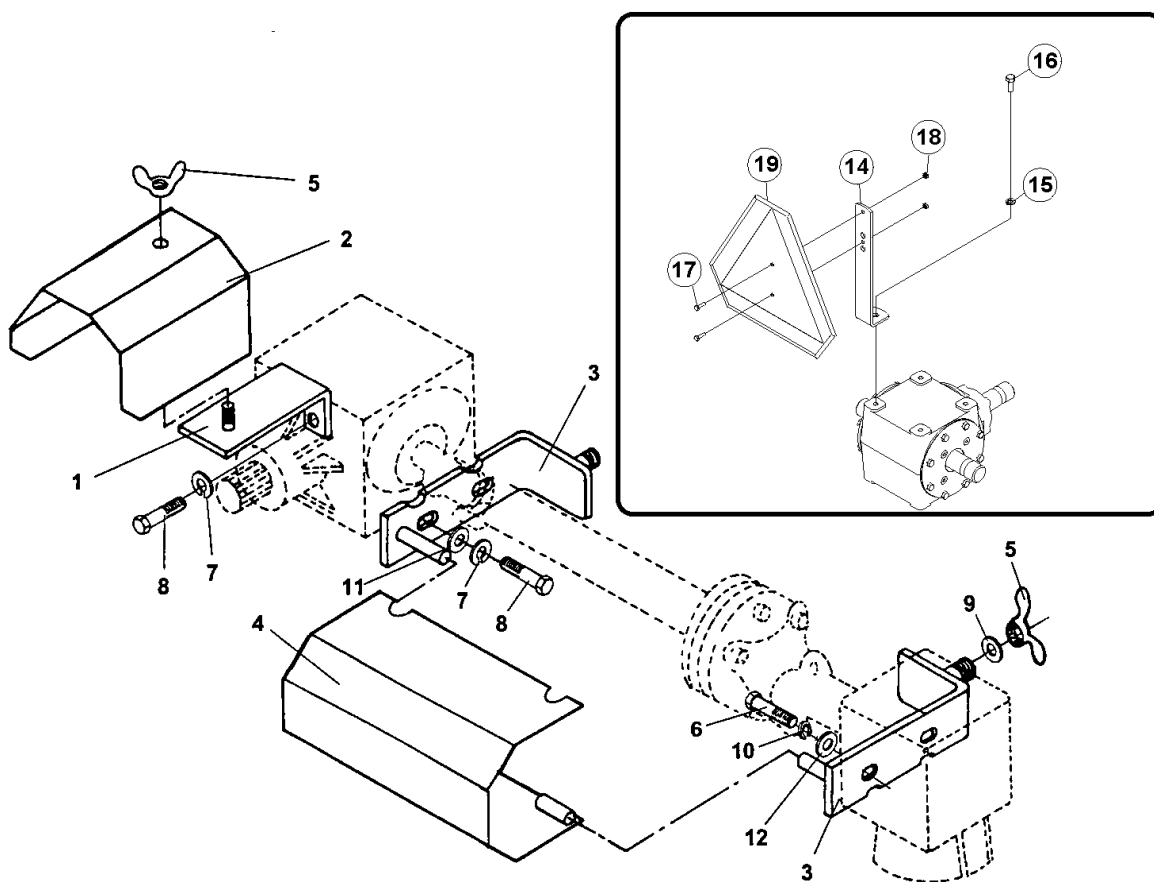


ITEM	PART NO.	QTY.	DESCRIPTION
1	00761405	1	WLDMT-BRKT
2	00760909	1	SHIELD
3	00763236	4	WLDMT SHIELD BRACKET RH
4	00762113	2	WLDMT-SHIELD
5	5F8130	5	1/2 NC WING NUT
6	02958784	4	BOLT METRIC 8-P1.25- 20MM PL5
7	00012101	6	LOCKWASHER 3/8 PL HVY
8	00758659	6	HHCS, M10X1.5X32
9	00002700	4	FLATWASHER 1/2 PL STD
10	00011700	4	LOCKWASHER 5/16 PL STD
11	00011100	4	FLATWASHER 3/8 PL STD
12	00023500	4	FLATWASHER,5/16,TYPE AW,ZP
14	00778576	1	SMV BRACKET
15	00001300	1	LOCKWASHER 1/2 PL STD
16	02030700	1	HHCS 1/2-13UNC 1-1/4 PL5
17	10058000	2	HHCS 1/4 NC 1 PL5
18	02959924	2	NUT TOPLOCK 1/4 NC PLB
19	03200347	1	EMBLEM, SMV

SKID SHOE ASSEMBLY S/N 10001 -CURRENT

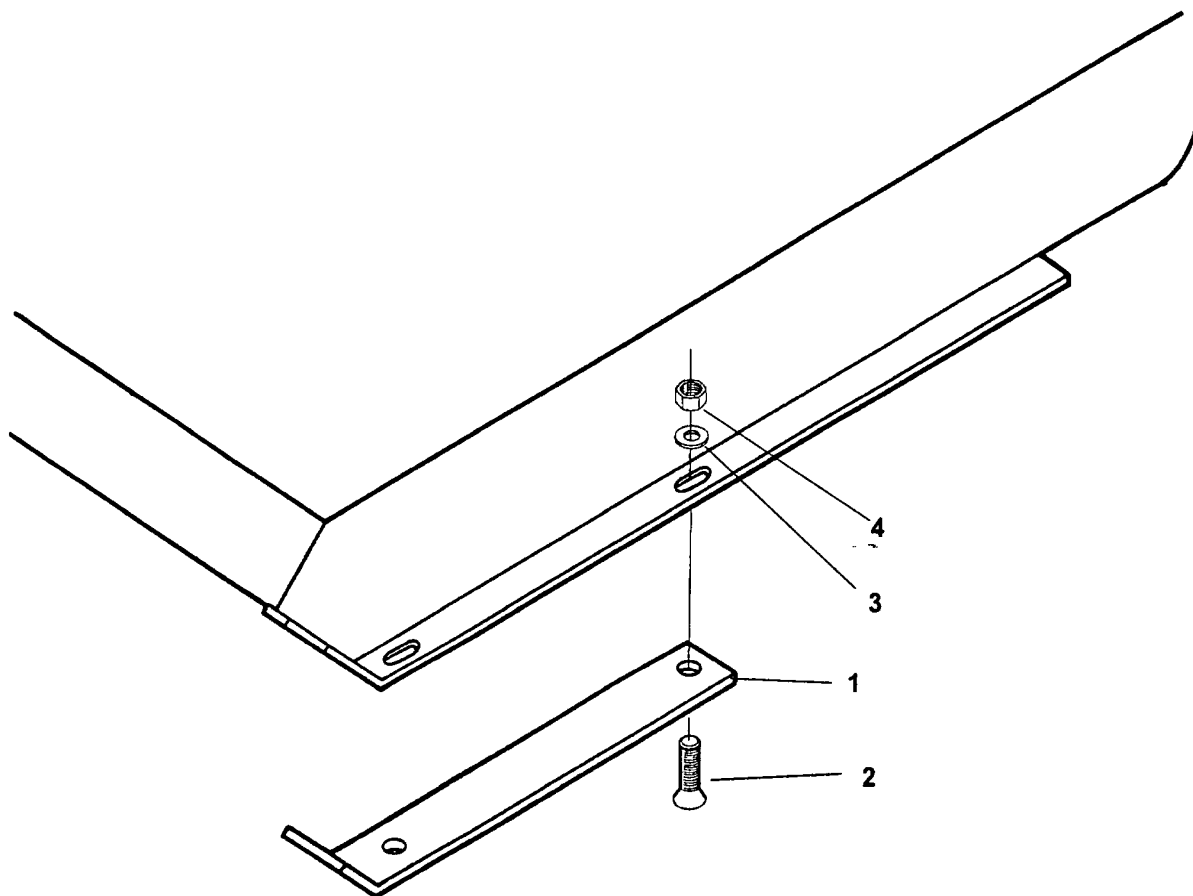


ITEM	PART NO.	QTY.	DESCRIPTION
1	0622000001	2	SKID SHOE
2	2A361612	6	PLW-BLT 3/8 X 1 1/2
3	00011100	6	FLATWASHER 3/8 PL STD
4	00015800	6	NUT, TOPLOCK 3/8NC PLB

SLIP CLUTCH ASSEMBLY S/N 13640 - CURRENT

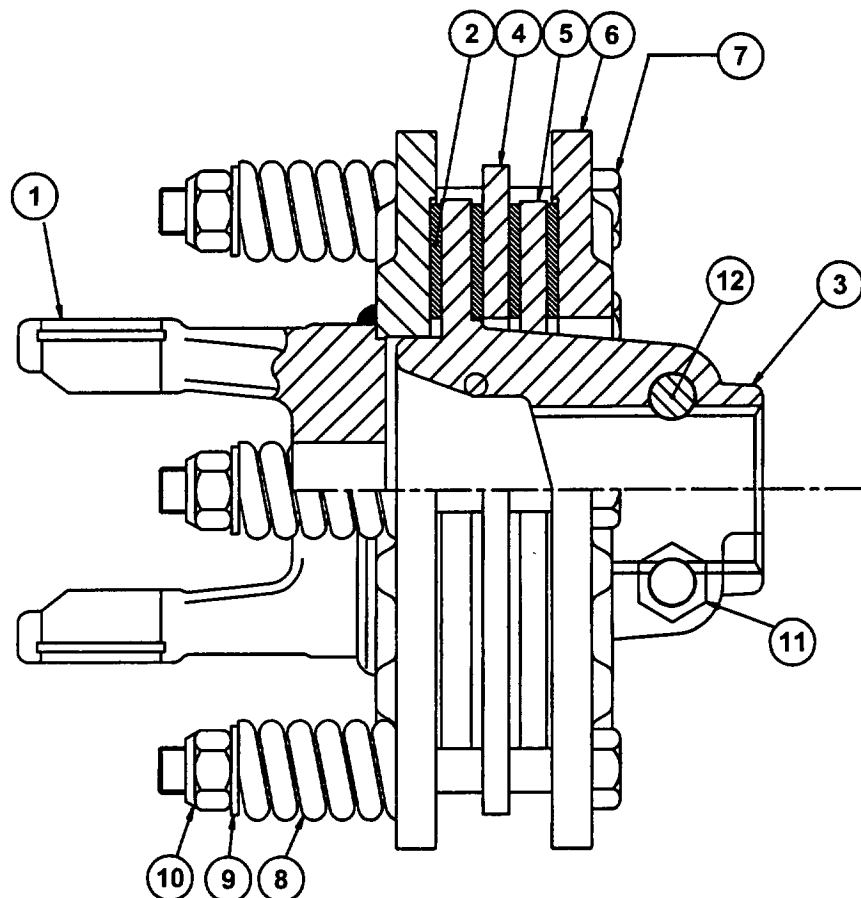


**USED ON DRIVELINES
P/N 00775385 & P/N 00775390
JACKSHAFT P/N 00775357**

ITEM	PART NO.	QTY.	DESCRIPTION
	00775331	-	CLUTCH FRICTION
1	00775333	1	FLANGE YOKE
2	00754202	4	RING, CLUTCH LINING
3	00775334	1	HUB 1-3/4-20 SPLINE
4	00775335	1	DRIVE PLATE
5	00775336	1	DRIVE PLATE
6	00775337	1	THRUST PLATE
7	00775338	6	BOLT HEX M12 X P1.25 X 115M
8	00775339	6	COMPRESSION SPRING
9	00754566	6	LOCKWASHER, 12MM
10	00755881	6	NUT METRIC TLM 12MM-P1.25 PL5
11	700322C	2	M14X2 HEX LOCKNUT NYLON INSERT
12	0615700	2	HHCS M14-P2.0 X 70MM PL8.8

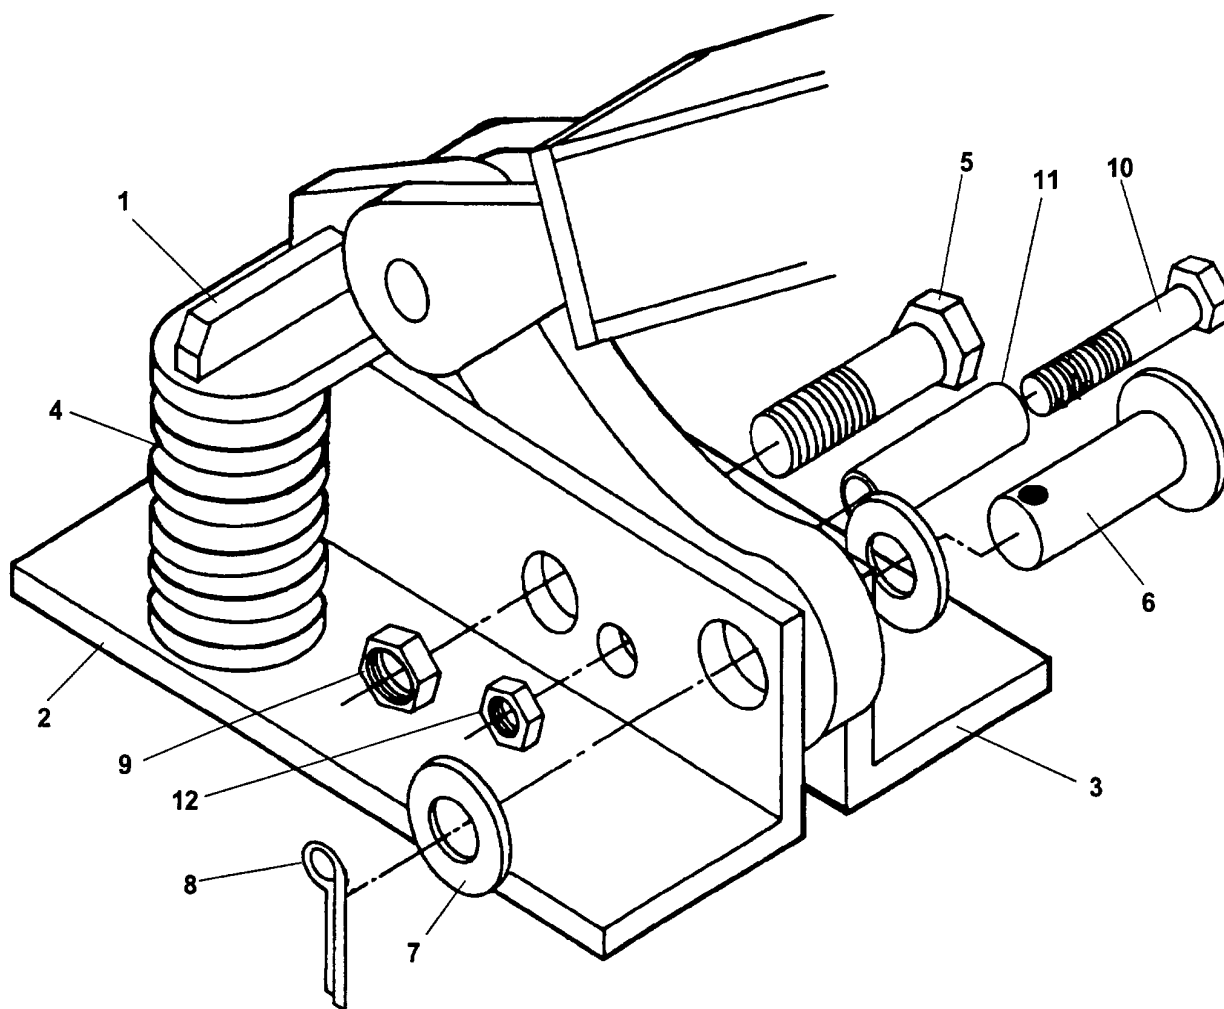


ITEM	PART NO.	QTY.	DESCRIPTION
	00759191	-	ASSY, SPRING SHOCK (BLACK)
1	00759190	1	WLDMT SPRING SHOCK SR120
2	00759189	1	WLDMT ANGLE BKT L/H SR120
3	00759188	1	WLDMT ANGLE BKT R/H SR120
4	371063A	2	SPRING
5	02782100	1	HHCS 1 NC 2-3/4 PL8 SPECIAL
6	8354	1	PIN-HYD. CYLINDER
7	02822500	1	FLATWASHER 1 PL STD
8	00606000	1	PIN-COTTER 3/16 X 2
9	02030300	1	NUT TOPLOCK 1 NC PLB
10	00750952	1	HEXB, 5/8NC X 2-1/2, ZP, GRD5
11	00761199	1	TUBE-SPACER
12	00695100	1	NUT, TOPLOCK 5/8 NC PLB

TAILWHEEL ASSY -LIFT MODEL S/N 10001 -CURRENT

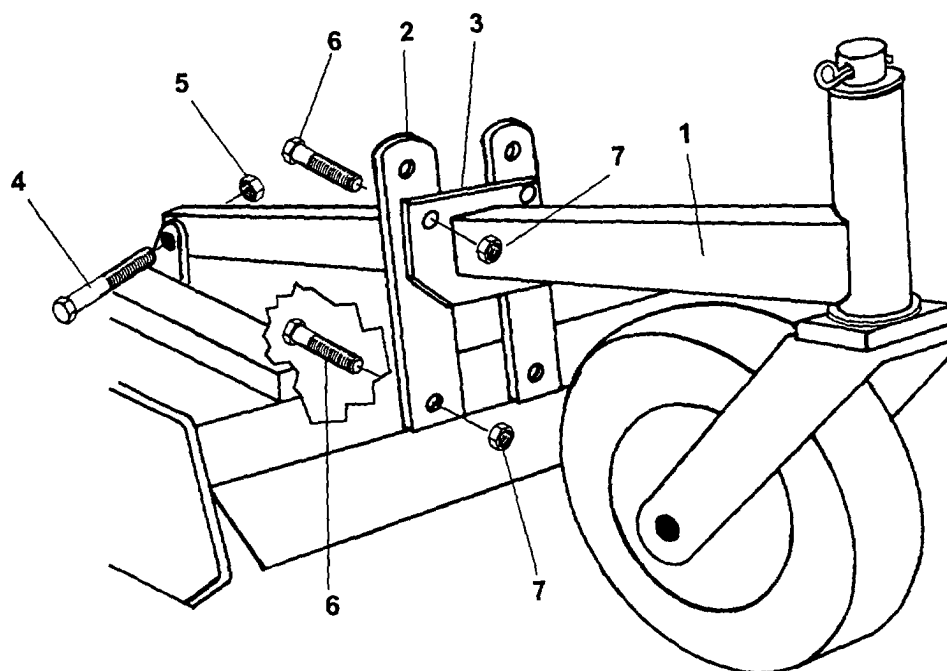


ITEM	PART NO.	QTY.	DESCRIPTION
1	00762127	2	WLDMT-TW BEAM
2	4744	2	WLDMT-BEAM SUPPORT
3	4745	2	BRKT-POSITIONING TAIL WHEEL
4	02845800	2	HEXB,5/8 NC X 4-1/2 GRD5 ZP
5	00695100	2	NUT,TOPLOCK 5/8 NC PLB
6	00748823	8	HHCS 1/2-13UNC 1-1/2 PL5
7	00001800	8	LOCKNUT TLM 1/2 NC PLB

TIRES S/N 10001 -CURRENT

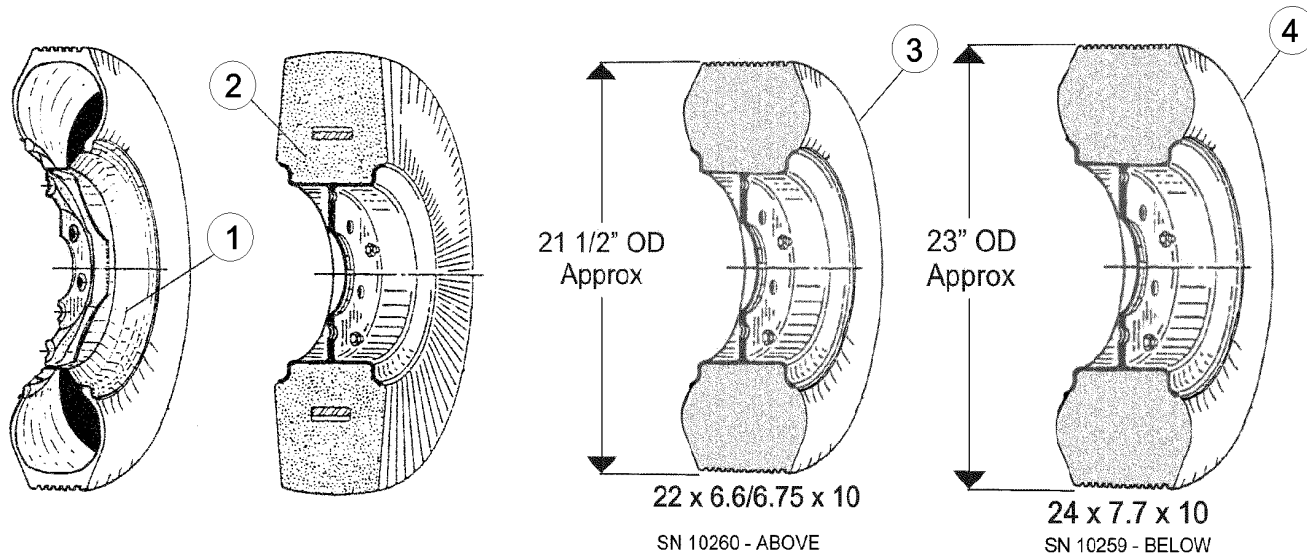

ITEM	PART NO.	QTY.	DESCRIPTION
1	00008700	-	WHEEL, RIM ONLY
2	00025200	-	NOTAT TIRE & WHEEL
3	00766911	-	USE FOR PARTS ONLY
4	00766911A	-	ASY,AIRCRAFT TIRE & WHEEL
	00771461	-	TIRE,AIRPLANE USED
	00749698	-	ASSY, WHL/IMPLEMENT TIRE


TONGUE & JACKSHAFT ASSY -CV DRIVELINE OPTION S/N 10001 -CURRENT

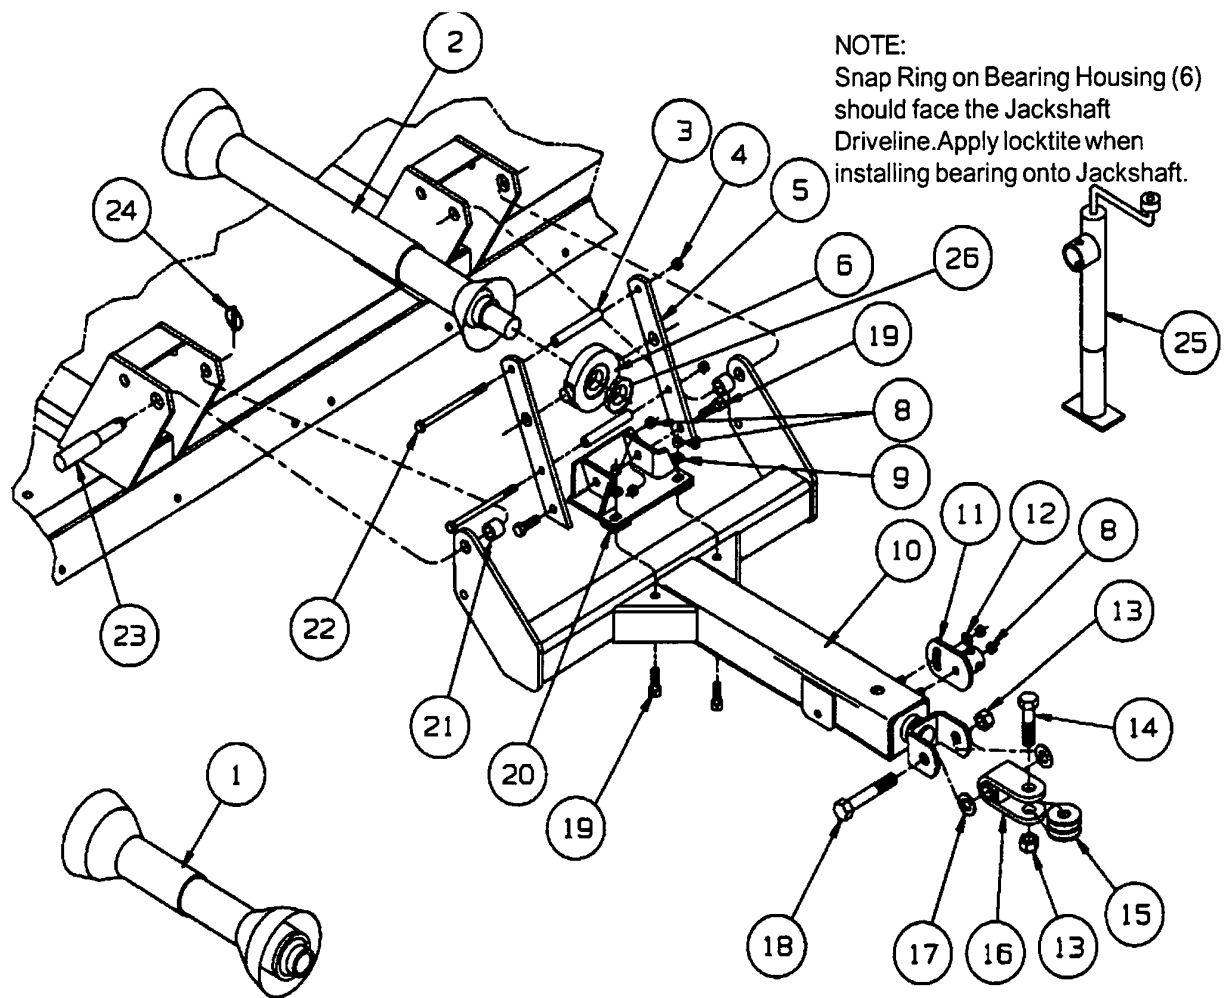

TONGUE & JACKSHAFT ASSY -CV DRIVELINE OPTION S/N 10001 -CURRENT


ITEM	PART NO.	QTY.	DESCRIPTION
1	00775351	1	DRIVELINE MAIN 540 EQ ANGLE
	00775352	1	DRIVELINE 1000 MAIN EQ ANGLE
2	00775357	1	DRIVELINE JACKSHAFT
3	00764457	2	PIPE-SPACER
4	00001800	2	LOCKNUT TLM 1/2 NC PLB
5	00773059	2	FLAT, JACKSHAFT SUPPORT
6	00773088	1	BEARING, ASY, W/HOUSING
	00764417	1	BEARING,BALL 1-1.77IDX3.346OD
7	02675800	2	HHCS 5/8-11UNC 1-1/2 PL5
8	00695100	6	NUT, TOPLOCK 5/8 NC PLB
9	00756077	2	WASHER, 5/8 HARDENED
10	00765810	1	WLDMT TONGUE
11	00760941	1	WLDMT-JACK TUBE MOUNT
12	00001400	1	FLATWASHER 5/8 PL STD
13	02030300	2	NUT TOPLOCK 1 NC PLB
14	02712500	1	HHCS 1 NC 4 PL8 SPECIAL
15	00759275	3	WASHER-HITCH CLEVIS
16	00748807	1	CLEVIS WELDMENT
17	00757478	2	SPRING WASHER
18	00755305	1	BOLT 1-8UNC-6 LG GRD 8
19	02845500	2	HEXB 5/8 NC 2 PL5
20	00773068	1	WLDMT, JACKSHAFT MOUNT
21	00761890	2	BUSHING 1.5 ODX1.14IDX1-3/16LG
22	00751582	2	HEXB 1/2 NC 7-1/2 5 PL
23	00758146	2	PIN-TONGUE PIVOT
24	2196	2	CLIP (LYNCH PIN), 13/32 DIA.
25	00756655	1	PARKING JACK 5000# CAPACITY
26	00768652	1	TUBE, SPACER

TONGUE ASSEMBLY S/N 10001 -CURRENT

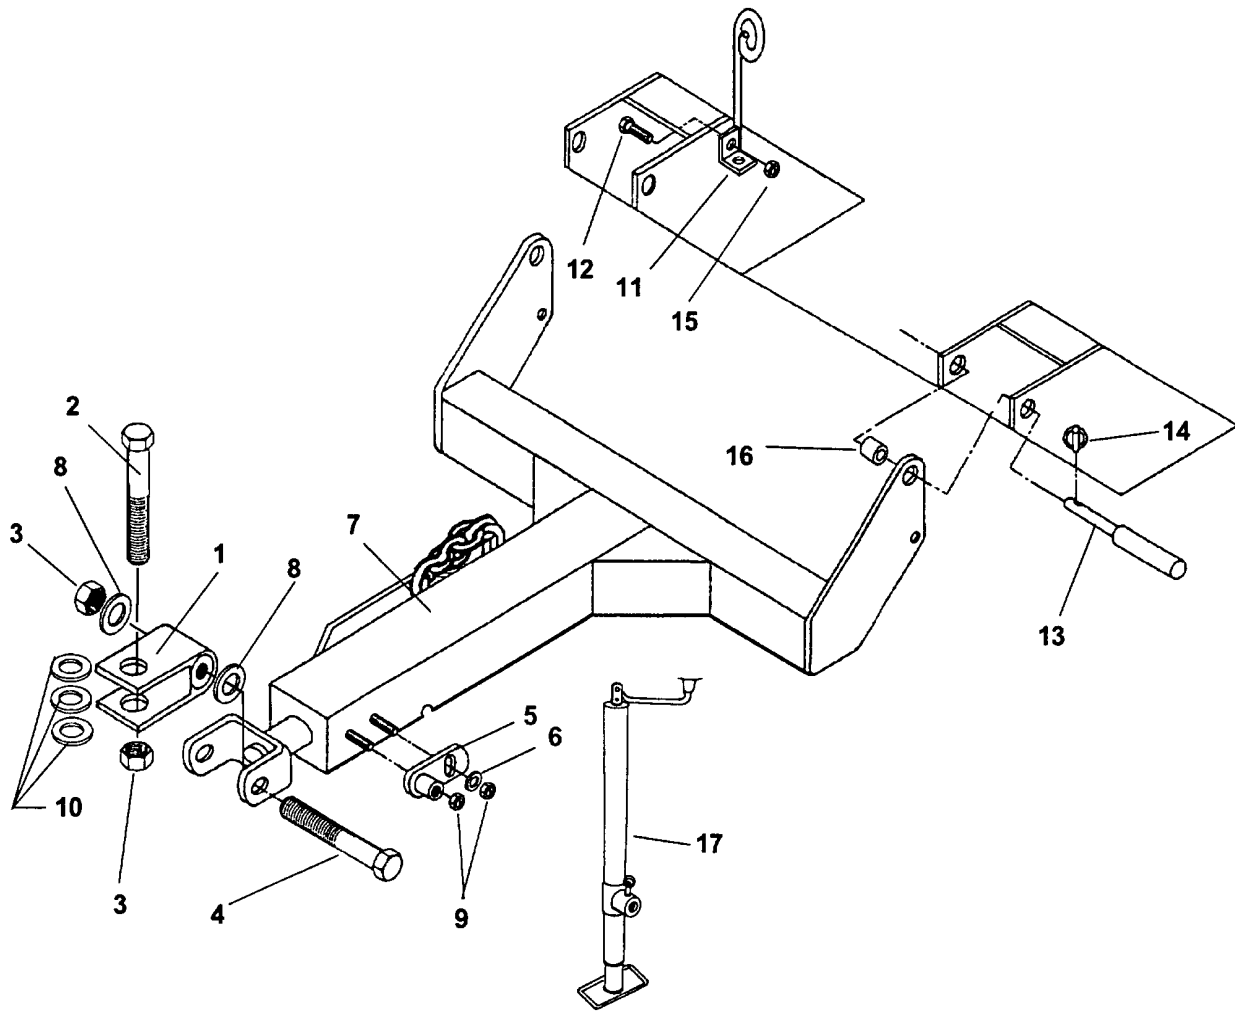


ITEM	PART NO.	QTY.	DESCRIPTION
1	00748807	1	CLEVIS WELDMENT
2	02712500	1	HHCS 1 NC 4 PL8 SPECIAL
3	02030300	2	NUT TOPLOCK 1 NC PLB
4	00755305	1	BOLT 1-8UNC-6 LG GRD 8
5	00760941	1	WLDMT-JACK TUBE MOUNT
6	00001400	1	FLATWASHER 5/8 PL STD
7	00765810	1	TONGUE WELDMENT (S/N 10655 AND AFTER)
8	00757478	2	SPRING WASHER
9	00695100	2	NUT, TOPLOCK 5/8 NC PLB
10	00759275	3	WASHER-HITCH CLEVIS
11	8343	1	HOSE HOLDER ASSY
12	00748823	1	HHCS 1/2-13UNC 1-1/2 PL5
13	00758146	2	PIN-TONGUE PIVOT
14	2196	2	CLIP (LYNCH PIN), 13/32 DIA.
15	00001800	1	LOCKNUT TLM 1/2 NC PLB
16	00761890	2	BUSHING 1.5 ODX1.14IDX1-3/16LG
17	00772391	1	JACK PARKING 3000LB SIDEWIND

WHEEL HUB ASSEMBLY -S/N 15245 -CURRENT Rev 08-07

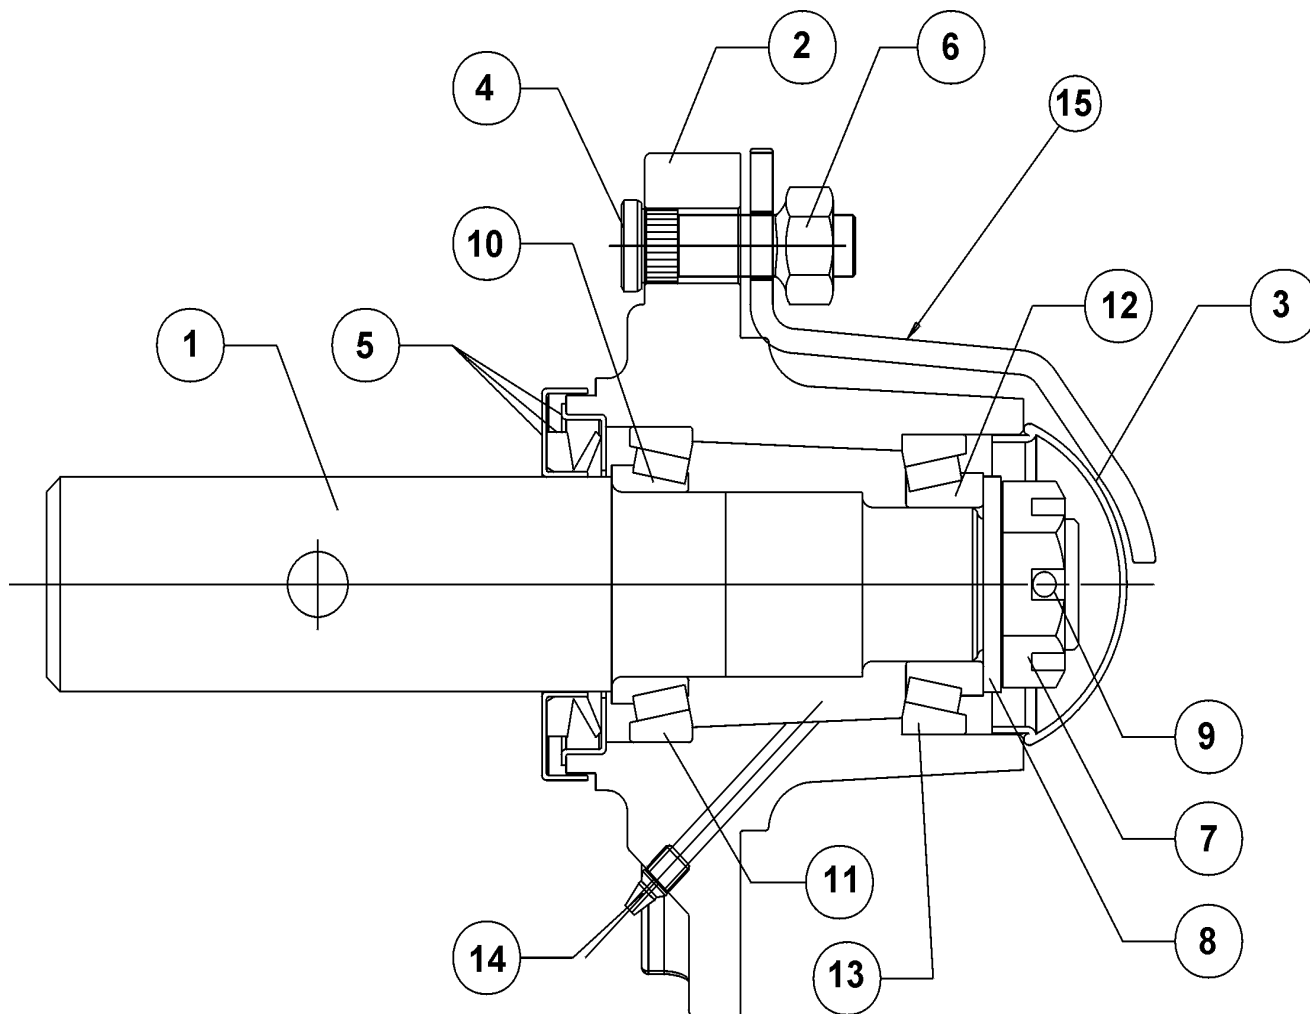

ITEM	PART NO.	QTY.	DESCRIPTION
	00775616A	1	HUB & SPINDLE ASSY
1	00774821	1	SPINDLE SINGLE WHEEL
2	00779456	1	ASY,WHEEL HUB - W/CUPS & STUDS
3	00756492	1	DUST CAP
4	13198	5	BOLT, HUB
5	00778108	1	SEAL PROTECTOR
6	00756014	5	ROTOR
7	00756490	1	NUT SLOTTED THIN 1 NF PLC
8	00756493	1	WASHER
9	00026200	1	PIN,COTTER 5/32 X 1-1/2
10	00750434	1	BEARING CONE INSIDE
11	00756576	1	BEARING CUP OUTSIDE
12	0371242102	1	CONE, BEARING
13	00756577	1	BEARING CUP INSIDE
14	00003500	1	ZERK FITTING 1/8 STRAIGHT
15	00779455	1	RETAINER,HUB CAP
	00779456	-	ASY,WHEEL HUB - W/CUPS & STUDS

WHEEL HUB ASSEMBLY S/N 15244 -BELOW Rev 08-07

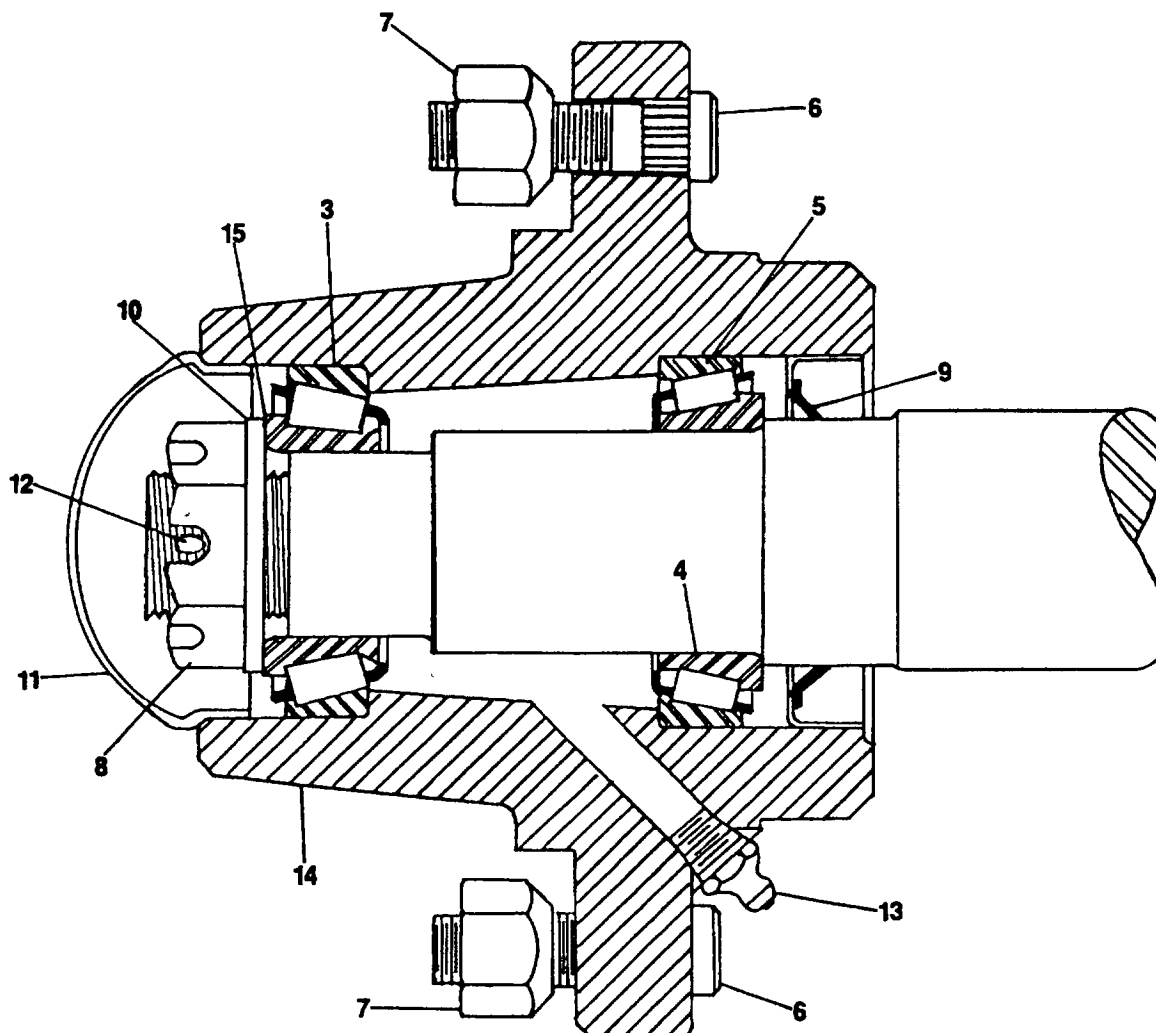

ITEM	PART NO.	QTY.	DESCRIPTION
3	00756576	1	BEARING CUP OUTSIDE
4	00750434	1	BEARING CONE INSIDE
5	00756577	1	BEARING CUP INSIDE
6	00752177	5	BOLT, STUD 1/2-20 NF X 1-7/8
	13198		BOLT, HUB
7	00750614	5	NUT 1/2-20NF 90DEG.CONE LUG PL
8	00756490	1	NUT SLOTTED THIN 1 NF PLC
9	02957044	1	OIL SEAL HEAVY DUTY - TK-15
10	00756493	1	WASHER
11	00756492	1	DUST CAP
12	00000400	1	PIN-COTTER 1/8 X 1-1/2 PLATED
13	00003500	1	ZERK FITTING 1/8 STRAIGHT
14	00756489	1	HUB W/ CUPS & STUBS
15	0371242102	1	BEARING CONE
16	00756001	ref	SPINDLE
	00756489	ref	HUB W/ CUPS & STUBS
	00756528	ref	WHEEL HUB ACCESS. KIT

SERVIS-RHINO

LIMITED WARRANTY

1. LIMITED WARRANTIES

- 1.01. Servis-Rhino warrants for one year from the purchase date to the original non-commercial, governmental, or municipal purchaser ("Purchaser") and warrants for six months to the original commercial or industrial purchaser ("Purchaser") that the goods purchased are free from defects in material or workmanship.
- 1.02. Manufacturer will replace for the Purchaser any part or parts found, upon examination at one of its factories, to be defective under normal use and service due to defects in material or workmanship.
- 1.03. This limited warranty does not apply to any part of the goods which has been subjected to improper or abnormal use, negligence, alteration, modification, or accident, damaged due to lack of maintenance or use of wrong fuel, oil, or lubricants, or which has served its normal life. This limited warranty does not apply to any part of any internal combustion engine, or expendable items such as blades, shields, guards, or pneumatic tires except as specifically found in your Operator's Manual.
- 1.04. Except as provided herein, no employee, agent, Dealer, or other person is authorized to give any warranties of any nature on behalf of Manufacturer.

2. REMEDIES AND PROCEDURES.

- 2.01. This limited warranty is not effective unless the Purchaser returns the Registration and Warranty Form to Manufacturer within 30 days of purchase.
- 2.02. Purchaser claims must be made in writing to the Authorized Dealer ("Dealer") from whom Purchaser purchased the goods or an approved Authorized Dealer ("Dealer") within 30 days after Purchaser learns of the facts on which the claim is based.
- 2.03. Purchaser is responsible for returning the goods in question to the Dealer.
- 2.04. If after examining the goods and/or parts in question, Manufacturer finds them to be defective under normal use and service due to defects in material or workmanship, Manufacturer will:
 - (a) Repair or replace the defective goods or part(s) or
 - (b) Reimburse Purchaser for the cost of the part(s) and reasonable labor charges (as determined by Manufacturer) if Purchaser paid for the repair and/or replacement prior to the final determination of applicability of the warranty by Manufacturer.The choice of remedy shall belong to Manufacturer.
- 2.05. Purchaser is responsible for any labor charges exceeding a reasonable amount as determined by Manufacturer and for returning the goods to the Dealer, whether or not the claim is approved. Purchaser is responsible for the transportation cost for the goods or part(s) from the Dealer to the designated factory.

3. LIMITATION OF LIABILITY.

- 3.01. MANUFACTURER DISCLAIMS ANY EXPRESS (EXCEPT AS SET FORTH HEREIN) AND IMPLIED WARRANTIES WITH RESPECT TO THE GOODS INCLUDING, BUT NOT LIMITED TO, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
- 3.02. MANUFACTURER MAKES NO WARRANTY AS TO THE DESIGN, CAPABILITY, CAPACITY, OR SUITABILITY FOR USE OF THE GOODS.
- 3.03. EXCEPT AS PROVIDED HEREIN, MANUFACTURER SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO PURCHASER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS, OR DAMAGE CAUSED OR ALLEGED TO BE CAUSED DIRECTLY OR INDIRECTLY BY THE GOODS INCLUDING, BUT NOT LIMITED TO, ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES RESULTING FROM THE USE OR OPERATION OF THE GOODS OR ANY BREACH OF THIS WARRANTY. NOTWITHSTANDING THE ABOVE LIMITATIONS AND WARRANTIES, MANUFACTURER'S LIABILITY HEREUNDER FOR DAMAGES INCURRED BY PURCHASER OR OTHERS SHALL NOT EXCEED THE PRICE OF THE GOODS.
- 3.04. NO ACTION ARISING OUT OF ANY CLAIMED BREACH OF THIS WARRANTY OR TRANSACTIONS UNDER THIS WARRANTY MAY BE BROUGHT MORE THAN TWO (2) YEARS AFTER THE CAUSE OF ACTION HAS OCCURRED.

4. MISCELLANEOUS.

- 4.01. Proper Venue for any lawsuits arising from or related to this limited warranty shall be only in Guadalupe County, Texas.
- 4.02. Manufacturer may waive compliance with any of the terms of this limited warranty, but no waiver of any terms shall be deemed to be a waiver of any other term.
- 4.03. If any provision of this limited warranty shall violate any applicable law and is held to be unenforceable, then the invalidity of such provision shall not invalidate any other provisions herein.
- 4.04. Applicable law may provide rights and benefits to purchaser in addition to those provided herein.

KEEP FOR YOUR RECORDS

ATTENTION: Purchaser should fill in the blanks below for his reference when buying repair parts and/or for proper machine identification when applying for warranty.

Servis-Rhino Implement Model _____ Serial Number _____

Date Purchased _____ Dealer _____

ATTENTION:
READ YOUR OPERATOR'S MANUAL

RHINO®
1020 S. Sangamon Ave.
Gibson City, IL 60936
800-446-5158
Email: parts@servis-rhino.com





TO THE OWNER/OPERATOR/DEALER

To keep your implement running efficiently and safely, read your manual thoroughly and follow these directions and the Safety Messages in this Manual. The Table of Contents clearly identifies each section where you can easily find the information you need.

The OCCUPATIONAL SAFETY AND HEALTH ACT (1928.51 Subpart C) makes these minimum safety requirements of tractor operators:

REQUIRED OF THE OWNER:

1. Provide a Roll-Over-Protective Structure that meets the requirements of this Standard; and
2. Provide Seatbelts that meet the requirements of this paragraph of this Standard and SAE J4C; and
3. Ensure that each employee uses such Seatbelt while the tractor is moving; and
4. Ensure that each employee tightens the Seatbelt sufficiently to confine the employee to the protected area provided by the ROPS.

REQUIRED OF THE OPERATOR

1. Securely fasten seatbelt if the tractor has a ROPS.
2. Where possible, avoid operating the tractor near ditches, embankments, and holes.
3. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.
4. Stay off slopes too steep for safe operation.
5. Watch where you are going - especially at row ends, on roads, and around trees.
6. Do not permit others to ride.
7. Operate the tractor smoothly - no jerky turns, starts, or stops.
8. Hitch only to the drawbar and hitch points recommended by the tractor manufacturer.
9. When the tractor is stopped, set brakes securely and use park lock, if available.



Keep children away from danger all day, every day...



Equip tractors with rollover protection (ROPS) and keep all machinery guards in place...



Please work, drive, play and live each day with care and concern for your safety and that of your family and fellow citizens.

