


Keep With Loader Operator's Manual

QUICK ATTACH UNIVERSAL MOUNTING PLATE

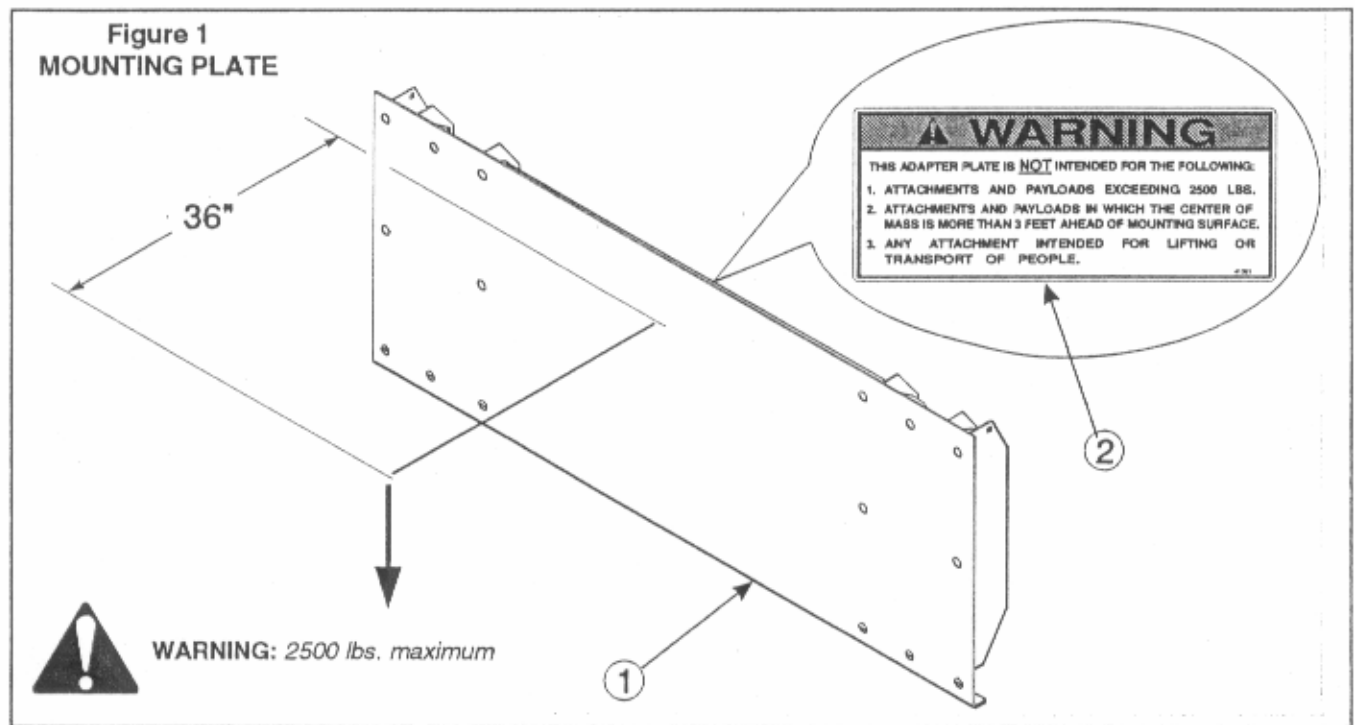

No tools are needed to attach mounting plate to loader. Loader must be equipped with quick attach device 9843739 (2-5950).

INSTALLING MOUNTING PLATE

Mounting plate is designed to be bolted or welded to an existing attachment. Attach mounting plate to existing attachment in upright position.

PARTS LIST - MOUNTING PLATE

ITEM	PART NO.	DESCRIPTION	QTY.
1		MOUNTING PLATE (Not Sold as a Repair Part)	1
2	41591	DECAL, Warning	1



WARNING: Do not exceed 2500 lbs. 36 inches in front of mounting plate.

ATTACHING QUICK ATTACH MOUNTING PLATE



WARNING: To avoid injury during attachment or detachment, do not allow bystanders within 10 feet of loader or attachment.

1. Locate tractor and attachment with mounting plate on firm level ground.
2. Extend bucket cylinders slightly. Making sure loader quick attach bar is parallel to mounting plate, drive tractor ahead very slowly toward mounting plate until quick attach bar touches attachment just below attachment channel.
3. Use lift cylinder to raise loader while activating bucket cylinder to curl quick attach device to engage channel of mounting plate. Moving tractor forward will assist engagement. When quick attach bar has fully engaged mounting plate channel continue to retract bucket cylinder until latch pins engage mounting plate securely.
4. Activate lift cylinder to raise mounting plate and extend bucket cylinders to tilt mounting plate at a slight downward angle, so quick attach device is visible. Visually inspect attachment mechanism to verify that pins are engaged in ears on back of mounting plate.

NOTE: If mounting plate is not securely latched, follow instructions for detaching mounting plate and repeat above procedure.

DETACHING QUICK ATTACH MOUNTING PLATE



WARNING: To avoid injury during attachment or detachment, do not allow bystanders within 10 feet of loader or attachment.

IMPORTANT: Loader must be equipped with a bucket, bale spear or similar attachment to dismount loader from tractor.

1. Locate tractor and mounting plate attachment on firm level ground.
2. Lower boom arms until mounting plate rests level two to three inches off ground. Shut off tractor engine and set tractor brakes.
3. Disengage latch pins by lifting handles and rotating them so pins rest on blocks provided on mounting plate ears.
4. Start tractor engine, release tractor brakes and extend bucket cylinders while slowly backing tractor away from attachment, until quick attach bar disengages from mounting plate.

INSTALLATION INSTRUCTIONS