715759001 72" 715759006 72"

715760001 84"


715760006 84"

ASSEMBLY MANUAL

Keep With Loader Operator's Manual

2-6296 2-7023 2-6297 2-7024

PIN ON MATERIAL BUCKETS

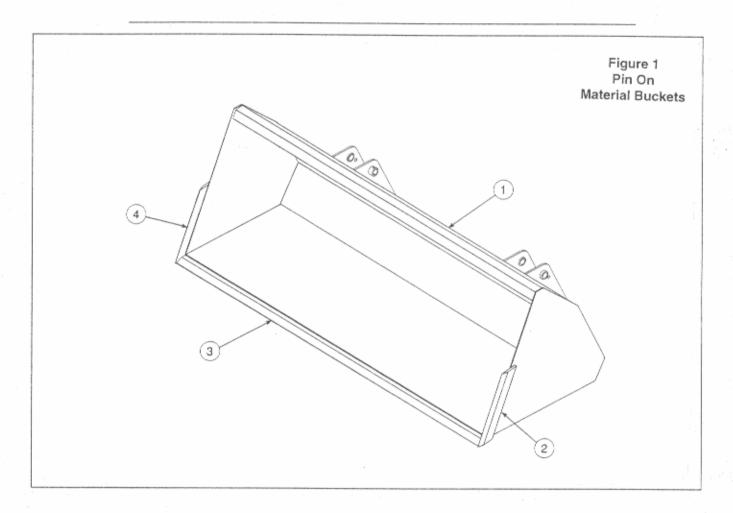

PARTS LIST - PIN ON BUCKETS

ITEM	PARTINO.	DESCRIPTION QTY.		
1	*	BUCKET, 72" (Includes cutting edges)	la la	1
	*	BUCKET, 84" Heavy Duty (Includes cutting edges)		1.
2	32817-1	CUTTING EDGE, Left Side (72")		1
	28086-1	CUTTING EDGE, Left Side (84")		1
3	22543-4	CUTTING EDGE, Bottom (72")		1.1
	22543-3	CUTTING EDGE, Bottom (84")		1.
4	32817-2	CUTTING EDGE, Right Side (72")	1 2	1
	28086-2	CUTTING EDGE, Right Side (84")		1 .

^{*} Not sold as repair part.

ATTACHING PIN ON BUCKET

Attach bucket to lift boom frame and bucket cylinders using pins, cap screws and lock nuts supplied with loader.



WARNING: Always wear safety glasses when installing or removing buckets.



WARNING: Always use a drift and hammer made of non-sparking material (a shot filled mallet is recommended) to install or remove pins. A steel hammer or drift could generate flying metal fragments and result in injury. Always wear safety glasses when using a hammer to remove or install pins.

BUCKET	BUCKET WIDTH		STRUCK CAPACITY	
MODEL	Inches	Centimeters	Cubic Yards	Cubic Meters
72*	72	183	.60	.46
84° H.D.	84	213	.93	.72

INSTALLATION INSTRUCTIONS