

SSL QUICK ATTACH PALLET FORK FOR SKID STEER LOADERS

IMPORTANT: Skid steer loader must be equipped with compatible quick-attach device to attach pallet fork.




WARNING: Do not weld to pallet fork tines. Tines are high-carbon steel and may break under load after being welded, causing serious injury or death.

If an attachment is attached to skid steer, remove attachment before attaching pallet fork.

ASSEMBLING PALLET FORK

1. Use overhead hoist to lift pallet fork frame (1) and tines (2) and place them upright on a smooth level surface. Continue to support pallet fork frame (1) with overhead hoist until tines (2) are installed.
2. Lift latch pin lever on one pallet fork tine assembly (2) to hold pin in unlatched position. Slide tine assembly (2) onto pallet fork frame at center, slide tine to desired width setting, and lower latch pin lever to secure tine in place at one of the tine center detent locations provided.

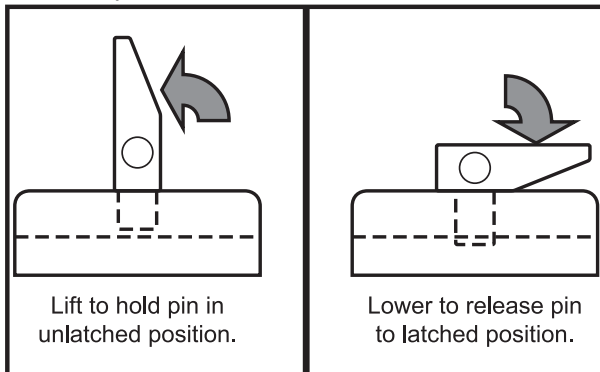

NOTE: Upper tine attachment plate of pallet fork frame (1) has detent slots spaced at 4" centers to allow tines (2) to be spaced at center widths of 10", 18", 26", 34" or 42". When installing pallet fork tines (2), adjust them to equal distances from center of pallet fork frame (1) to avoid unbalanced loading.


3. Repeat previous instruction above to attach remaining pallet fork tine (2) to other side of pallet fork frame (1).

ATTACHING PALLET FORK TO LOADER




WARNING: To avoid injury during installation of pallet fork, do not allow bystanders within 10 feet of skid steer or pallet fork.


1. Locate skid steer loader on level ground. Lower boom to rest on ground. Place skid steer in neutral, set parking brake, shut off engine. Look at quick attach device to make sure quick attach handles are in unlatched (raised) position.

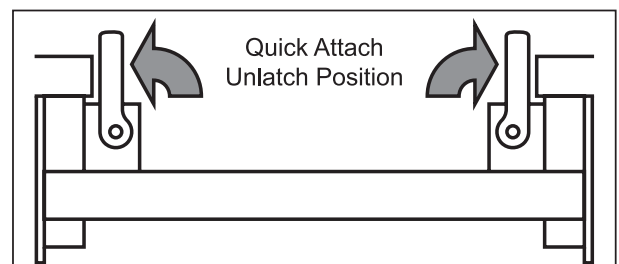

2. Start skid steer engine, extend tilt cylinders slightly, while raising boom to provide three to five inches of ground clearance. Drive ahead slowly toward back of pallet fork, aligning quick attach bracket with pallet fork attaching pads.
3. While driving skid steer ahead slowly to maintain contact with pallet fork, activate lift cylinders to raise boom until quick attach engages under lip of pallet fork attachment pad.
4. Activate tilt cylinders to retract, continuing to roll pallet fork back completely.
5. Place skid steer in neutral, set parking brake, shut off engine. Move quick attach handles to latch (down) position.

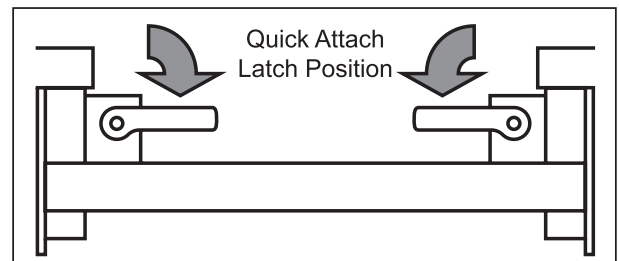

6. Start skid steer engine and activate lift cylinders to raise pallet fork two or three feet off ground and extend tilt cylinders at a slight downward angle, so quick attach latch pins are visible. Visually inspect attachment mechanism to verify that pins are engaged through latch plate at bottom of pallet fork attachment pads.

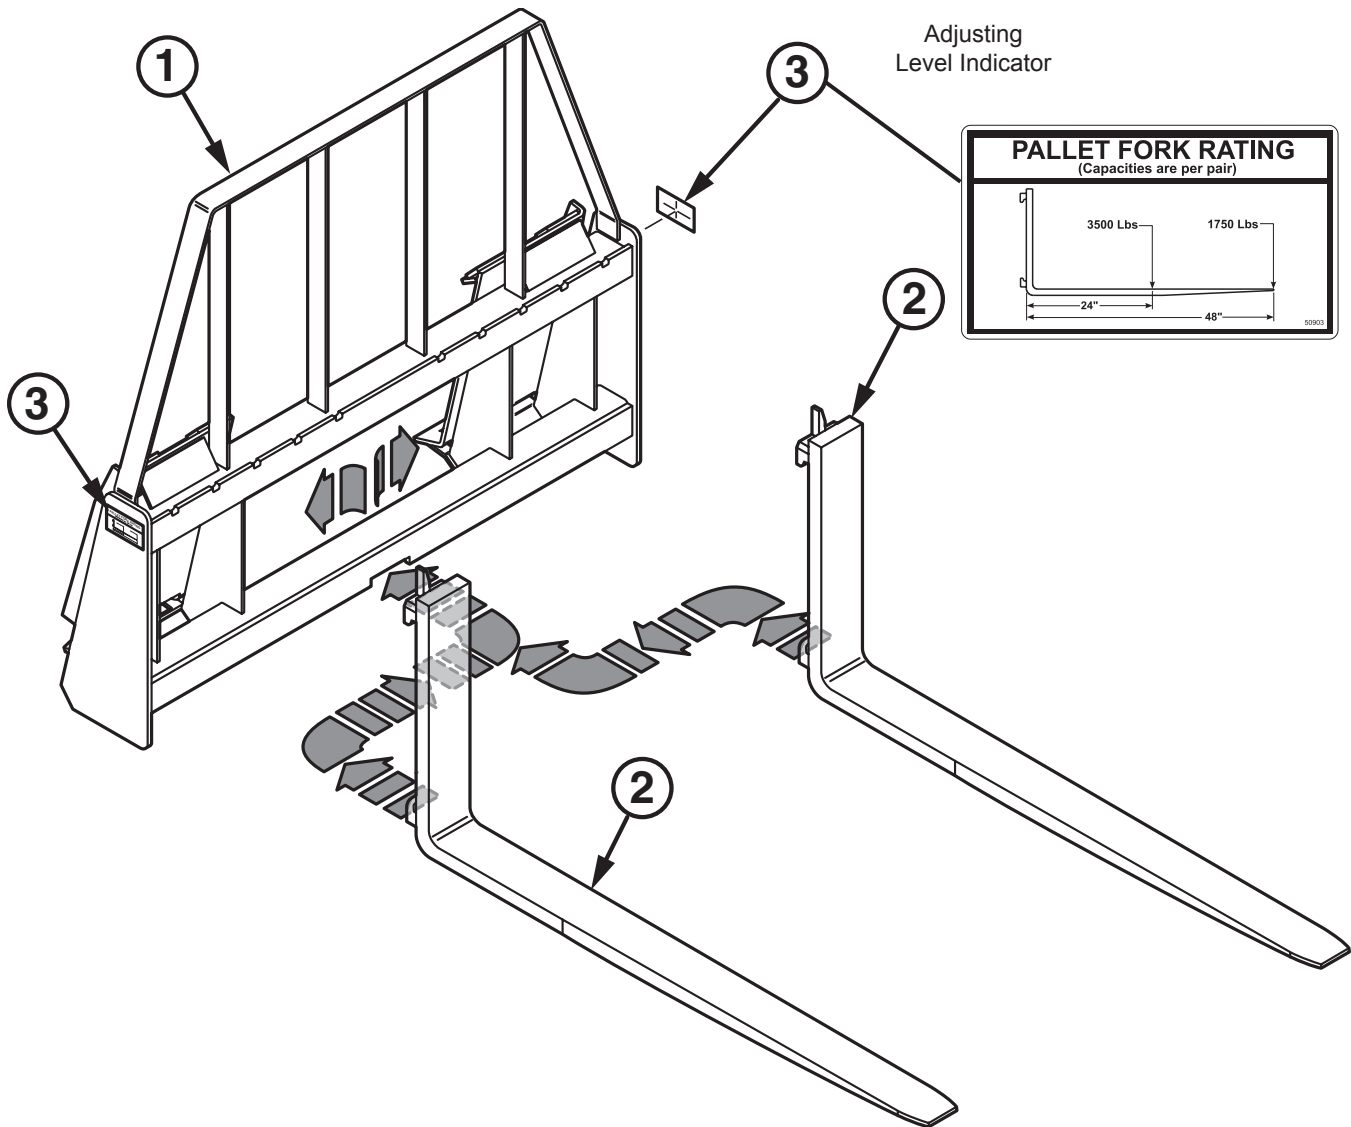

PARTS LIST - MOUNTING KIT

| Item | Part No. | Description | Qty. |
|------|----------|----------------------------|------|
| 1 | MT52766 | FRAME, Pallet Fork | 1 |
| 2 | MT50650 | TINE ASSEMBLY, Pallet Fork | 2 |
| 3 | MT50903 | DECAL, Pallet Fork Rating | 2 |

INSTALLATION INSTRUCTIONS