

Keep With Operator's Manual

## PARALLEL VALVE & PLUMBING KIT SMC & RHINO 2409 LOADER KIOTI DK40 TRACTOR

### TRACTOR AND VALVE KIT GENERAL INFORMATION

Valve and plumbing kit can be installed on tractor using tools ordinarily available. Valve control linkage has been factory preassembled for ease of installation.

**NOTE:** Apply sealant only to all tapered threads unless coupled with swivel adapters. When using teflon tape, wrap tape clockwise (as viewed from end) and wrap tape only twice. Keep sealant away from first two threads of tapered end to prevent contamination of hydraulic fluid. Do not use sealant on o-ring or flare adapter threads.



**WARNING:** Escaping hydraulic fluid under pressure can penetrate skin, causing serious personal injury.


- Do not use your hands to check for leaks. Use a piece of cardboard or paper. Always wear eye protection when searching for leaks.
- Place control lever in float position and stop tractor engine to relieve hydraulic pressure before connecting or disconnecting lines.
- Tighten all connections before starting engine or pressurizing lines.

If any fluid is injected into skin, obtain medical attention immediately or gangrene may result.


Shut off tractor engine, remove key, engage tractor brakes, and completely lower three-point hitch during installation.

### ASSEMBLING VALVE AND HOSES ONTO VALVE MOUNTING TUBE (Figures 1, 2 & 3)

1. Install 3/4" x 3/4" elbow fitting (9) into power beyond port of valve (1), directing elbow fitting (9) forward. Install adapter fittings (22), female quick couplers (15), and 1" plastic identification bands (16) onto working ports of valve (1). (See figure 2 for order of color identification bands.)
2. Fasten valve mounting bracket (2) to right mid mounting bracket using 1/2" x 2 1/2" cap screws (17), 1/2" flat washers (18), and 1/2" lock nuts (19).

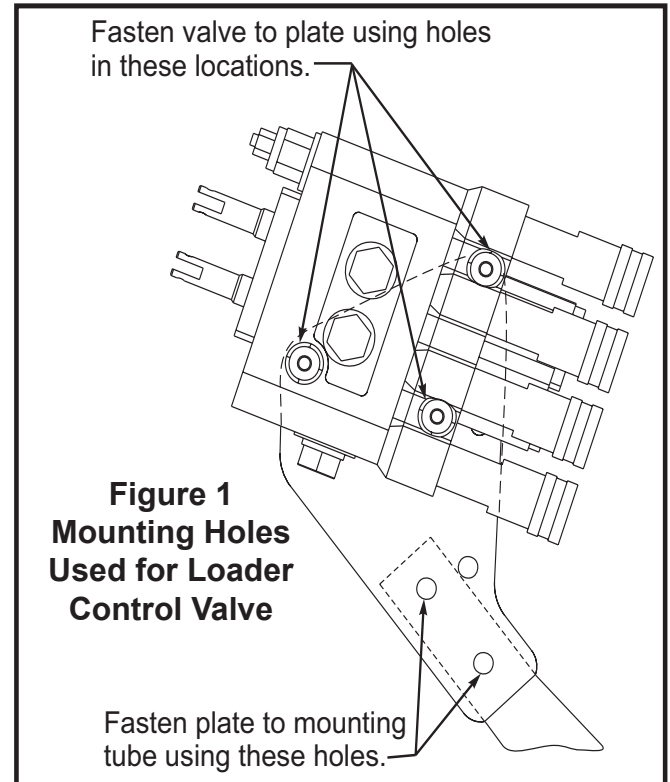

**Figure 1**  
**Mounting Holes**  
**Used for Loader**  
**Control Valve**

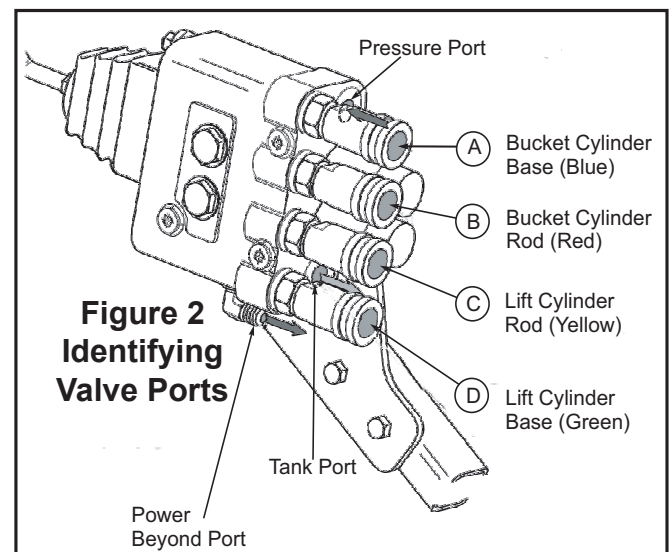

**Figure 2**  
**Identifying**  
**Valve Ports**


3. Fasten valve mounting plate (5) to valve mounting bracket (2) using 3/8 x 2-1/4" cap screws (13) and 3/8" lock nuts (14). (See figure 1.)

### ASSEMBLING VALVE AND HOSES ONTO VALVE MOUNTING TUBE (Continued on page 4)

**2-7244****PARTS LIST – VALVE & PLUMBING KIT**

Item	Part No.	Description	Qty.
1	51033	VALVE, Prince LVR, Model HC-V-BE04 (2500 PSI)	1
2	50408	TUBE, Valve Mounting Bracket	1
3	43517	HANDLE, Valve, Standard	1
4	44287	BRACKET, Decal Mounting Plate	1
5	43450	PLATE, Valve Mounting	1
6	41838-26	SCREW, Cap, 5/16" x 3/4" Grade 5	4
7	41837-2	WASHER, Lock, 5/16"	4
8	38902	BALL, Handle	1
9	32845-7	FITTING, Elbow, 9/16" JIC x 3/4" SAE O-Ring, 90°	1
10	43454-13	HOSE, 3/8" x 48"	1
11	36386-1	HOSE, 3/8" x 44"	1
12	43454-1	HOSE, 3/8" x 40"	1
13	41838-19	SCREW, Cap, 3/8" x 2-1/4" Grade 5	2
14	41840-3	NUT, Lock, 3/8", Type-N	2
15	6147-4	COUPLER, Quick, Female, 3/8"	4
16	36240-9	BAND, Plastic Identification, Blue, 1"	1
	36240-10	BAND, Plastic Identification, Red, 1"	1
	36240-11	BAND, Plastic Identification, Yellow, 1"	1
	36240-12	BAND, Plastic Identification, Green, 1"	1
17	41838-25	SCREW, Cap, 1/2" x 2-1/2"	2
18	42502-10	WASHER, Flat, 1/2"	2
19	41840-5	NUT, Lock, 1/2", Type-N	2
20	43453	DECAL, Single Handle Control	1
21	36249-1	FITTING, Straight Adapter, 3/8" BSPP (with O-Ring & Washer) x 9/16" JIC	1
22	8137-1	STRAP, Adjustable, 3/16" x 11"	2
23	39280-7	FITTING, Straight Adapter, 3/4" SAE x 3/8 NPT	4
24	6137-4	COUPLER, Quick, Male, 3/8"	4
25	36240-5	BAND, Plastic Identification, Blue, 5/8"	1
	36240-6	BAND, Plastic Identification, Red, 5/8"	1
	36240-7	BAND, Plastic Identification, Yellow, 5/8"	1
	36240-8	BAND, Plastic Identification, Green, 5/8"	1
26	36336-8	HOSE, 3/8" x 44"	4
27	43635	BOOT, Rubber, Valve Handle	1
28	G271506	NUT, Hex, 7/16"	1
29	36248-1	FITTING, Elbow Adapter, 90°, 3/8" BSPP (with O-Ring & Washer) x 9/16" JIC	2

Figure 3

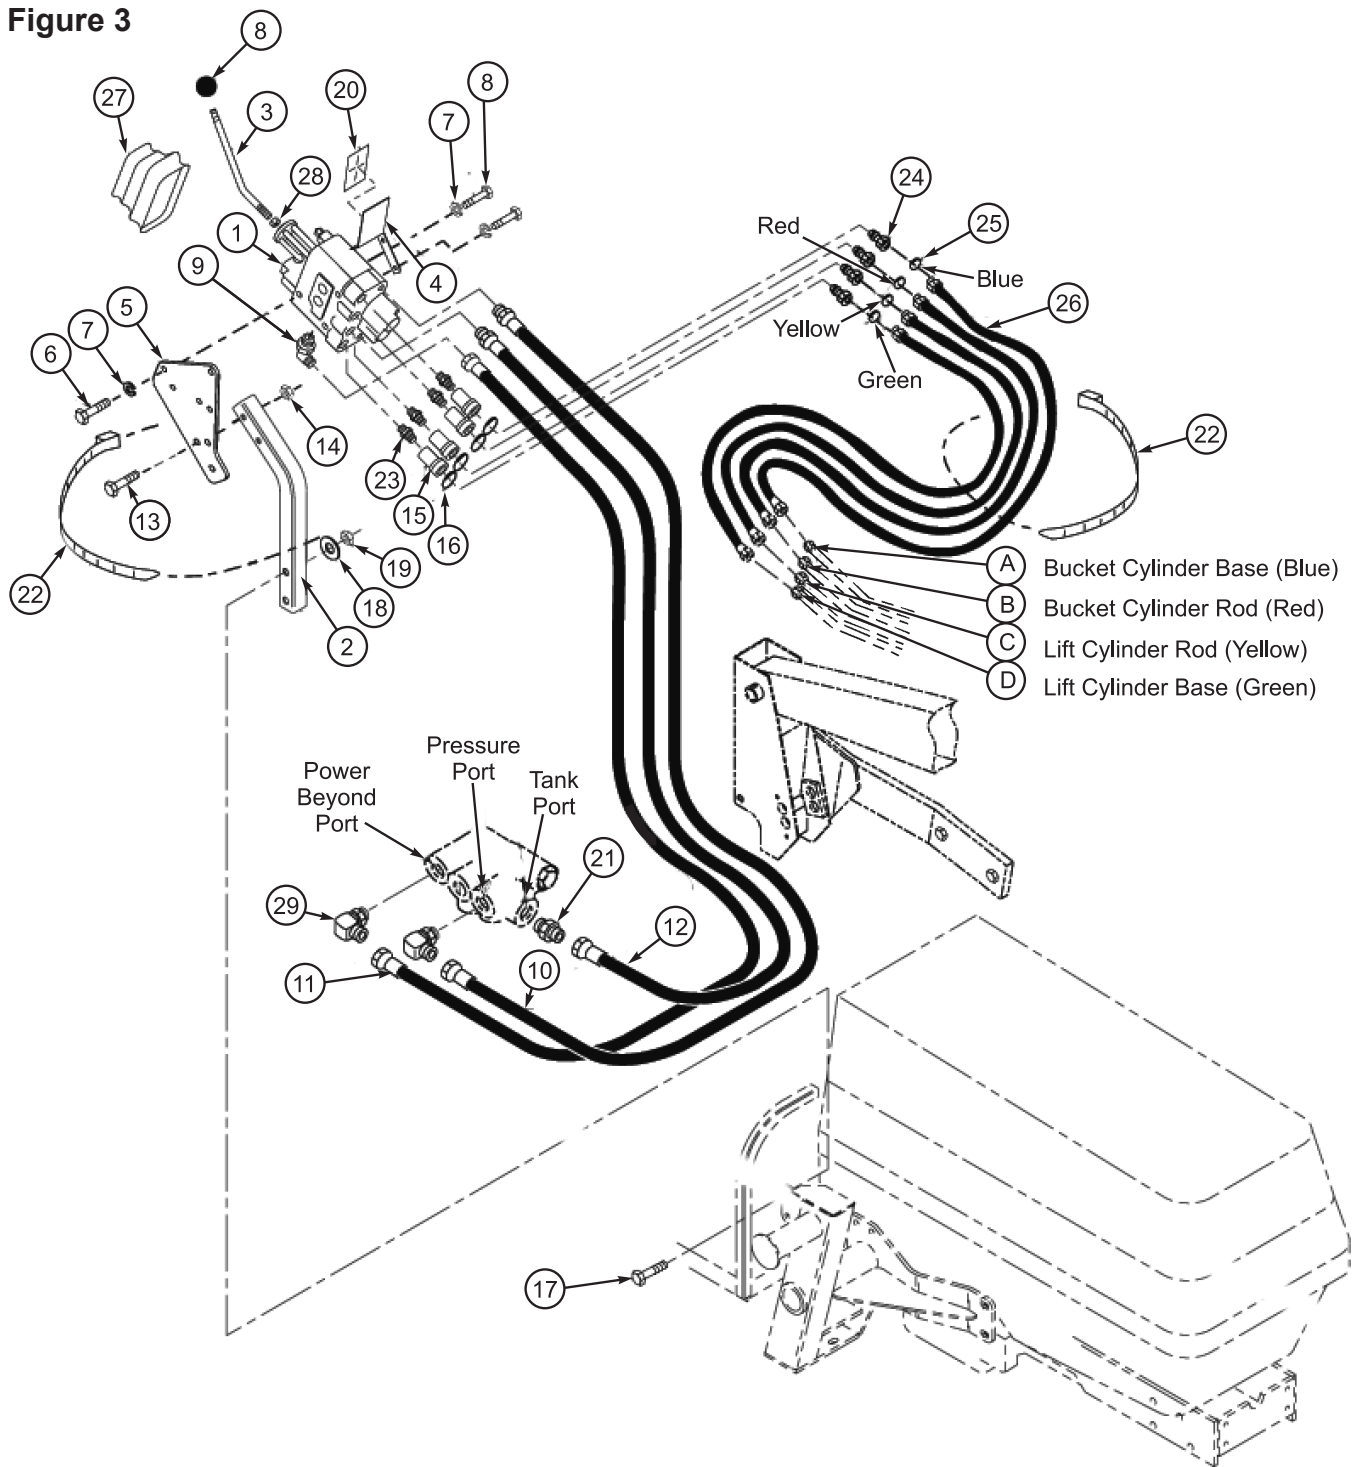

## 2-7244

### ASSEMBLING VALVE AND HOSES ONTO VALVE MOUNTING TUBE (Continued from page 4)

4. Fasten valve (1) to valve mounting plate (5), with power beyond port downward, using 5/16" x 3/4" cap screws (6) and 5/16" lock washers (7).
5. Fasten decal mounting plate (4) to valve (1) using 5/16" x 3/4" cap screw (6) and 5/16" lock washer. Making sure surface of valve box is clean and dry, remove backing from decal (20) and apply it to decal mounting plate.
6. Thread nut (28) onto handle (3). Attach handle (3) to valve (1). Secure handle using jam nut (29). Slip boot (27) over handle and cover handle linkage assembly. Thread ball (8) onto handle.

### PLUMBING CONTROL VALVE TO TRACTOR HYDRAULICS (Figures 3 & 4)

1. Install 3/8" x 44" hose (11) onto elbow fitting (9) in power beyond port of auxiliary valve (1).
2. Install 3/8" x 48" hose (10) to pressure port of valve (1). Install 3/8" x 40" hose (12) to tank port of valve (1).
3. Remove plugs from pressure, power beyond, and tank ports of tractor hydraulic block. Install 3/8" elbow adapters (29) into pressure and power beyond ports in tractor hydraulic block. Install 3/8" straight adapter fitting (21) to tank port. (See figure 3.)
4. Route hoses (10, 11 & 12) from valve, down along valve mounting tube and between mid mounting and tractor frame to fittings on tractor hydraulic block. Connect power beyond hose (11) to power beyond port in hydraulic block. Connect pressure hose (10) to pressure port in tractor hydraulic block. Connect tank hose (12) to tank port in tractor hydraulic block. (See figure 3.)

5. Turn control screw on tractor hydraulic block so groove is in "vertical" position.

**NOTE:** *If valve kit is removed from tractor, turn control screw on tractor hydraulic block so groove is in "horizontal" position.*

6. Secure hoses (10, 11 & 12) together and to valve mounting bracket (2) using plastic tie straps (22).

### PLUMBING LOADER TO CONTROL VALVE


1. Install 3/8" x 44" hoses (26) onto boom oil line tubes. Install and tighten hoses fittings one at a time from the bottom up. Temporarily loosening closest oil line clamp will ease installation.
2. Install male quick couplers (24) onto free ends of hoses (26). Install 5/8" spiral bands onto male quick couplers (24) to match bands (16) on female quick couplers. Secure hoses together with tie strap (22).

Proceed to step 4 on page 3 of 2-7089 SMC and Rhino 2409 loader mounting kit instructions to continue loader installation.

**NOTE:** *When cycling loader, operate loader according to operation decal (20) on valve box. If direction of control lever is wrong, or loader will not lower recheck connections shown.*



**WARNING:** *Escaping hydraulic fluid under pressure can have sufficient force to penetrate skin, causing serious personal injury. If injured by escaping hydraulic fluid, obtain medical treatment immediately.*

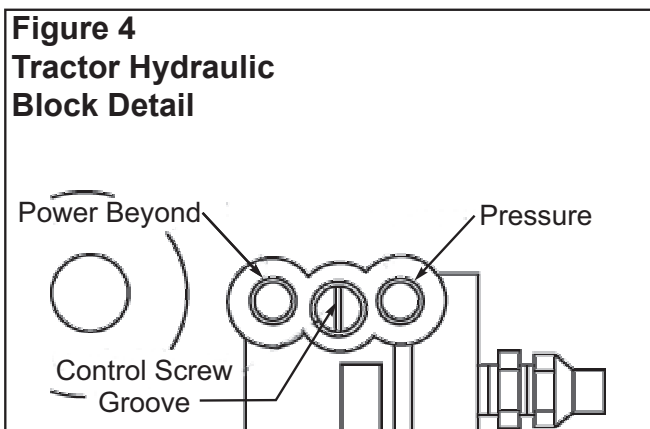

## PRINCE LVR VALVE SERVICE

Following is an outline procedure for disassembling and reassembling valve.



**WARNING:** The valve has a valve relief setting pre-set at the factory. Tampering with this setting can cause serious injury to operator and damage to tractor or loader. Unauthorized adjustments or service to valve relief will VOID WARRANTY of both loader and tractor. If adjustments or service to valve relief are required during warranty period, an authorized service department must be consulted for authorization.

### VALVE DISASSEMBLY (Figure 5)

**NOTE:** It is advisable to mark or tag all parts so they will be reinstalled in their proper position.

**NOTE:** Handle linkage parts have been assembled using Loctite® 262 or equivalent.

- Slide boot (6) to top of handle (34). Remove hex head cap screws (36) from rod ends (9 & 10). Remove handle with boot and adapter plate (8). Remove nuts (28) and shim washer (31) from spool stud (7) and rod end assemblies (10). Remove spool stud (7) and rod end assemblies (10) from valve.

**NOTE:** Spool adapters (33) are factory assembled using Loctite 222 or equivalent. Removal from spools is not necessary. If replacing a damaged adapter, clean threads with alcohol and Loctite® primer and install using Loctite® 262.

- Remove hex head cap screws (13) and detent end caps (14) from both spools. Remove detent sleeve (12) from regen spool. Remove steel balls (20), poppet (21), and poppet spring (19) from detent retainer (24). Remove retaining flat (15) and detent spacer (16) from regen spool.
- Secure handle end of regen spool. Using a rod through retainer ball holes, remove detent retainer (24) from regen spool.

**NOTE:** Detent retainers (18 & 24) are installed on spools using Loctite® 222 or equivalent. If spool adapter comes loose instead of detent retainer, pull spool completely out of valve and secure spool using vise grips on land section of spool which is not machined for valve bore.

- Remove washer (17), centering spring (26), and stop cup (23) from regen spool.

- Holding in on float detent sleeve (22), push on float spool from handle end and remove steel balls (20) from float detent retainer (18). Remove float detent sleeve (22), poppet (21), poppet spring (19), retaining flat (15), and space (16) from float spool.
- Secure handle end of float spool. Using a rod through retainer ball holes, remove detent retainer (18) from float spool.

**NOTE:** Detent retainers (18 & 24) are installed on spools using Loctite® 222 or equivalent. If spool adapter comes loose instead of detent retainer, pull spool completely out of valve and secure spool using vise grips on land section of spool which is not machined for valve bore.

Remove washer (17), centering spring (26), and stop cup (23) from float spool.

- Push spools in from handle end until rear spool seals (1) are exposed. Using wire hook and screwdriver, remove rear spool seals. Push spools in from rear until front spool seals (1) are exposed. Using wire hook and screwdriver, remove front spool seals.
- Clean all parts, including valve body, in suitable cleaning solvent. After cleaning parts with solvent, use air pressure to blow any dirt or excess solvent from all parts, including inside of valve body.

### VALVE REASSEMBLY (Figure 5)

- Examine all parts for wear and damage and replace if necessary.
- Lubricate all o-rings and spools with oil to prevent damage when assembling.
- Lubricate all detent and spring centering parts with a light coat of grease before assembling.
- Reassemble all parts in reverse order of disassembly.

**NOTE:** Use Loctite® 222 or equivalent when installing detent retainers.

### RELIEF VALVE, LOAD CHECK PLUGS, and POWER BEYOND SLEEVE

**NOTE:** Relief valve (3), load check plugs (27), and power beyond sleeve (2) may be removed separately to clean, inspect, or replace parts, without removing valve spools.

**NOTE:** If repairing or replacing relief valve (3), torque larger hex nut (relief body) to 20-25 ft.·lbs.

**2-7244****PARTS LIST – PRINCE LVR VALVE**


Item	Part No.	Description	Qty.
1	43633	SEAL KIT	1
2	43636	POWER BEYOND SLEEVE	1
3	43637-1	RELIEF VALVE (3000 PSI)	1
4	43638	FLOAT KIT, (Includes 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, and 26)	1
5	43639	REGEN KIT, (Includes items 12, 13, 14, 15, 16, 17, 19, 20, 21, 24, and 26)	1
6	43635	BOOT, Rubber, Valve Handle	1
7	51076	STUD, Spool	1
8	1078	ADAPTER PLATE	1
9	38900-4	ROD END	1
10	51075	ROD END, Assembly	2
11	51079	CLEVIS	1
14	44476-2	END CAP (Manufacturer's part number (HC-V-AA26) stamped on end cap identifies valve and relief setting)	2
25	44743-5	SCREW, Cap,Socket Head, 1/4-20 x 1/2"	2
26	44460	PLUG, Load Check	2
28	41836-2	NUT, Hex, 5/16"	3
29	44743-3	SCREW, Cap, Socket Head, 1/4-20 x 7/8"	2
30	51080	PLATE	1
31	51081	WASHER, Shim, 5/16"	1
32	G271506	NUT, Hex, 7/16-20	1
33	51077	END, Spool	2
34	43517	HANDLE, Valve, Standard	1
35	38902	BALL, Handle	1
36	44743-4	SCREW, Cap, Socket Head, 5/16-24 x 3/4"	3
37	G120383	WASHER, Lock, 7/16"	1

**NOTE:** Individual items not listed in repair parts listing are not available separately.




**Figure 5**

Spool ends do not need to be removed to service valve. If replacing damaged spool end, clean threads using Locktite® primer and install using Locktite® 262.

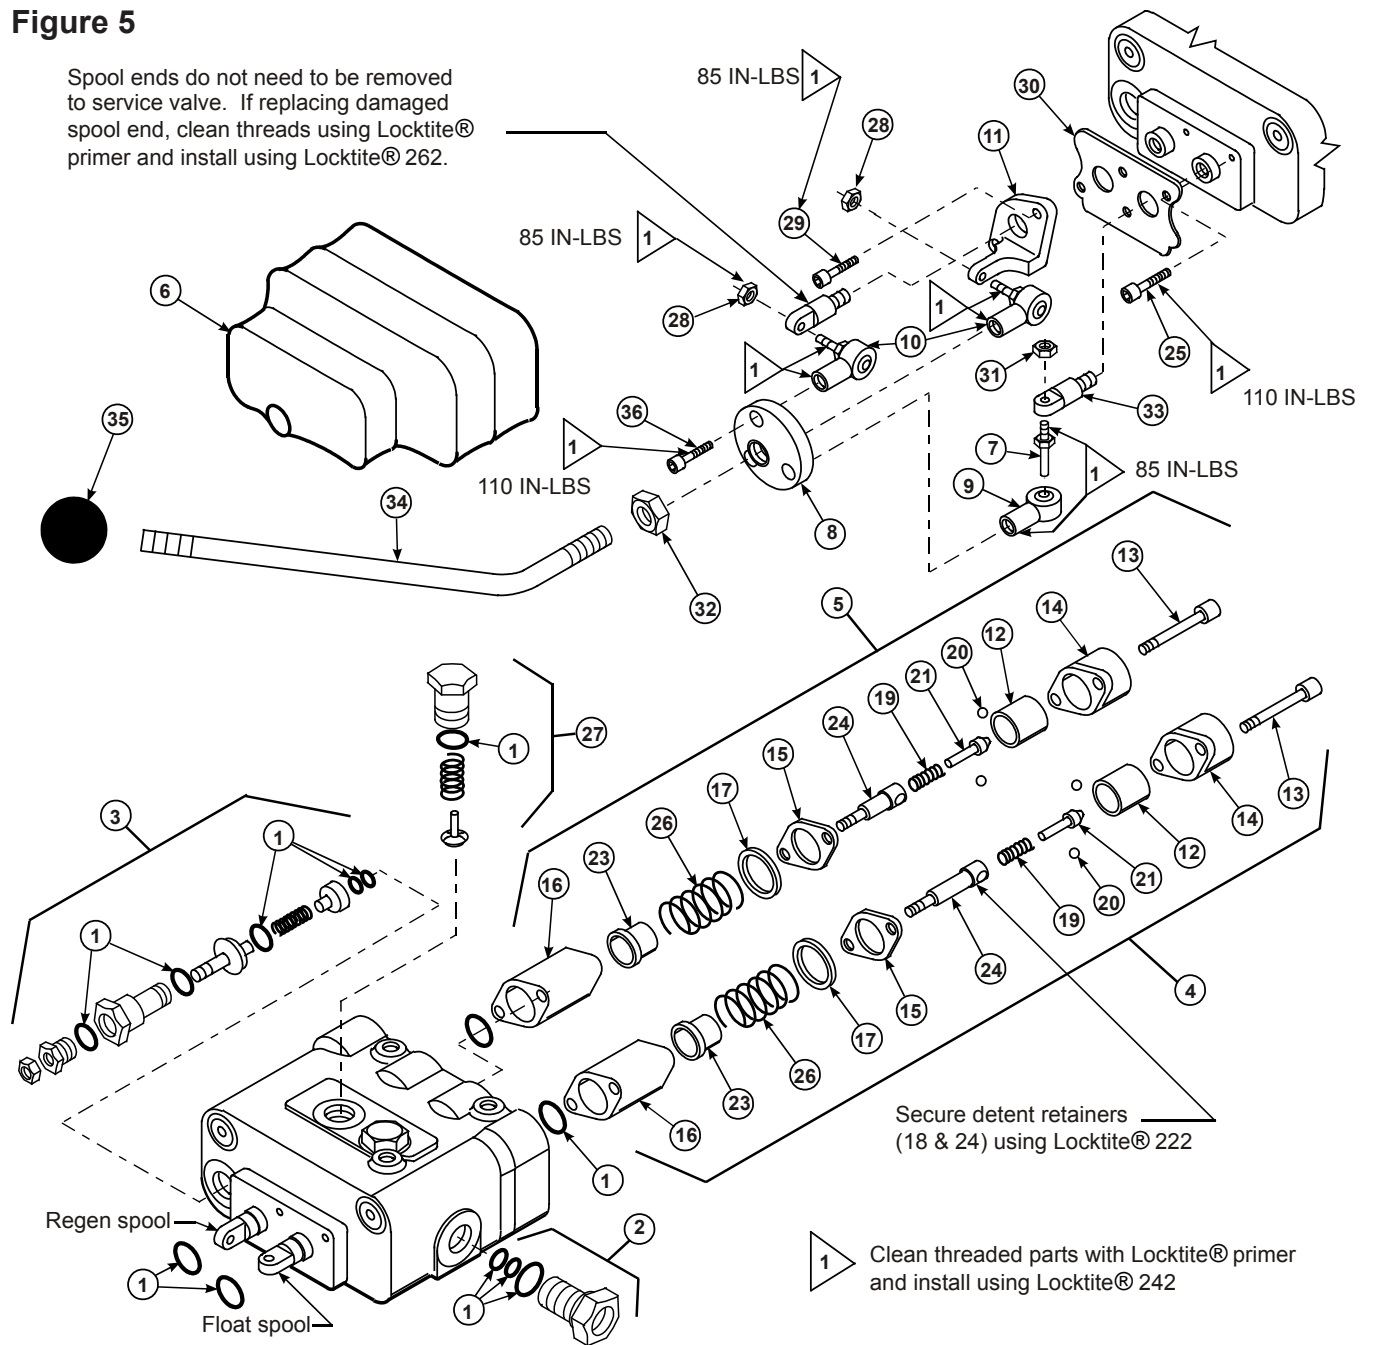

**Figure 6**  
**VALVE EQUIPPED WITH LOCKOUT FEATURE**

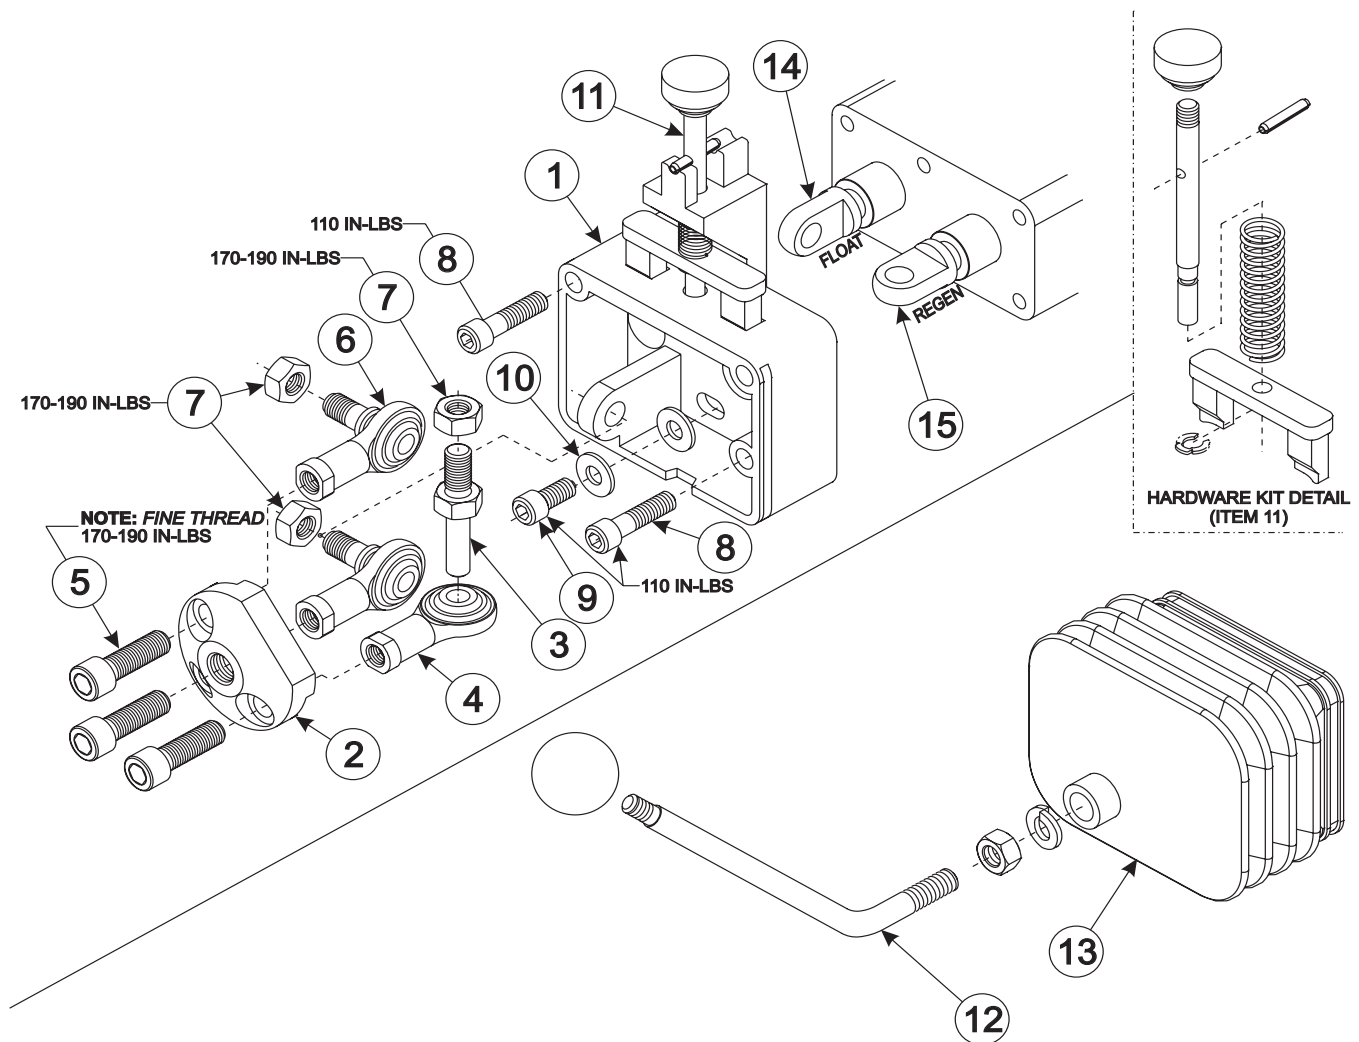

**PARTS LIST - JOYSTICK SUB-ASSY WITH DUAL SPOOL LOCK**

Item	Part No.	Description	Qty.
1	*	CLEVIS, Spool Lock	1
2	*	PLATE, Adapter	1
3	55821	STUD, Spool	1
4	55822	END, Rod	1
5	*	SCREW, Cap	3
6	55823	ASSY, Rod End	2
7	*	NUT, Hex	3
8	*	SCREW, Cap	2
9	*	SCREW, Cap	1
10	*	WASHER, Flat	1
11	55824	KIT, Spool Lock Hardware	1
12	56004	KIT, Bent Handle	1
13	55826	KIT, Boot/Cable Tie	1
14	55917	ADAPTER, Float Spool	1
15	55918	ADAPTER, Regen Spool	1
16	55827	KIT, Sub-Assy, Includes Items 1-11	1

\* **NOTE:** Individual items not listed in repair parts listing are not available separately.  
For valve block service parts, see previous page.



## GENERAL TORQUE SPECIFICATIONS

USE THE FOLLOWING TORQUES WHEN SPECIAL TORQUES ARE NOT GIVEN

### Standard American and Metric Cap Screws

AMERICAN STANDARD CAP SCREWS									METRIC CAP SCREWS								
SAE Grade	5				8				Metric Class	8.8				10.9			
Typ. Head Markings									Typ. Head Markings								
Cap Screw	TORQUE								Cap Screw	TORQUE							
Size	FT·LBS		N·m		FT·LBS		N·m		Size	FT·LBS		N·m		FT·LBS		N·m	
Inches	MIN	MAX	MIN	MAX	MIN	MAX	MIN	MAX	Millimeters	MIN	MAX	MIN	MAX	MIN	MAX	MIN	MAX
1/4 - 20	6.25	7.25	8.5	10	8.25	9.5	11	13	M6 x 1.00	6	8	8	11	9	11	12	15
1/4 - 28	8	9	11	12	10.5	12	14	16	M8 x 1.25	16	20	21.5	27	23	27	31	36.5
5/16 - 18	14	15	19	20	18.5	20	25	27	M10 x 1.50	29	35	39	47	42	52	57	70
5/16 - 24	17.5	19	23	26	23	25	31	34	M12 x 1.75	52	62	70	84	75	91	102	123
3/8 - 16	26	28	35	38	35	37	47.5	50	M14 x 2.00	85	103	115	139	120	146	163	198
3/8 - 24	31	34	42	46	41	45	55.5	61	M16 x 2.50	130	158	176	214	176	216	238	293
7/16 - 14	41	45	55.5	61	55	60	74.5	81	M18 x 2.50	172	210	233	284	240	294	325	398
7/16 - 20	51	55	69	74.5	68	75	92	102	M20 x 2.50	247	301	335	408	343	426	465	577
1/2 - 13	65	72	88	97.5	86	96	116	130	M22 x 2.50	332	404	450	547	472	576	639	780
1/2 - 20	76	84	103	114	102	112	138	152	M24 x 3.00	423	517	573	700	599	732	812	992
9/16 - 12	95	105	129	142	127	140	172	190	M27 x 3.00	637	779	863	1055	898	1098	1217	1488
9/16 - 18	111	123	150	167	148	164	200	222	M30 x 3.00	872	1066	1181	1444	1224	1496	1658	2027
5/8 - 11	126	139	171	188	168	185	228	251	<p><b>NOTE:</b> These values apply to fasteners as received from supplier, dry or when lubricated with normal engine oil. They do not apply if special graphite or moly sulphide greases or other extreme lubricants are used.</p>								
5/8 - 18	152	168	206	228	203	224	275	304									
3/4 - 10	238	262	322	355	318	350	431	474									
3/4 - 16	274	305	371	409	365	402	495	544									
7/8 - 9	350	386	474	523	466	515	631	698									
7/8 - 14	407	448	551	607	543	597	736	809									
1 - 8	537	592	728	802	716	790	970	1070									
1 - 14	670	740	908	1003	894	987	1211	1337									

### 37° JIC Fittings

Size	Thread Size	Assembly Torque		Tube Connection F. F. F. T.	Swivel Nut or Hose Connection F. F. F. T.
		in.·lb.	ft.·lb.		
-4	7/16 - 20	140 ± 10	12 ± 1	2	2
-5	1/2 - 20	180 ± 15	15 ± 1	2	2
-6	9/16 - 18	250 ± 15	21 ± 1	1 1/2	1 1/4
-8	3/4 - 16	550 ± 25	45 ± 5	1 1/2	1
-12	1 1/16 - 12	1000 ± 50	85 ± 5	1 1/4	1
-16	1 5/16 - 12	1450 ± 50	120 ± 5	1	1
-20	1 5/8 - 12	2000 ± 100	170 ± 10	1	1
-24	1 7/8 - 12	2400 ± 150	200 ± 15	1	1
-32	2 1/2 - 12	3200 ± 200	270 ± 20	1	1

### O-Ring Face Seal Tube/ Hose Swivel Nut

Metric Tube O.D. (mm)	Dash Size	Thread Size (in.)	Swivel Nut Hex Size (in.)	Swivel Nut Torque	
				N·m	lb <sub>f</sub> /ft
5	-3	--	--	--	--
6	-4	9/16 - 18	11/16	16	12
8	-5	--	--	--	--
10	-6	11/16 - 16	13/16	24	18
12	-8	13/16 - 16	15/16	50	37
16	-10	1 - 14	1-1/8	69	51
20	-12	1-3/16 - 12	1-3/8	102	75
22	-14	1-3/16 - 12	--	102	75
25	-16	1-7/16 - 12	1-5/8	142	105
32	-20	1-11/16 - 12	1-7/8	190	140
38	-24	2 - 12	2-1/4	217	160
50.8	-32	--	--	--	--

### SAE O-Ring Fittings

Size	Swivel Nut or Hose	Assembly Torque		F. F. F. T.
		in.·lb.	ft.·lb.	
2	5/16 - 24	90 ± 5	7.5 ± 0.5	1 ± .25
3	3/8 - 24	170 ± 10	14 ± 1	1 ± .25
4	7/16 - 20	220 ± 15	18 ± 1	1 ± .25
5	1/2 - 20	260 ± 15	22 ± 1	1 ± .25
6	9/16 - 18	320 ± 20	27 ± 2	1.5 ± .25
8	3/4 - 16	570 ± 25	48 ± 2	1.5 ± .25
10	7/8 - 14	1060 ± 50	90 ± 5	1.5 ± .25
12	1 1/16 - 12	1300 ± 50	110 ± 5	1.5 ± .25
14	1 3/16 - 12	1750 ± 75	145 ± 6	1.5 ± .25
16	1 5/16 - 12	1920 ± 125	160 ± 6	1.5 ± .25
20	1 5/8 - 12	2700 ± 150	225 ± 12	1.5 ± .25
24	1 7/8 - 12	3000 ± 150	250 ± 12	1.5 ± .25
32	2 1/2 - 12	3900 ± 200	325 ± 15	1.5 ± .25

# INSTALLATION INSTURCTIONS