

Keep With Loader Operator's Manual

LOADER HOSE KIT INSTRUCTIONS

Hose kit can be installed using tools ordinarily available. Shut off engine and engage brakes during installation.

IMPORTANT: Check for proper valve operation before plumbing loader to tractor. See tractor operator's manual for instructions.

PLUMBING LOADER TO TRACTOR REMOTE VALVE (Figure 1)

1. Install 3/8 x 72" hoses (1) to boom oil line tubes, starting at the bottom and working up. Loosening the first oil line clamp will ease installation.
2. Wrap one end of rubber strap (2) around hoses (1) and hook it back on itself. Attach other end of rubber strap (2) to front of yoke.
3. Install male quick couplers (not supplied) to loose ends of hoses (1) and plug couplers into valve couplers.

NOTE: Connect top two loader oil lines to valve couplers which control bucket. Connect bottom two loader oil lines to valve couplers which control lift cylinder.
4. Bundle hoses together between boom oil lines and rubber strap with adjustable tie straps (3).

5. After all plumbing is completed, start tractor engine and slowly cycle lift and bucket cylinders several times to free the system of air, then retract cylinders and stop engine. Add additional hydraulic oil, as specified in the tractor operator's manual, to bring the oil up to full.

NOTE: When cycling the loader, operate the lever according to the function desired. If direction of control lever is wrong, exchange the quick couplers at the remote couplers controlled by that valve lever.

WARNING: Escaping hydraulic fluid under pressure can penetrate skin causing serious injury.



- DO NOT use your hands to check for leaks. Use a piece of cardboard or paper to search for leaks.
- Stop engine and relieve pressure before connecting or disconnecting lines.
- Tighten all connections before starting engine or pressurizing lines.

If any fluid is injected into skin, obtain medical attention immediately or gangrene may result.

INSTALLATION INSTRUCTIONS

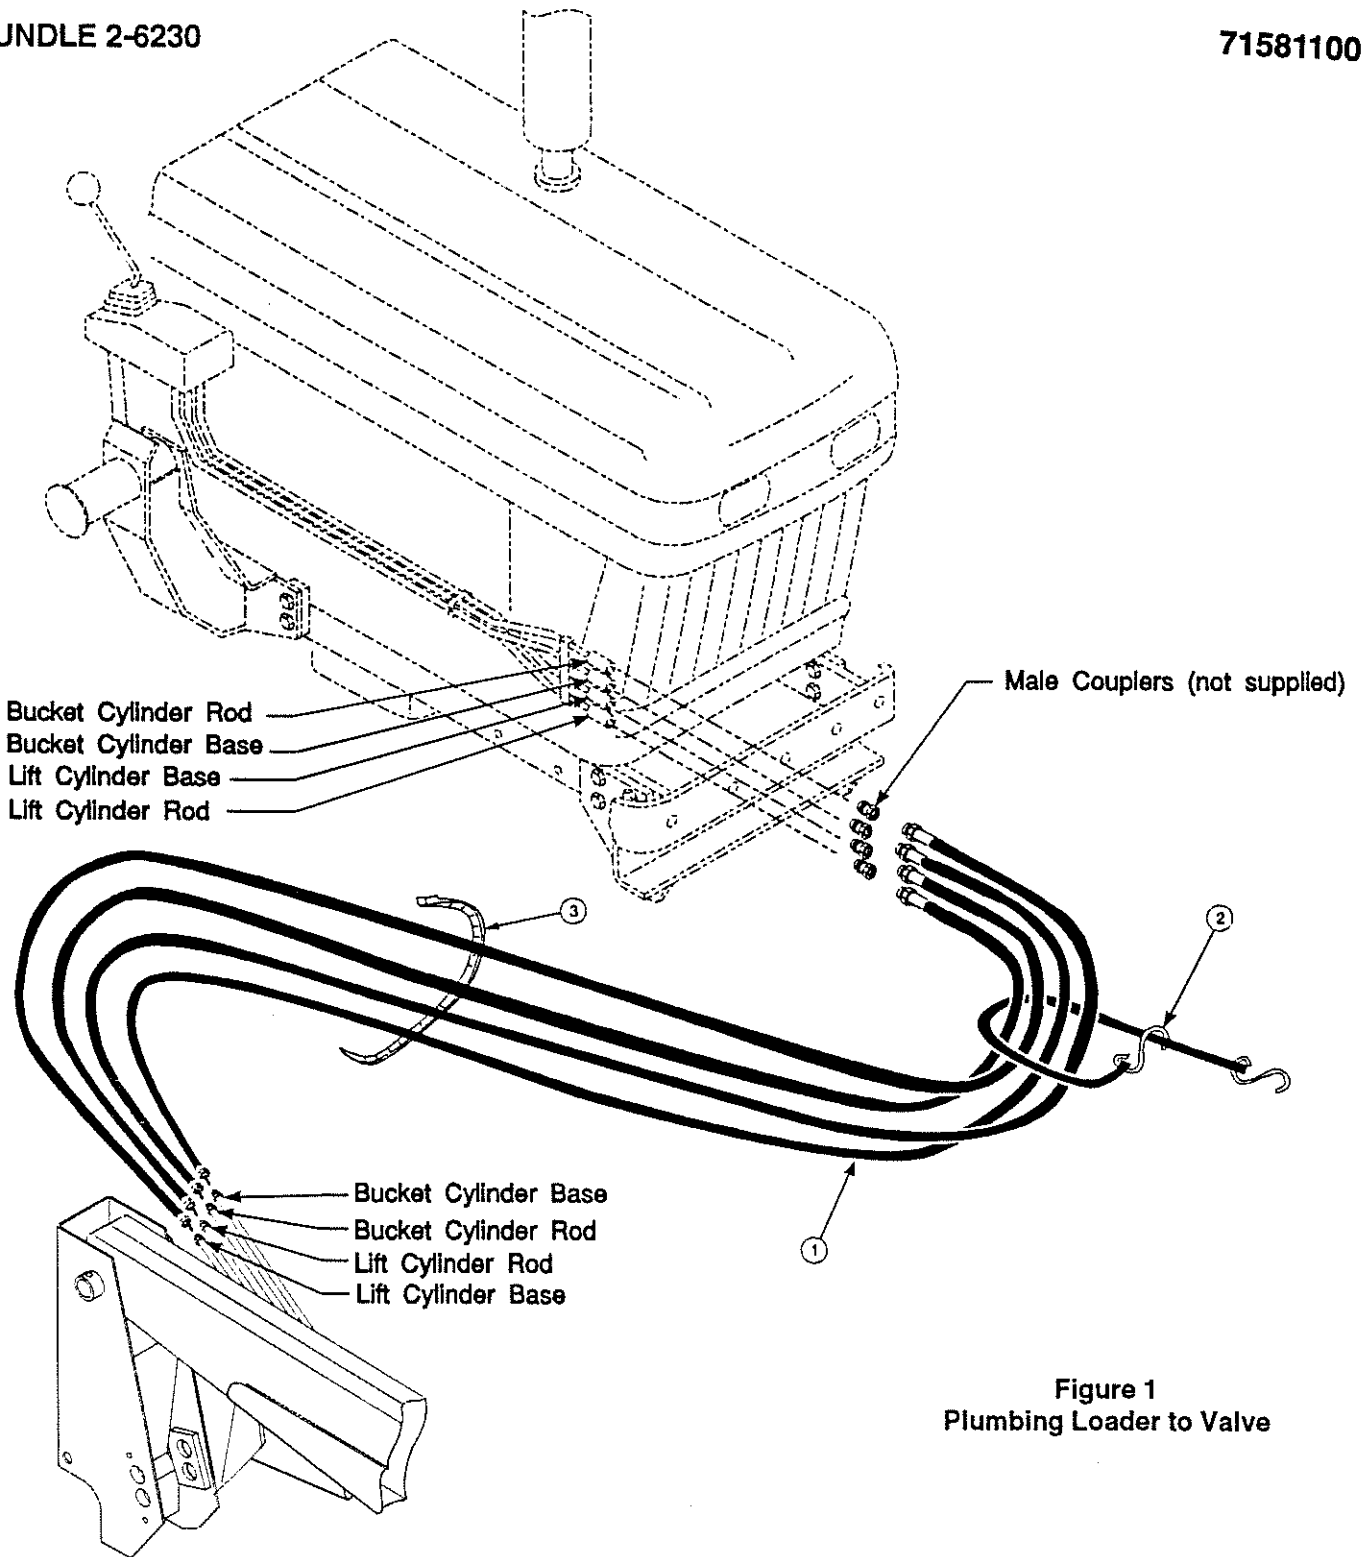


Figure 1
Plumbing Loader to Valve

PARTS LIST - HOSE KIT

ITEM	PART NO.	DESCRIPTION	QTY.
1	36336-3	HOSE, 3/8 x 72"	4
2	7438-1	STRAP, Rubber	1
3	8137-1	STRAP, Adjustable Tie	2