



TW144

ROTARY CUTTER

Rev 05-15

S/N 10730 -Current

Part No. 00761232P

PART'S MANUAL



An Operator's Manual was shipped with the equipment in the Manual Canister. This Operator's Manual is an integral part of the safe operation of this machine and must be maintained with the unit at all times. **READ, UNDERSTAND, and FOLLOW** the Safety and Operation Instructions contained in this manual before operating the equipment. If the Operator's Manual is not with the equipment, contact your dealer or Servis-Rhino (800-446-5158) to obtain a Free copy before operating the equipment.

ATENCIÓN!

LEA EL INSTRUCTIVO

Si No Lee Ingles, Pida Ayuda a Alguien
Que Si Lo Lea Para Que le Traduzca las
Medidas de Seguridad.



RHINO®

1020 S. Sangamon Ave.
Gibson City, IL 60936
800-446-5158

Email: parts@servis-rhino.com

© 2007 Alamo Group Inc.



TO THE OWNER/OPERATOR/DEALER

All implements with moving parts are potentially hazardous. There is no substitute for a cautious, safe-minded operator who recognizes the potential hazards and follows reasonable safety practices. The manufacturer has designed this implement to be used with all its safety equipment properly attached to minimize the chance of accidents.


BEFORE YOU START!! Read the safety messages on the implement and shown in your manual.
Observe the rules of safety and common sense!



DANGER

FAILING TO FOLLOW SAFETY MESSAGES AND OPERATING INSTRUCTIONS CAN CAUSE SERIOUS BODILY INJURY OR EVEN DEATH TO OPERATOR AND OTHERS IN THE AREA.

1.

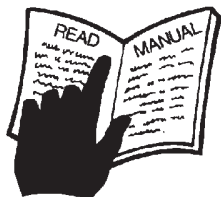

2. NO RIDERS, NO CHILDREN OPERATORS



3. USE SAFETY SHOES, HARD HAT, SAFETY GLASSES, SEAT BELTS, & ROPS



4. BLOCK UP SECURELY BEFORE WORKING UNDER.



1. Study and understand Operator's Manuals, Safety Signs, and Instructional Decals for tractor & flail mower to prevent misuse, abuse, & accidents. Practice before operating mower in a confined area or near passersby.

- Learn how to stop engine suddenly in an emergency. Be alert for passersby and especially children.

2. Allow no children on or near implement or tractor. Allow no riders on tractor or implement. Falling off can cause serious injury or death from being runover by tractor or mower or contact with Flail Mower Blades.

3. Operate only with tractor having Roll-Over Protective Structure (ROPS) and with seatbelt fastened securely and snugly to prevent injury and possible death from falling off or tractor overturn. Personal Protective Equipment such as Hard Hat, Safety Glasses, Safety Shoes, and Ear Plugs are recommended.

4. Block up or support raised machine and all lifted components securely before putting hands or feet under or working underneath any lifted component to prevent crushing injury or death from sudden dropping or inadvertent operation of controls. Make certain that area is clear before lowering or folding.

5. Before transporting, put Lift Lever in detent or full-lift position. Install Transport Safety Devices securely on folding implements. Slow down when turning and on hillsides.

- Install **Restrictor in folding circuit to slow down lowering and unfolding if action is faster than is desirable.

6. Make certain that SMV sign, Warning Lights, and Reflectors are clearly visible. Follow local traffic codes.

7. Never operate with Flail Mower or Folding Section raised if passersby, bystanders or traffic are in the area to reduce possibility of injury or death from objects thrown by Blades under Shields or implement structure.

8. Before dismounting, secure flail mower in transport position or lower to ground.

• Put tractor in park or set brake, disengage PTO, stop engine, remove key, and wait until noise of rotation has ceased to prevent entanglement in rotating parts which may cause injury or death.

- Never mount or dismount a moving vehicle. Crushing from runover may cause injury or death.

5. TRANSPORT SAFELY, LOCK UP.



6. USE SMV, LIGHTS, & REFLECTORS.



7. DO NOT OPERATE WITH MOWER OR WING RAISED.



8. DO NOT MOUNT OR DISMOUNT WHILE MOVING.



WARRANTY INFORMATION:

002369

Read and understand the complete Warranty Statement found in this Manual. Fill out the Warranty Registration Form in full and return it within 30 Days. Make certain the Serial Number of the Machine is recorded on the Warranty Card and on the Warranty Form that you retain. The use of "will-fit" parts will void your warranty and can cause catastrophic failure with possible injury or death.

PARTS SECTION

PARTS ORDERING GUIDE

The following instructions are offered to help eliminate needless delay and error in processing purchase orders for the equipment in this section.

1. The Parts Section is prepared in logical sequence and grouping of parts that belong to the basic machine featured in this manual. Part Numbers and Descriptions are given to help locate the parts and quantities required.
2. The Purchase Order must include the name and address of the person or organization ordering the parts, who should be charged, and if possible, the serial number of the machine for which the parts are ordered.
3. The Purchase Order must clearly list the quantity of each part, the complete and correct part number (be sure to include all periods), and the basic name of the part.
4. The Manufacturer reserves the right to substitute parts where applicable.
5. Some parts are unlisted items which are special production items not normally stocked and are subject to special handling. Request a quotation for such parts before sending a Purchase Order.
6. The Manufacturer reserves the right to change prices without prior notice.

NOTE: Please refer to The Safety Section in the front of this Manual for the proper Part Number when ordering Replacement Safety Decals.



For maximum safety and to guarantee optimum product reliability, always use genuine Servis-Rhino Parts. The use of inferior replacement parts may cause premature or catastrophic failure which could result in serious injury or death. Direct any questions regarding parts to:





RHINO®
1020 S. Sangamon Ave.
Gibson City, IL 60936
800-446-5158
Email: parts@servis-rhino.com

PART NAME INDEX

A FRAME ASSEMBLY CAT II AND III SN 10105 -CURRENT REV 01-05	6
A-FRAME ASSEMBLY - CAT II & III	4
AXLE ASSEMBLY (SEMI-MOUNT).....	67, 68
AXLE ASSEMBLY - CURRENT Rev 08-07	12
AXLE ASSEMBLY - Rev 03-06	16
AXLE ASSEMBLY - S/N 10812 -BELOW Rev 08-07	14
BLADEPAN ASSEMBLY	50, 51
CASTER ASSEMBLY (AXLE) - FOAM FILLED	57
CASTER ASSEMBLY - LIFT TYPE S/N 10729 -BELOW Rev 08-04	22
CASTER WHEEL AND HUB ASSEMBLY S/N 10730 -CURRENT Rev 08-04	21
CHAIN GUARD ASSEMBLY-FRONT	54
CHAINGUARD ASSEMBLY-REAR	55
CONTROL ROD ASSEMBLY	8
DEFLECTOR ASSEMBLY - FRONT	52
DEFLECTOR ASSEMBLY-REAR.....	53
DRIVELINE - OUTER S/N 10699 & BELOW Rev 07-04	34
DRIVELINE - OUTER S/N 10700 -CURRENT	35
DRIVELINE - PULL TYPE 1000 RPM Rev 08-07	31
DRIVELINE - PULL TYPE 540 RPM Rev 08-07	30
DRIVELINE ASSEMBLY - CV	58, 60
DRIVELINE COUPLER.....	36
DRIVELINE LIFT TYPE - 1000 RPM	27
DRIVELINE LIFT TYPE - 540 & 1000 RPM.....	24, 25
DRIVELINE LIFT TYPE - 540 RPM	26
DRIVELINE PULL TYPE - 1000 RPM.....	29
DRIVELINE PULL TYPE - 540 RPM.....	28
FOAM FILLED USED AIRCRAFT TIRE.....	10
GEARBOX ASSEMBLY - SIDE.....	48
GEARBOX ASSEMBLY 00771225 Rev 02-07.....	44
GEARBOX ASSEMBLY 00771225A Rev 02-07	46
GEARBOX DIVIDER- 1000 RPM	43
GEARBOX DIVIDER- 540 RPM	42
HYDRAULIC CYLINDER (OPTIONAL)	66, 69
JACKSHAFT - PULL TYPE	32, 33
JACKSHAFT ASSEMBLY - PULL TYPE CV	62, 63
JACKSHAFT SUPPORT - PULL TYPE.....	39
JACKSHAFT SUPPORT - PULL TYPE Rev 03-05	40
LIGHT KIT.....	72
SAFETY DECAL SHEETS	74
SHIELD AND SMV ASSEMBLY Rev 01-05	41
SKID SHOE ASSEMBLY	56
SLIP CLUTCH ASSEMBLY	37, 38
SPRING SHOCK ASSEMBLY	20
TAILWHEEL ASSEMBLY-LIFT MODEL.....	23
TIRE & WHEEL OPTIONS - PULL TYPE	70
TONGUE & JACKSHAFT ASSY - CV DRIVELINE OPTION.....	64
TONGUE ASSEMBLY	7
WHEEL ASSEMBLY	9
WHEEL HUB ASSEMBLY -BELOW Rev 08-07.....	19
WHEEL HUB ASSEMBLY -CURRENT Rev 08-07	18


A-FRAME ASSEMBLY - CAT II & III

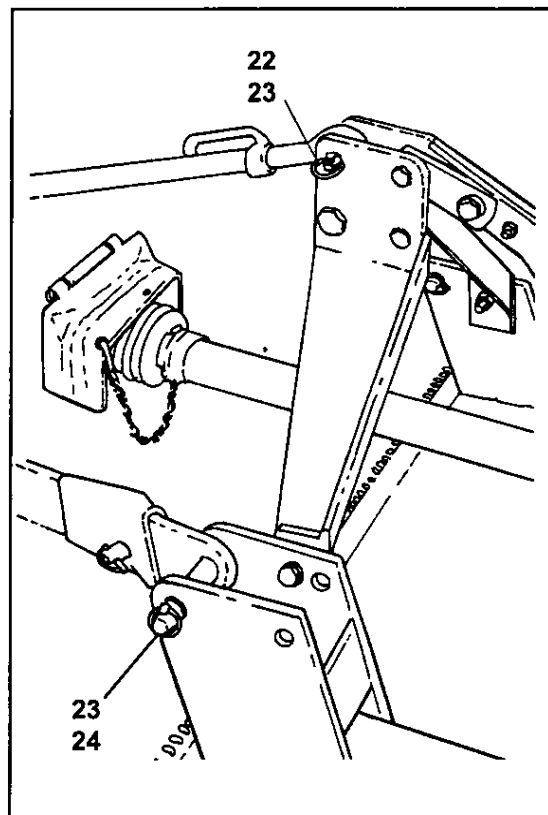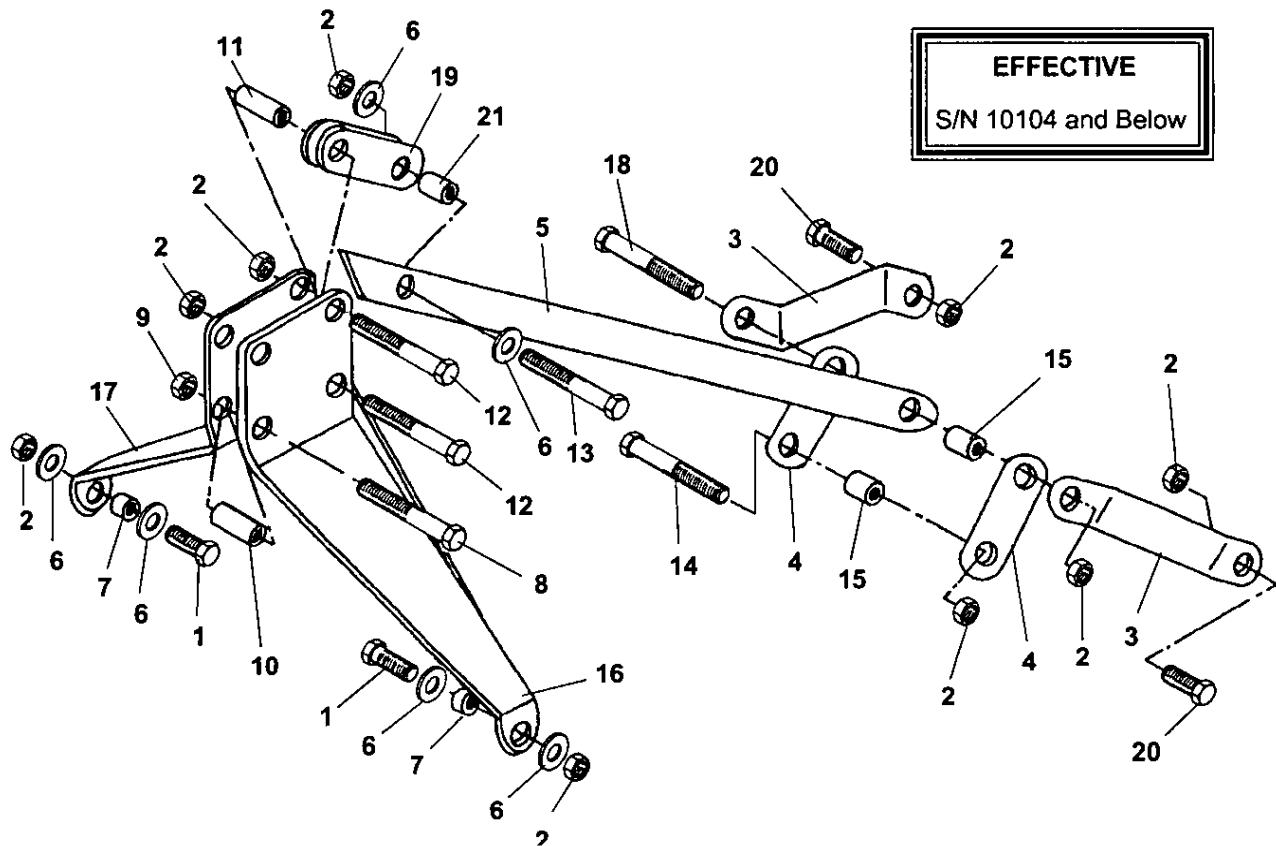

A-FRAME ASSEMBLY - CAT II & III


ITEM	PART NO.	QTY.	DESCRIPTION
1	00037100	2	BOLT
2	00037200	9	TOP LOCKNUT
3	00762132	2	SUPPORT FLAT REAR BRAKE
4	00761252	2	SUPPORT FLAT REAR BRACE
5	00762131	1	FLAT REAR BRACE
6	5312316	6	WASHER
7	0758550070	2	BUSHING
8	7AH5161436	1	BOLT
9	5JRC16140	1	NUT TOPLOCK
10	0758550031	1	BUSHING
11	0758550030	2	SPACER
12	00009500	2	BOLT
13	02881000	1	BOLT
14	02960521	1	BOLT
15	8327	2	BUSHING-LEVEL & ROD
16	0758550020	1	A-FRAME LEG - LEFT
17	0758550010	1	A-FRAME LEG - RIGHT
18	00007800	1	BOLT
19	0758551042	2	A-FRAME LINK STRAP
20	02931300	2	BOLT
21	701023R	1	BUSHING
22	3730110	1	TOP LINK PIN
23	2196	3	CLIP PIN
24	69141	2	LOWER HITCH PIN CAT II & III

A FRAME ASSEMBLY CAT II AND III SN 10105 -CURRENT REV 01-05

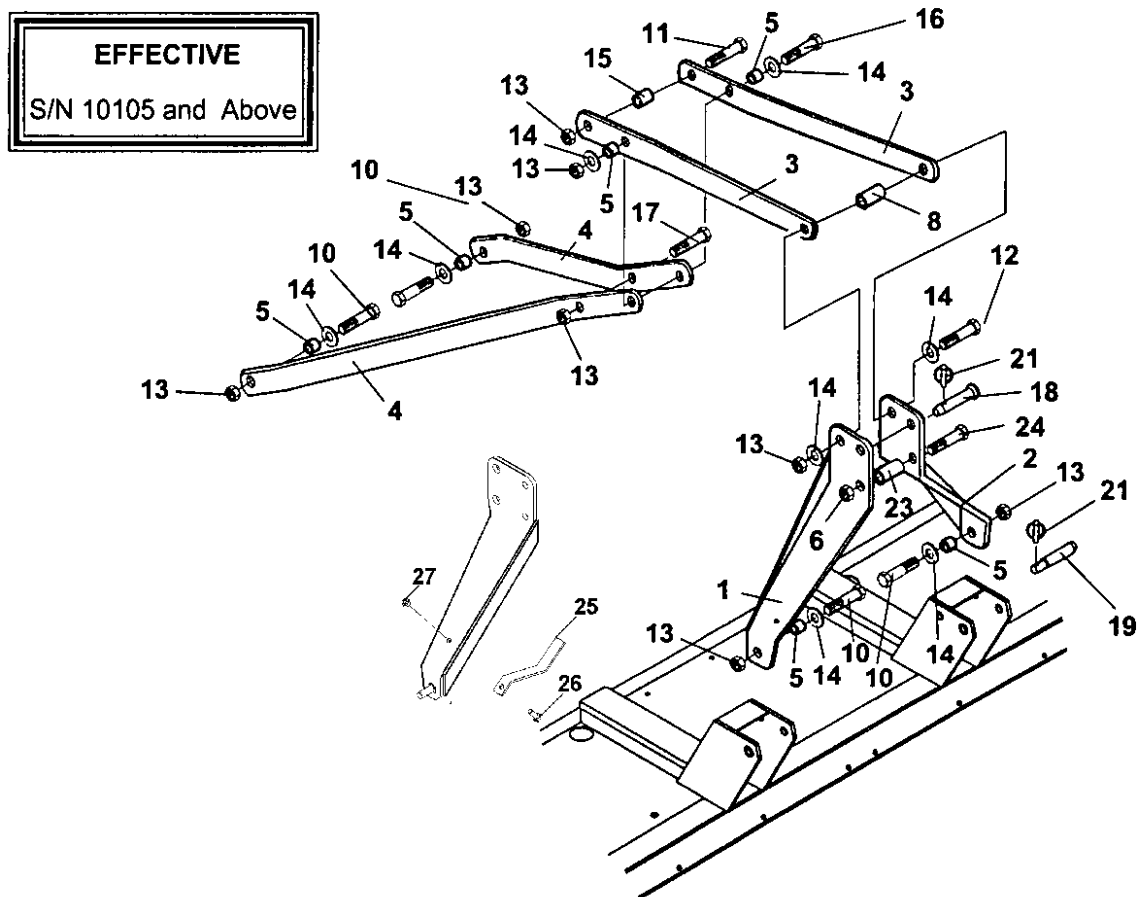


ITEM	PART NO.	QTY.	DESCRIPTION
1	0758550010	1	WLDMT. A-FRAME - (RH)
2	0758550020	1	WLDMT. A-FRAME - (LH)
3	00766516	2	BAR, FRONT BRACE
4	00766503	2	BAR, REAR BRACE
5	0758550070	6	BUSHING
6	5JRC16140	1	NUT TOPLOCK
8	0758550030	2	SPACER
10	00037100	2	BOLT
11	02959391	1	BOLT
12	00009500	2	BOLT
13	00037200	9	NUT TOPLOCK
14	5312316	8	WASHER
15	00761267	1	SPACER
16	00007800	2	BOLT
17	000037100	1	BOLT
18	3730110M	1	PIN
19	69141	2	PIN
21	2196	3	CLIP
23	0758550031	1	BUSHING
24	7AH5161436	1	BOLT
25	00778651	1	DRIVELINE HOLDER BRACKET
26	00748823	1	HHCS 1/2-13UNC 1-1/2 PL5
27	00001800	1	LOCKNUT TLM 1/2 NC PLB

TONGUE ASSEMBLY

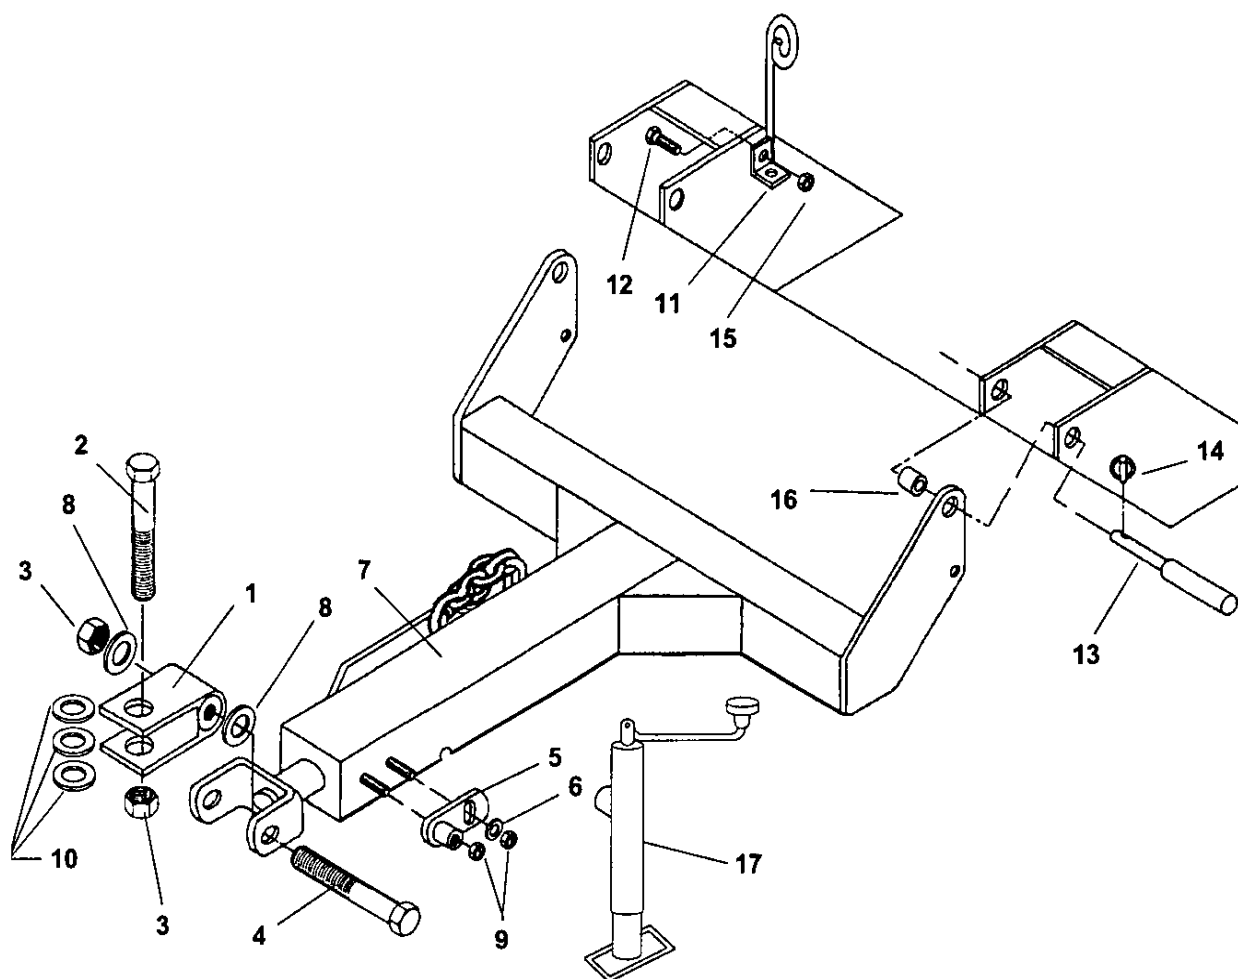


ITEM	PART NO.	QTY.	DESCRIPTION
1	00748807	1	CLEVIS WELDMENT
2	02712500	1	BOLT
3	02030300	2	NUT TOPLOCK
4	00755305	1	BOLT
5	00760941	1	WLDMT. JACK TUBE MOUNT
6	00001400	2	FLAT WASHER
7	00761133	1	TONGUE WELDMENT (S/N 10099 AND PRIOR)STRAIGHT
	00765810	1	TONGUE WELDMENT (S/N 10100 AND AFTER)
8	00757478	2	SPRING WASHER
9	00695100	2	TOP LOCKNUT
10	00759275	2	WASHER HITCH CLEVIS
11	8343	1	HOSE HOLDER
12	00748823	1	BOLT
13	00758146	2	TONGUE PIVOT PIN
14	2196	2	CLIP
15	00001800	1	TOP LOCKNUT
16	00761890	2	BUSHING
17	00772391	1	PARKING JACK

CONTROL ROD ASSEMBLY

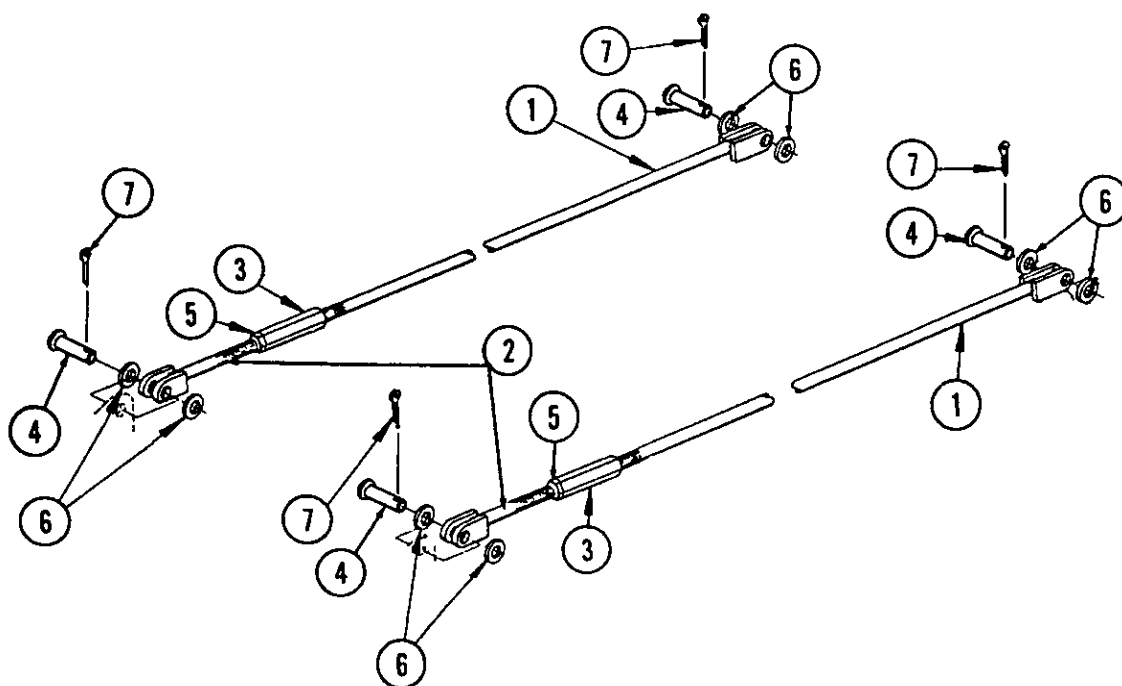


ITEM	PART NO.	QTY.	DESCRIPTION
	00762903	-	CONTROL ROD ASSEMBLY
1	00761185	2	CONTROL ROD, WLDT, L.H. THDS
2	00758643	2	CONTROL ROD, WLDT, R.H. THDS
3	00770485	2	NUT, ADJUSTING
4	651102	4	PIN, DRILLED
5	5C1490	2	NUT, JAM
6	15B1200	8	WASHER
7	00755153	4	PIN, COTTER

WHEEL ASSEMBLY

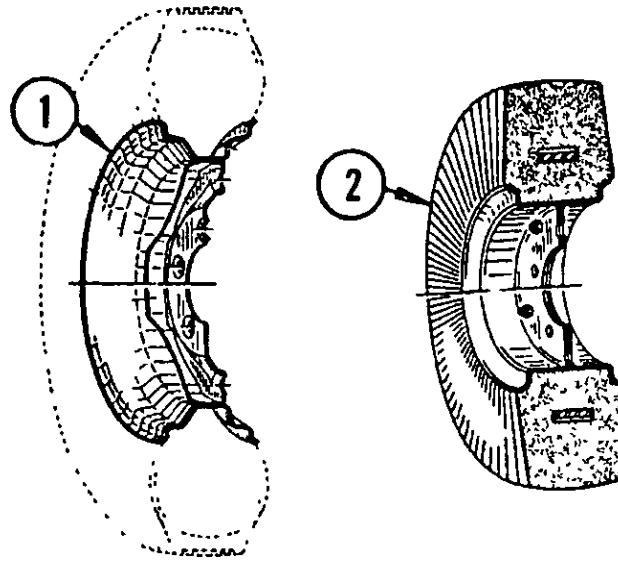

ITEM	PART NO.	QTY.	DESCRIPTION
1	00008700	2	WHEEL 15"
2	00025200	2	LAMINATED PUNCTURE-PROOF TIRE & WHEEL ASSEMBLY
	00749700		USED 14" AIRPLANE TIRE/WHEEL (NOT SHOWN)
	00749698		IMPLEMENT TIRE/WHEEL (NOT SHOWN)
	00766911A		FOAM FILLED USED AIRPLANE TIRE/WHEEL (NOT SHOWN)


FOAM FILLED USED AIRCRAFT TIRE

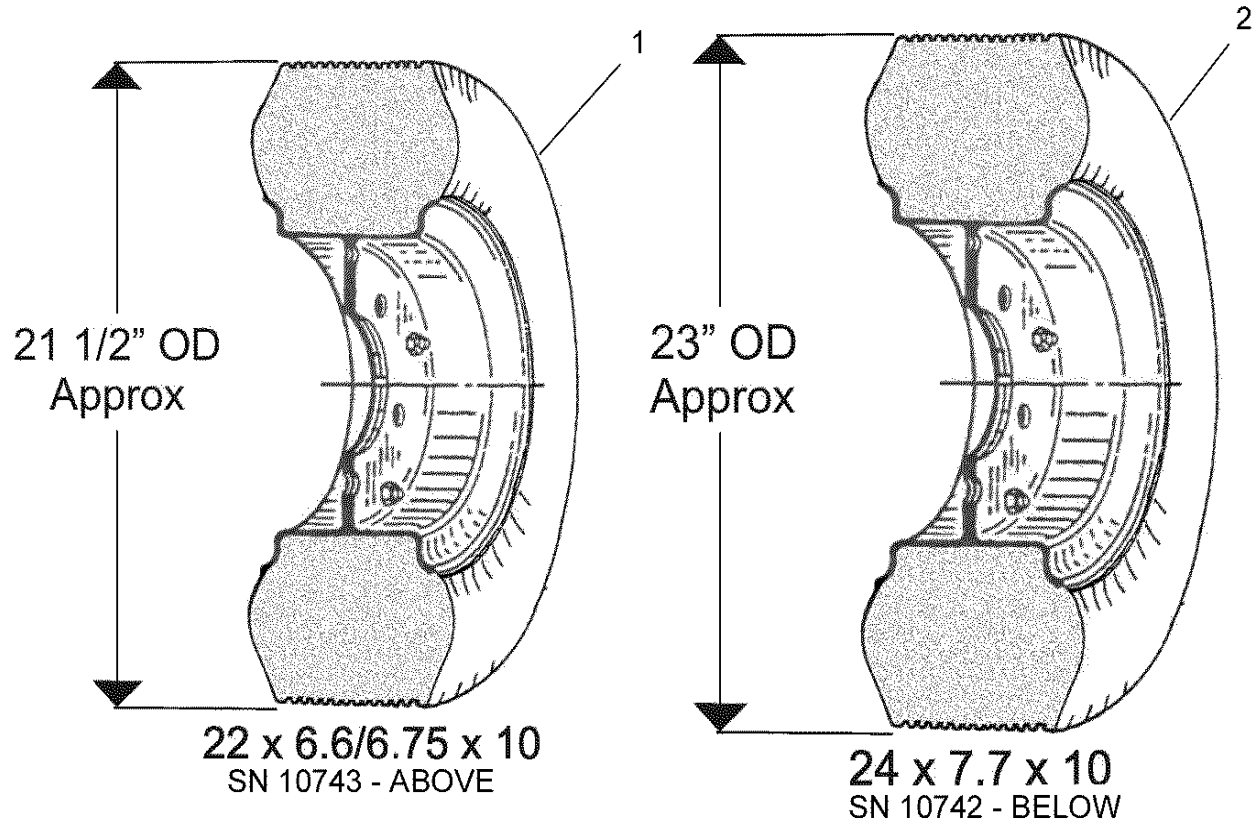


ITEM	PART NO.	QTY.	DESCRIPTION
1	00766911	-	ASY,AIRCRAFT TIRE & WHEEL (CURRENT PRODUCTION)
2	00766911A	-	ASY, AIRCRAFT TIRE & WHEEL (OBSOLETE, NOT CURRENT PRODUCTION)

THIS PAGE INTENTIONALLY LEFT BLANK

AXLE ASSEMBLY - CURRENT Rev 08-07

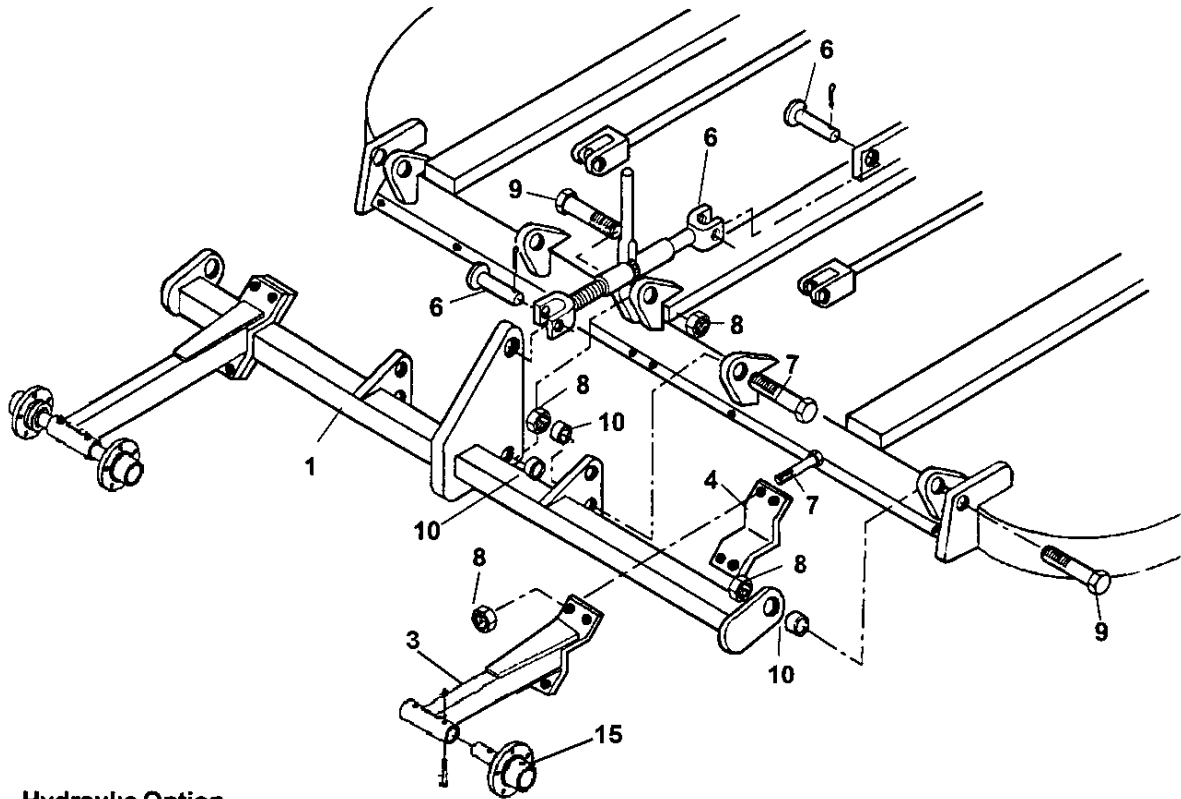


Hydraulic Option

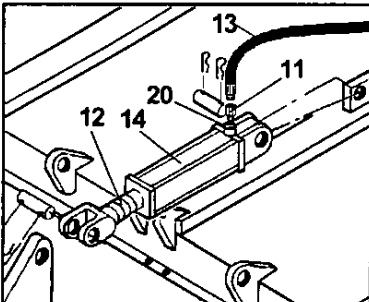

AXLE ASSEMBLY - CURRENT Rev 08-07

ITEM	PART NO.	QTY.	DESCRIPTION
1	00761104	1	CENTER AXLE WELDMENT
3	00785548	2	AXLE ARM WELDMENT
4	00761174	2	FLAT CLAMP
6	00554600	1	RATCHET JACK ASSEMBLY
7	00037100	10	BOLT
8	00037200	13	LOCKNUT
9	00007800	3	BOLT
10	8327	5	BUSHING-LEVEL & ROD
11	7329	1	HYD. FITTING W/RISTRICTOR
12	00755234	1	CONTROL SPACER KIT
13	651132	1	HYD. HOSE
14	8727A	1	HYD. CYLINDER
15	00775616A	2	HUB ASSY
18	000245	2	BOLT
19	00001800	2	TOPLOCK
20	00768343	1	ADAPTER

AXLE ASSEMBLY - S/N 10812 -BELOW Rev 08-07

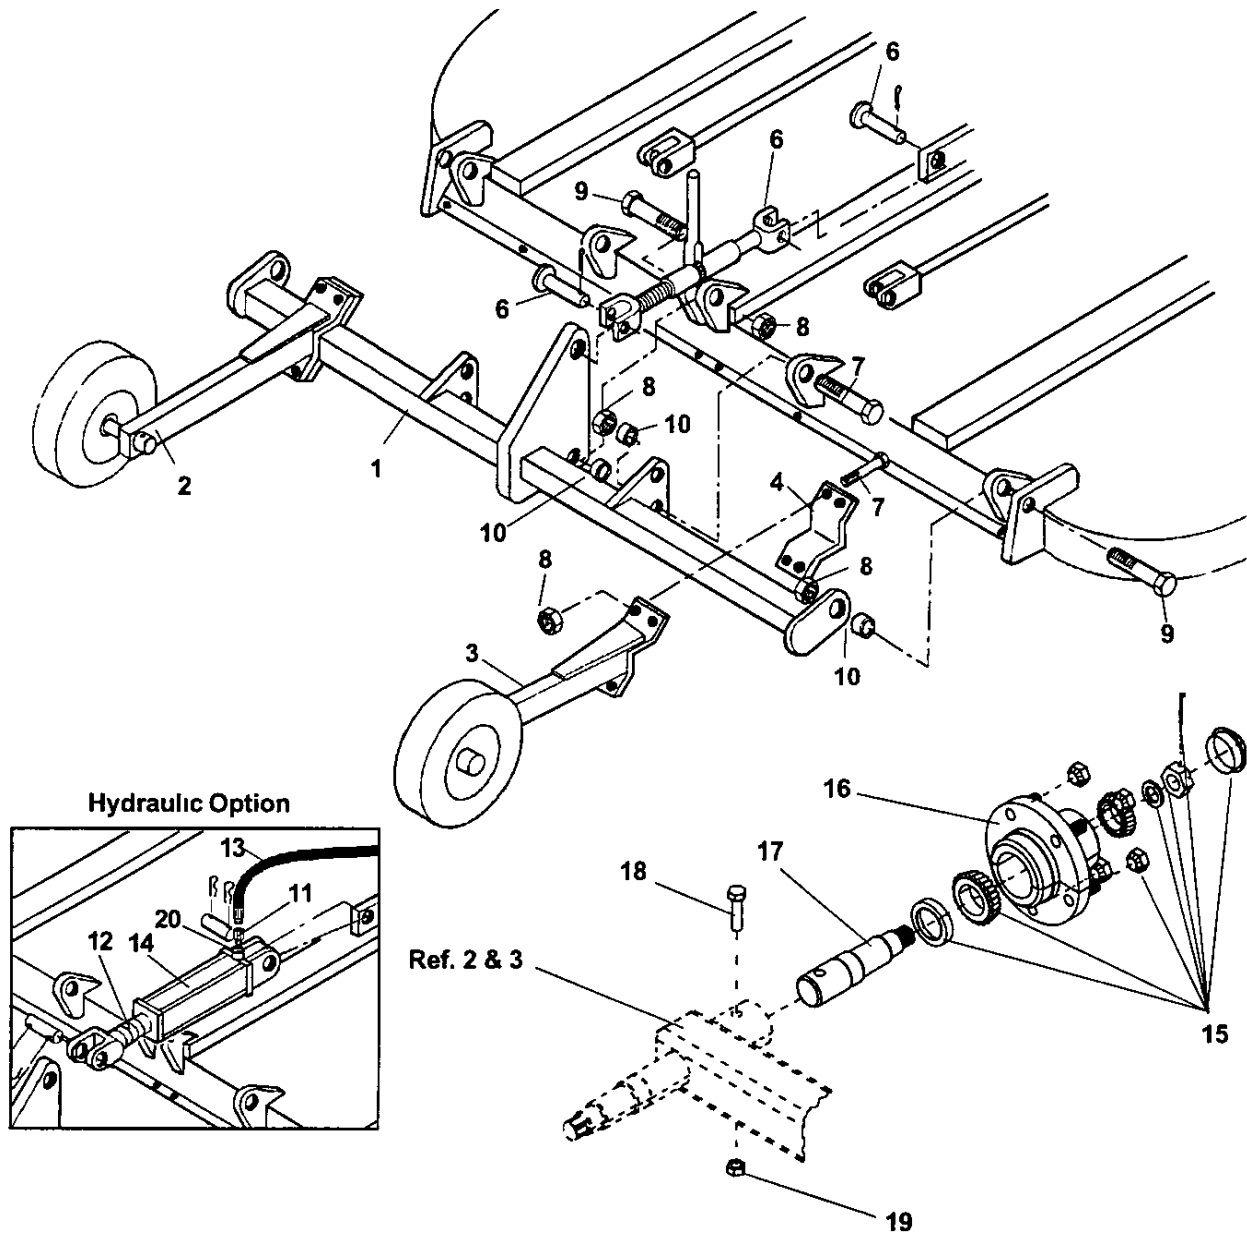


AXLE ASSEMBLY - S/N 10812 -BELOW Rev 08-07

ITEM	PART NO.	QTY.	DESCRIPTION
1	00761104	1	CENTER AXLE WELDMENT
2	00761175	1	WLDMT-AXLE ARM LH
3	00761073	2	WLDMT-AXLE ARM RH
4	00761174	2	FLAT CLAMP
6	00554600	1	RATCHET JACK ASSEMBLY
7	00037100	10	BOLT
8	00037200	13	LOCKNUT
9	00007800	3	BOLT
10	8327	5	BUSHING-LEVEL & ROD
11	7329	1	HYD. FITTING W/RISTRICTOR
12	00755234	1	CONTROL SPACER KIT
13	651132	1	HYD. HOSE
14	8727A	1	HYD. CYLINDER
15	00756528	2	WHEEL HUB ACCESS. KIT
16	00756489	2	HUB W/ CUPS & STUBS
17	00771296	2	SPINDLE,AUX.
18	000245	2	BOLT
19	00001800	2	TOPLOCK
20	00768343	1	ADAPTER

AXLE ASSEMBLY - Rev 03-06


**S/N 10469
and Below**

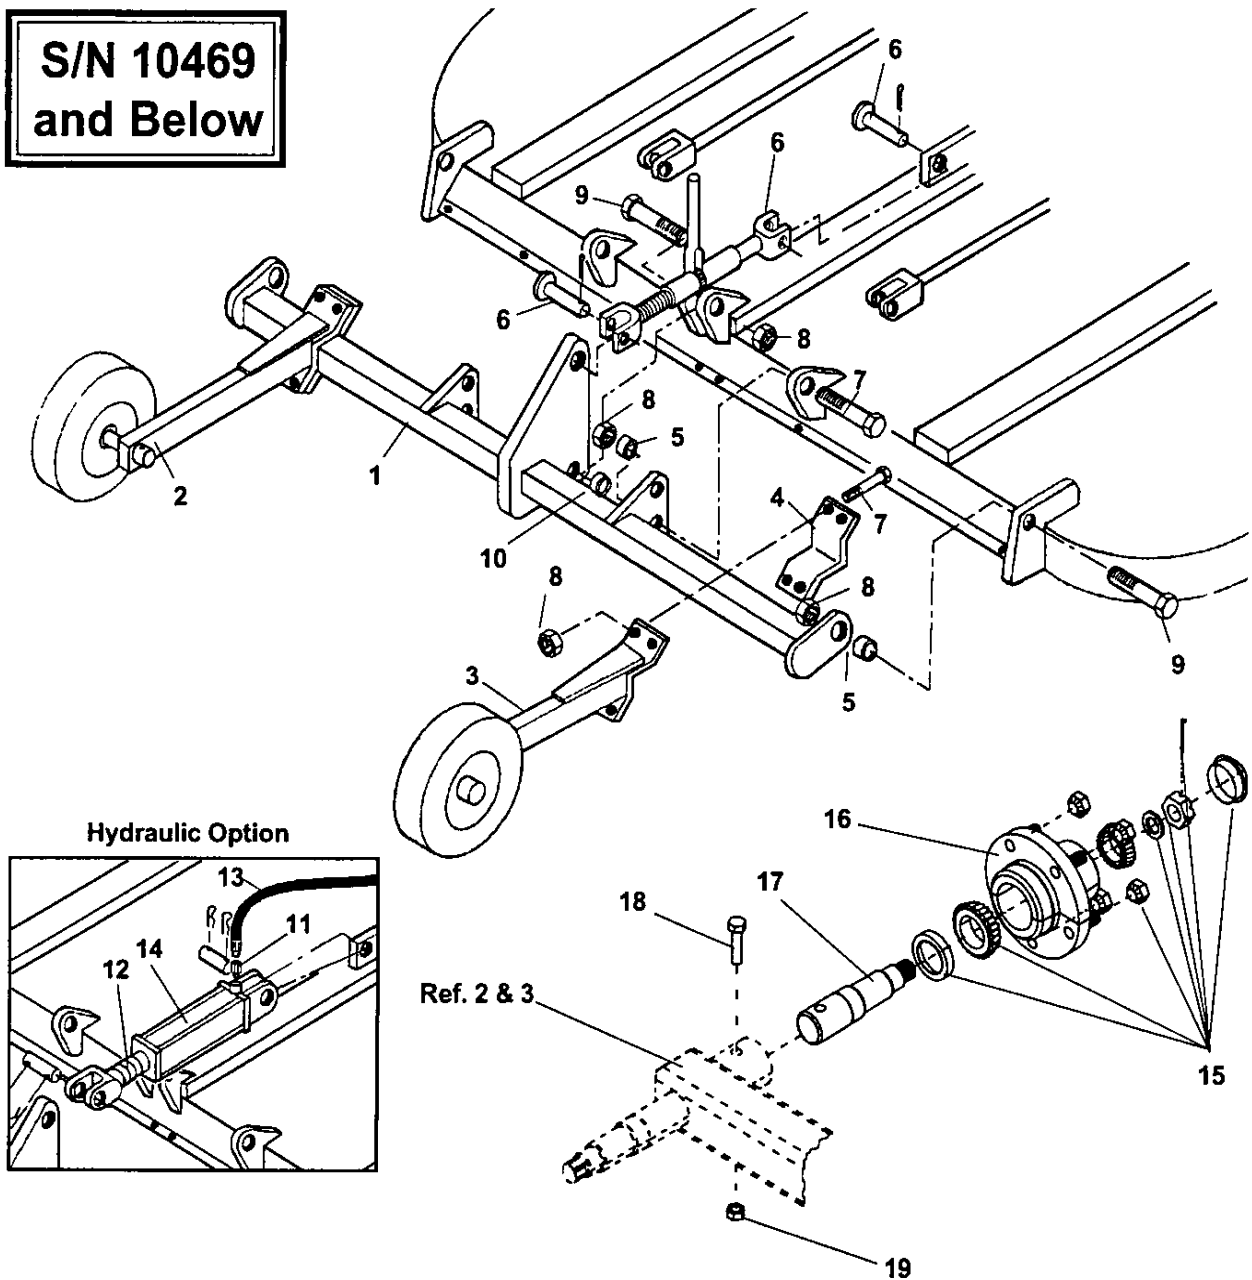

AXLE ASSEMBLY - Rev 03-06


ITEM	PART NO.	QTY.	DESCRIPTION
1	00761104	1	CENTER AXLE WELDMENT
2	00761175	1	LEFT HAND AXLE ARM WELDMENT
3	00761073	1	RIGHT HAND AXLE ARM WELDMENT
4	00761174	2	FLAT CLAMP
5	00759561	4	BUSHING
6	00554600	1	RATCHET JACK ASSEMBLY
7	00037100	12	BOLT
8	00037200	13	LOCKNUT
9	00007800	1	BOLT
10	8327	1	BUSHING-LEVEL & ROD
11	7329	1	HYD. FITTING W/RISTRICTOR
12	00755234	1	CONTROL SPACER KIT
13	651132	1	HYD. HOSE
14	8727	1	HYD. CYLINDER
15	00756528	2	WHEEL HUB ACCESSORY KIT
16	00756489	2	HUB (WITH CUPS AND STUDS)
17	00771296	2	SPINDLE SHAFT
18	000245	2	BOLT
19	00001800	2	TOPLOCK
20	00777963	1	PLATE, TRANSPORT LOCK

WHEEL HUB ASSEMBLY -CURRENT Rev 08-07

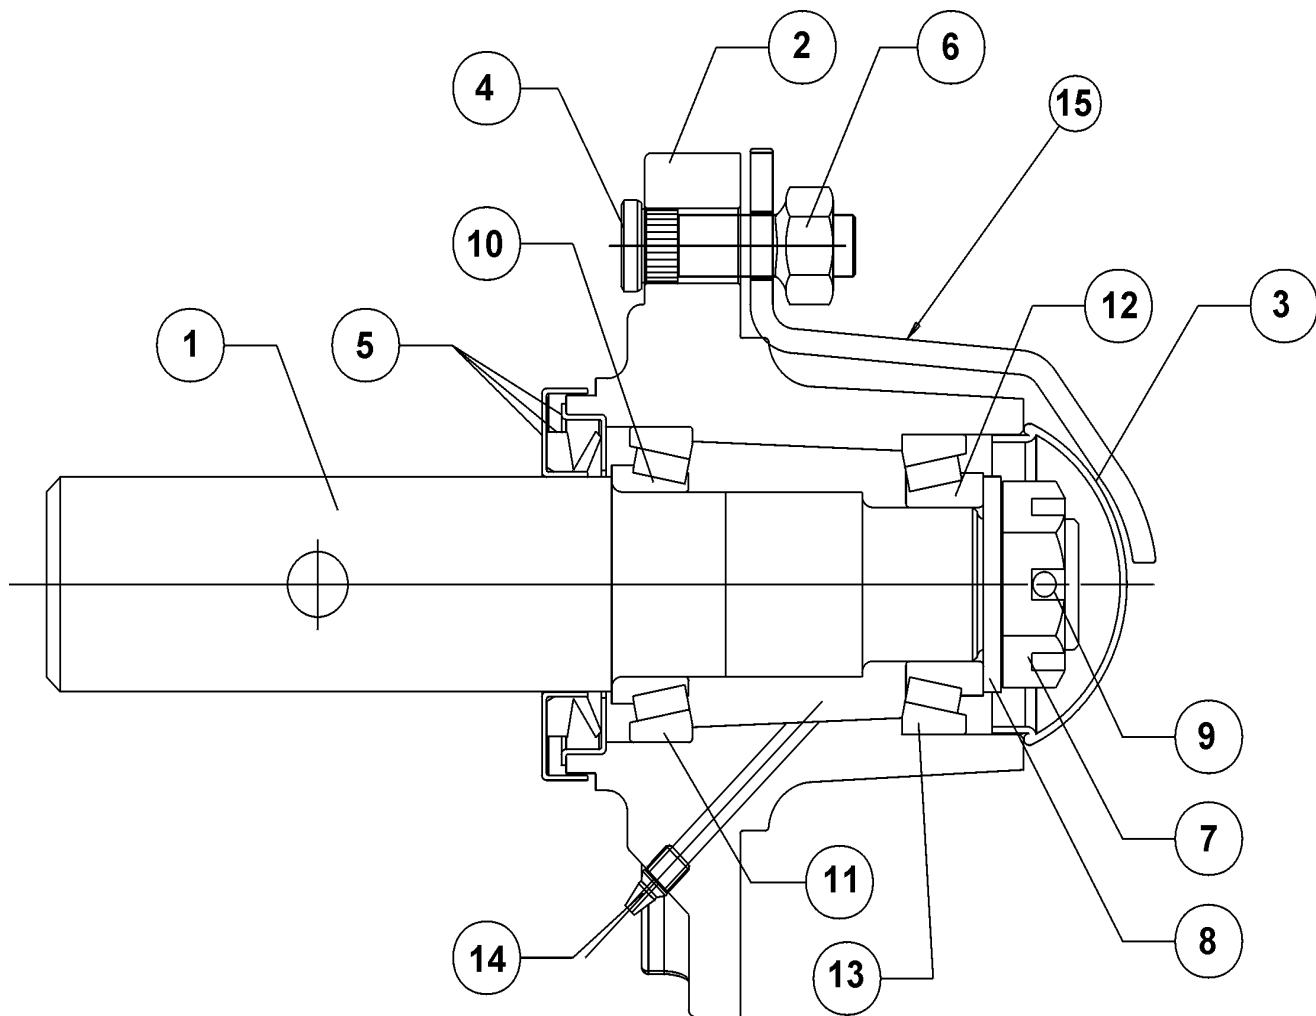


ITEM	PART NO.	QTY.	DESCRIPTION
	00775616A	1	HUB & SPINDLE ASSY
1	00774821	1	SPINDLE SINGLE WHEEL
2	00779456	1	ASY,WHEEL HUB - W/CUPS & STUDS
3	00756492	1	DUST CAP
4	13198	5	BOLT, HUB
5	00778108	1	SEAL PROTECTOR
6	00756014	5	ROTOR
7	00756490	1	NUT SLOTTED THIN 1 NF PLC
8	00756493	1	WASHER
9	00026200	1	PIN,COTTER 5/32 X 1-1/2
10	00750434	1	BEARING CONE INSIDE
11	00756576	1	BEARING CUP OUTSIDE
12	0371242102	1	CONE, BEARING
13	00756577	1	BEARING CUP INSIDE
14	00003500	1	ZERK FITTING 1/8 STRAIGHT
15	00779455	1	RETAINER,HUB CAP
	00779456	-	ASY,WHEEL HUB - W/CUPS & STUDS

WHEEL HUB ASSEMBLY -BELOW Rev 08-07

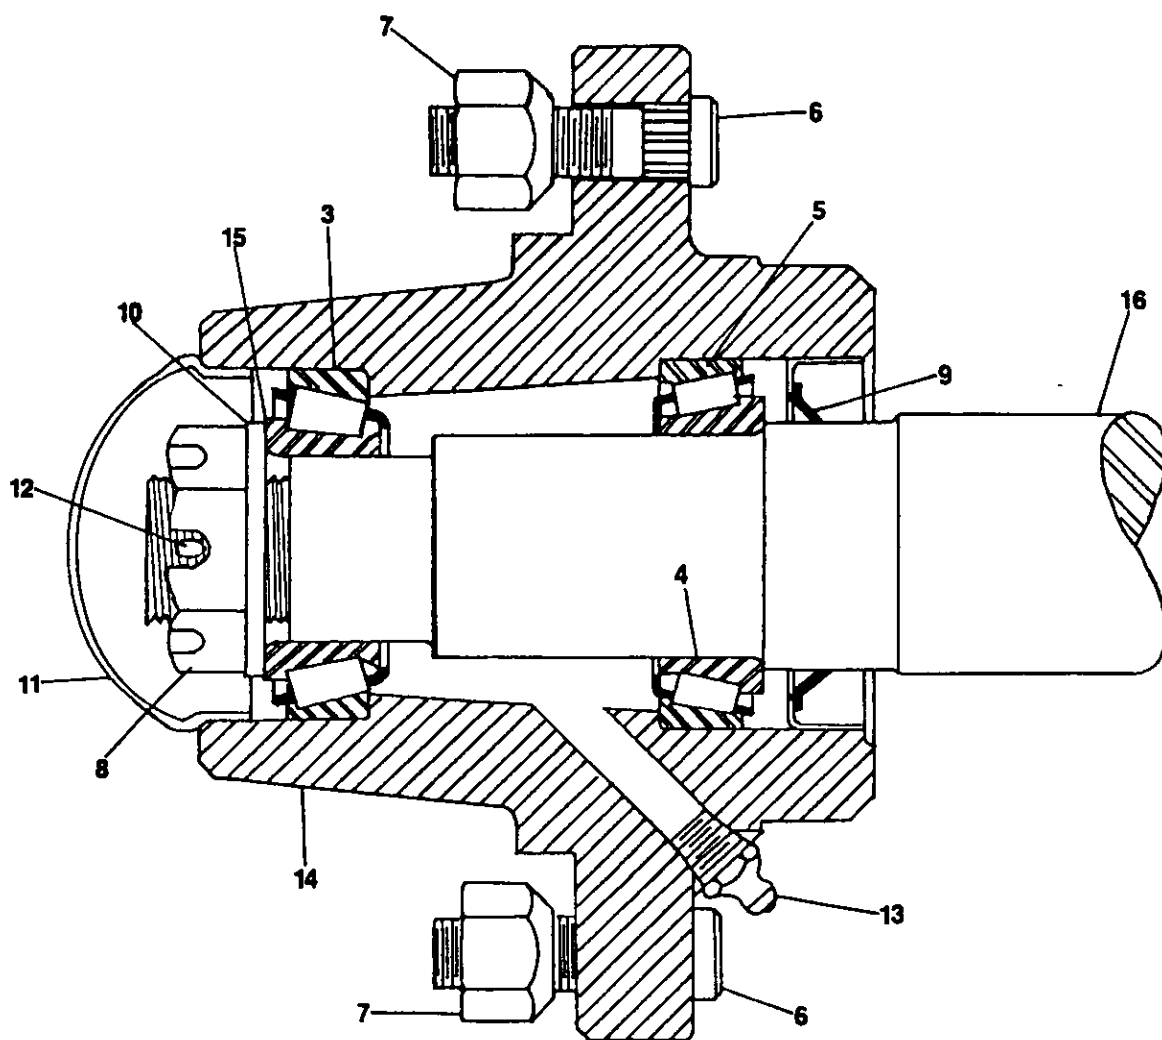


ITEM	PART NO.	QTY.	DESCRIPTION
3	00756576	1	BEARING CUP(OUTSIDE)
4	00750434	1	BEARING CONE(INSIDE)
5	00756577	1	BEARING CUP(INSIDE)
6	00756488	5	STUD BOLT
	13198		.616
7	00750614	5	NUT
8	00756490	1	NUT WHEEL HUB
9	02957044	1	OIL SEAL
10	00756493	1	WASHER
11	00756492	1	DUST CAP
12	00000400	1	COTTER PIN
13	00003500	1	GREASE FITTING
14	00756489	1	HUB W/CUPS & STUDS
15	0371242102	1	BEARING CONE(OUTSIDE)
16	00756489	ref	HUB(W/CUPS & STUDS)
	00756528	ref	WHEEL HUB ACCESSORY KIT

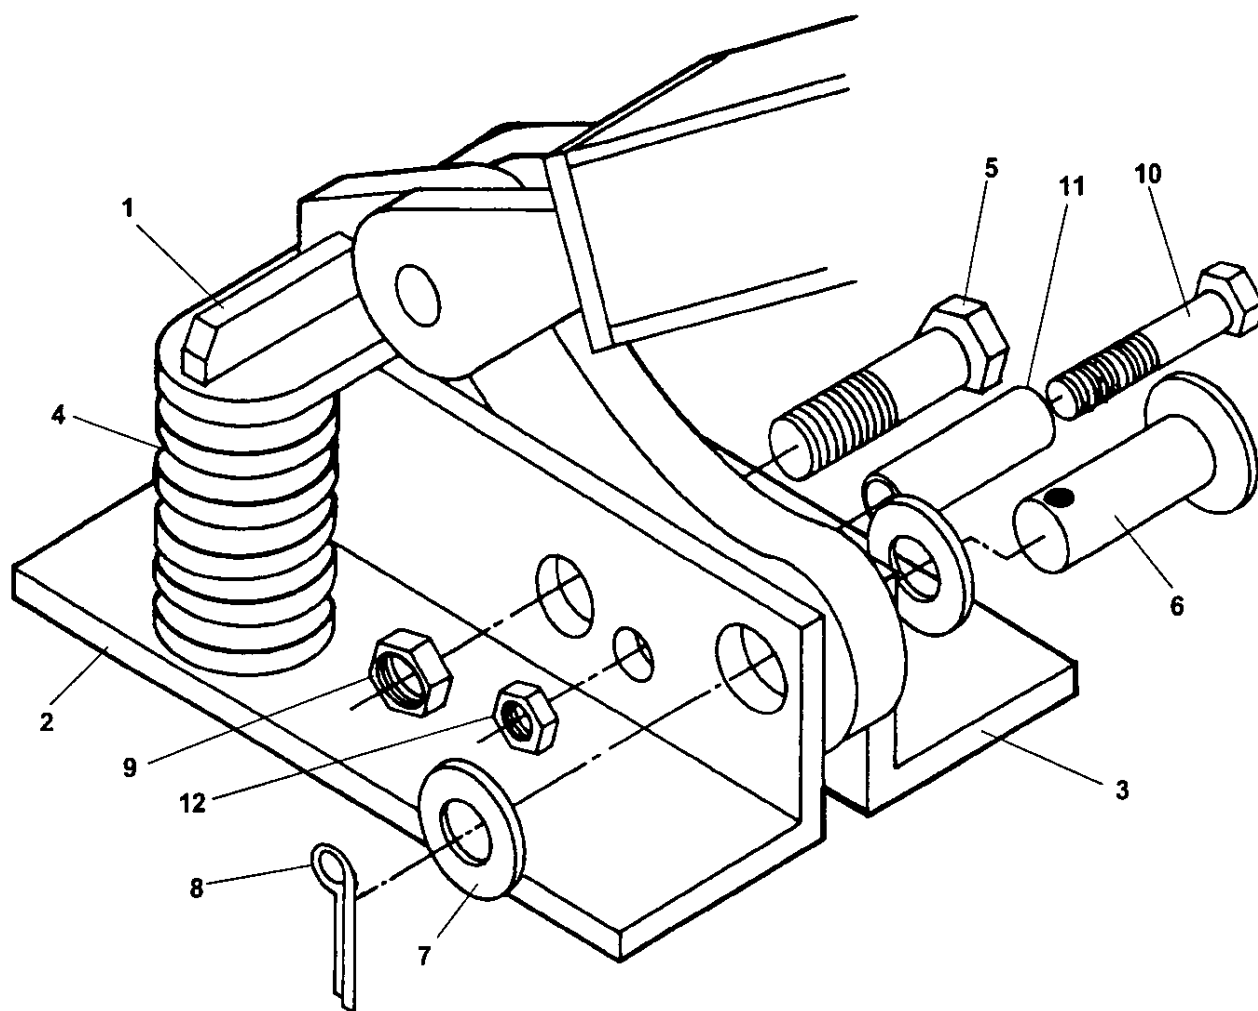


ITEM	PART NO.	QTY.	DESCRIPTION
	00759191	-	SPRING SHOCK ASSEMBLY
1	00759190	1	SPRING SHOCK WELDMENT
2	00759189	1	ANGLE BRACKET WELDMENT LH
3	00759188	1	ANGLE BRACKET WELDMENT RH
4	371063A	2	SPRING
5	02782100	1	BOLT
6	8354	1	PIN-HYD. CYLINDER
7	02822500	1	FLAT WASHER
8	00606000	1	COTTER PIN
9	02030300	1	LOCKNUT
10	00750952	1	BOLT
11	00761199	1	TUBE SPACER
12	00695100	1	LOCKNUT

CASTER WHEEL AND HUB ASSEMBLY S/N 10730 -CURRENT Rev 08-04

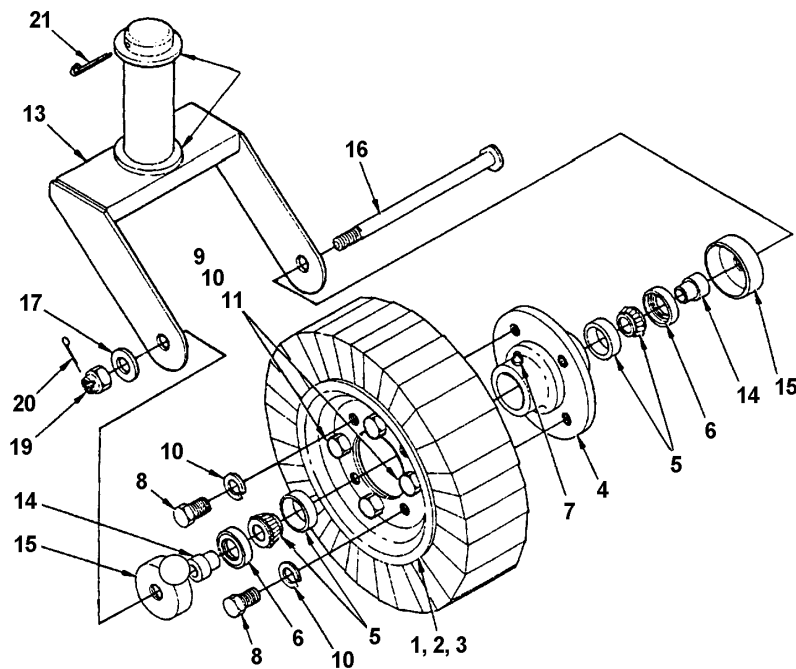


ITEM	PART NO.	QTY.	DESCRIPTION
	00776220	1	ASSY CASTER FORK & WHEEL
1	373024H	1	WHEEL & TIRE ASSY
2	373024A	1	TIRE, 4 X 8 LAMINATED
3	373024B	1	WHEEL 4 X 8 W/NUTS
4	00776214	1	HUB 4 BOLT
5	00776213	2	BEARING
6	00776219	2	SEAL OIL 40 X 62 X 8
7	00772082	1	NIPPLE, GREASE M8X1
8	00776216	4	BOLT M12 X 1.5 X 25
9	7A6166	4	HHCS 3/8 NC 3/4
10	00776215	4	LUG BOLT FLAT WASHER
11	00012101	4	LOCKWASHER 3/8 PL HVY
12	00013901	4	NUT HEX 3/8 NC PL
13	0585020210A	1	WLDMT CASTER FORK
14	00772017	2	BUSHING SPINDLE STEP
15	00772018	2	DUST CAP
16	00776211	1	BOLT SPINDLE M24 X 2 X 186
17	02822500	1	FLATWASHER 1 PL STD
18	15B2400	2	FLATWASHER NAR 1-1/2 PL
19	00776212	1	NUT SPINDLE M24 X 2
20	00771620	1	PIN, COTTER 5/32X2-1/2 PL
21	00758899	1	PIN COTTER 3/8X2-1/2 PL EXTEND

CASTER ASSEMBLY - LIFT TYPE S/N 10729 -BELOW Rev 08-04

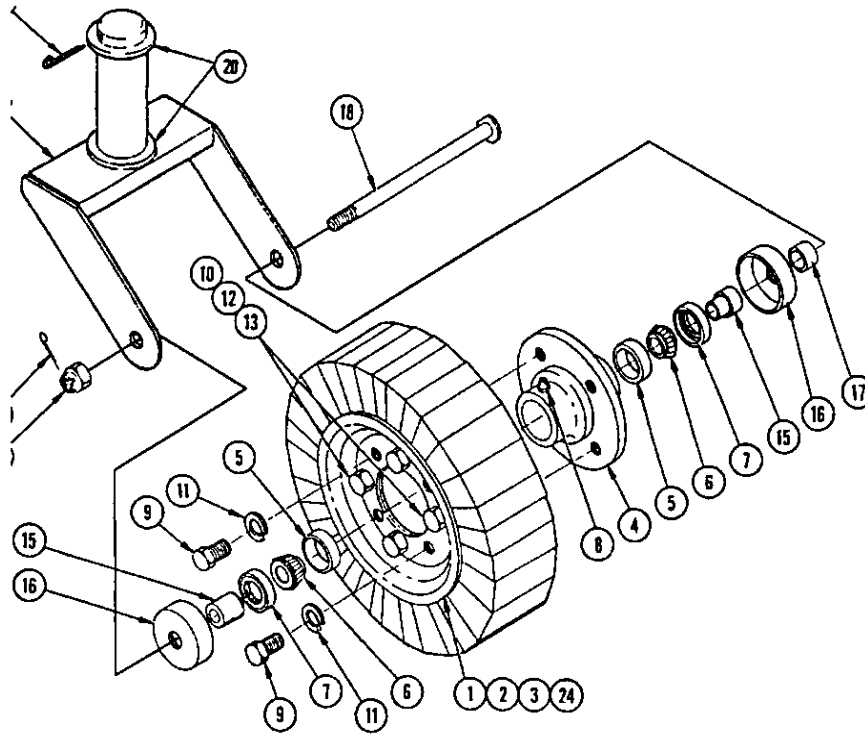


ITEM	PART NO.	QTY.	DESCRIPTION
	0585020200	-	CASTER WHEEL ASSEMBLY (W/CASTER FORK)
	0585020210	-	CASTER FORK ASSEMBLY (NOT SHOWN)
1	373024	1	TIRE & WHEEL ASSEMBLY
2	373024A	1	TIRE
3	373024B	1	8" DIA. WHEEL (BOLTED ASSY)
4	373024D	1	HUB ASSEMBLY (WITH BEARINGS AND SEALS)
5	00750621	2	BEARING CUP
6	373024F	2	BEARING CONE
7	373024E	2	GREASE SEAL
8	00752670	1	GREASE FITTING (THREADED)
	00600000	1	GREASE FITTING (DRIVE IN)
9	7A8208	4	BOLT
10	7A6166	4	BOLT
11	00001300	4	LOCKWASHER
12	00012101	4	LOCKWASHER
13	00013901	4	NUT
14	0585020210	1	CASTER FORK WELDMENT
15	37302C2C	2	BUSHING
16	37302D2B	2	DUST CAP HUB
17	511016	2	SPACER BUSHING
18	37302D2A	1	SPINDLE BOLT
19	15B1200	1	WASHER
20	15B2400	2	WASHER
21	5E12160	1	CASTLE NUT
22	00026200	1	COTTER PIN
23	00758899	1	COTTER PIN
24	373024H	1	TIRE AND WHEEL ASSEMBLY (BOLTED ASSY. ONLY, LESS HUB)
	(REF)		

TAILWHEEL ASSEMBLY-LIFT MODEL

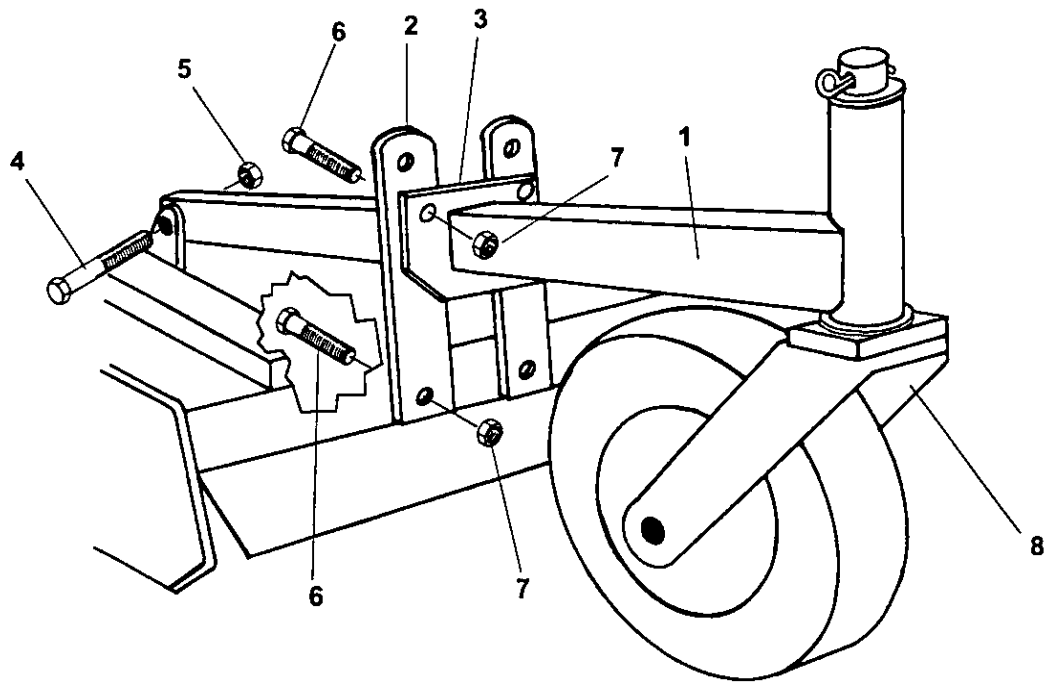

ITEM	PART NO.	QTY.	DESCRIPTION
1	00761301	2	TAILWHEEL BEAM WELDMENT
2	4744	2	BEAM SUPPORT WELDMENT
3	4745	2	BRACKET POSITIONING TAILWHEEL
4	02845800	2	BOLT
5	00695100	2	NUT TOPLOCK
6	00748823	8	BOLT
7	00001800	8	NUT
8	0585020210	2	CASTER FORK


DRIVELINE LIFT TYPE - 540 RPM

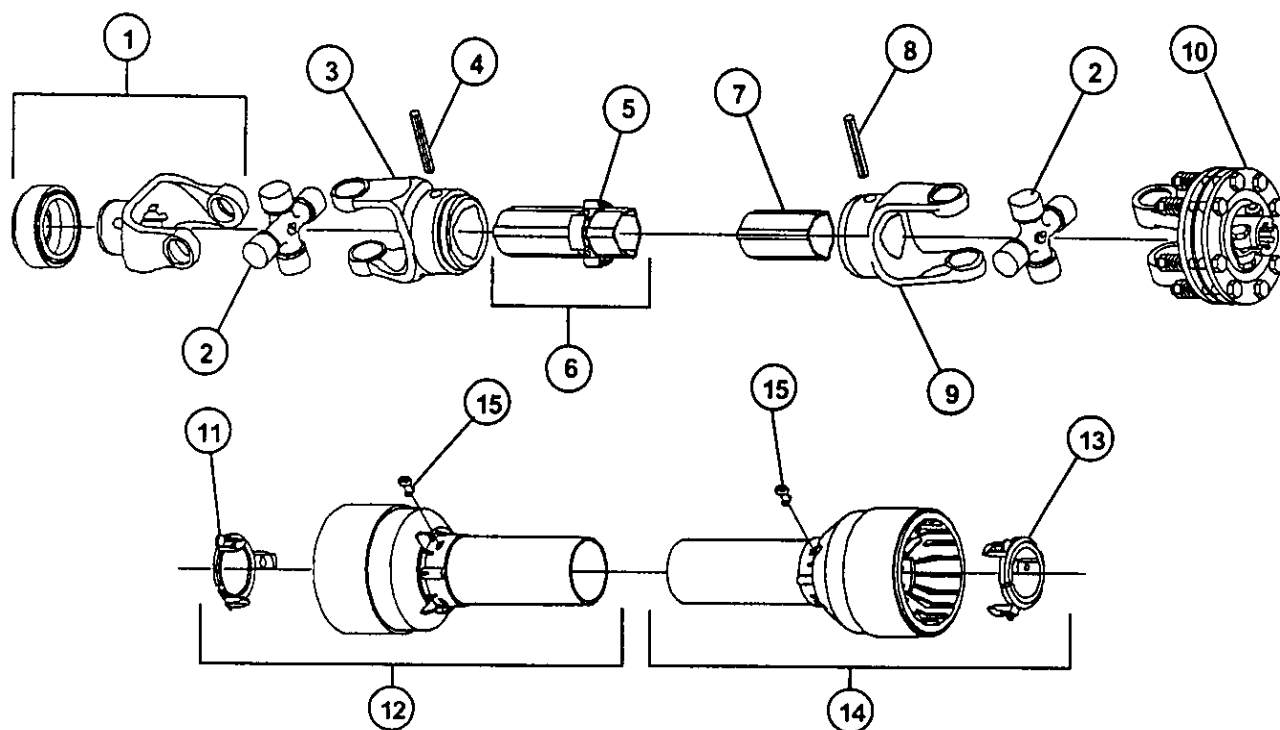

Order replacement parts from this page if the profile of your driveline is triangle shaped.

ITEM	PART NO.	QTY.	DESCRIPTION
1	00752883	1	COMPLETE COLLAR YOKE
2	00752896	2	CROSS JOURNAL SET
3	00754154	1	OUTER YOKE
4	00754167	1	ROLL PIN FOR OUTER TUBE
5	00772529	1	BUSHING WITH GREASE FITTING
6	00761211	1	COMPLETE OUTER TUBE
7	00761212	1	INNER TUBE
8	00754167	1	ROLL PIN FOR INNER TUBE
9	00754153	1	INNER YOKE
10	00756075	1	COMPLETE SLIP CLUTCH
11	00754332	1	RETAINING COLLAR FOR OUTER TUBE
12	00761215	1	OUTER SHIELD
13	00754331	1	RETIANING COLAIR FOR INNER TUBE
14	00761216	1	INNER SHIELD
15	00764330	6	BOLT

DRIVELINE LIFT TYPE - 1000 RPM

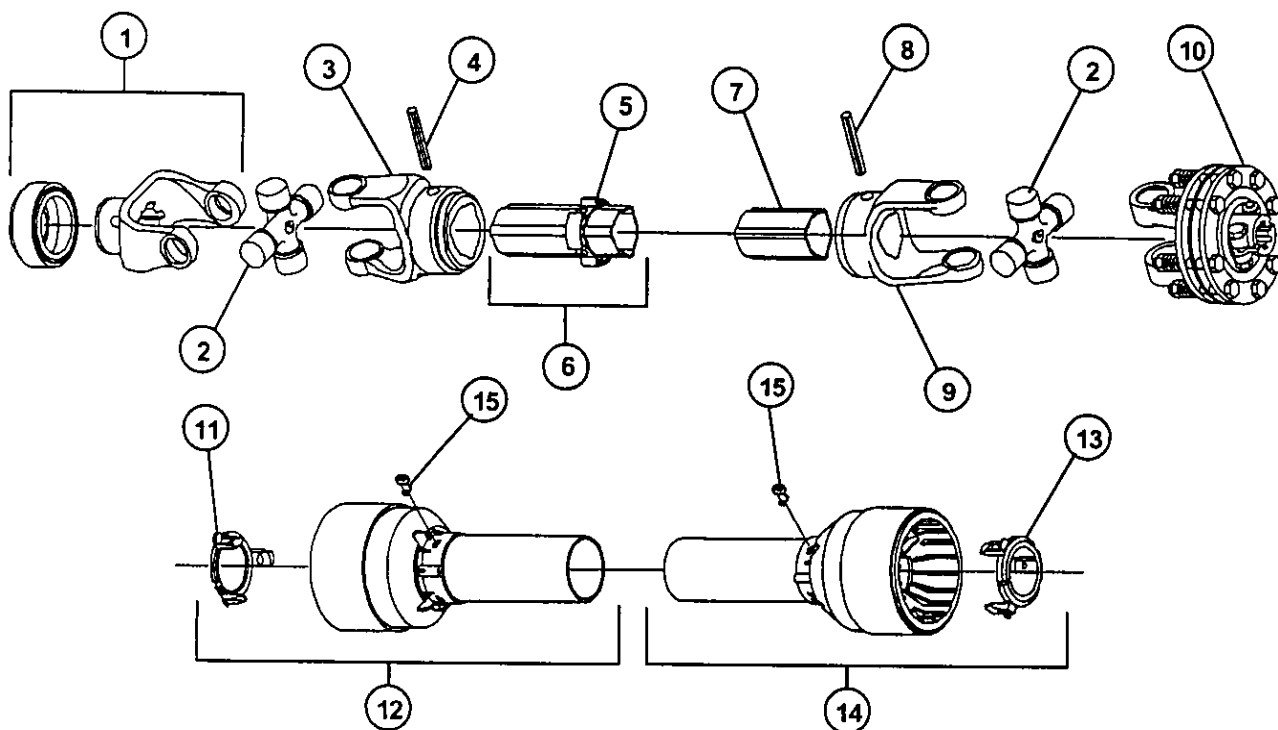


Order replacement parts from this page if the profile of your driveline is triangle shaped.

ITEM	PART NO.	QTY.	DESCRIPTION
1	00760002	1	COMPLETE COLLAR YOKE
2	00752896	2	CROSS JOURNAL SET
3	00754154	1	OUTER YOKE
4	00754167	1	ROLL PIN FOR OUTER TUBE
5	00772529	1	BUSHING WITH GREASE FITTING
6	00761211	1	COMPLETE OUTER TUBE
7	00761212	1	INNER TUBE
8	00754167	1	ROLL PIN FOR INNER TUBE
9	00754153	1	INNER YOKE
10	00756075	1	COMPLETE SLIP CLUTCH
11	00754332	1	RETAINING COLLAR FOR OUTER TUBE
12	00761215	1	OUTER SHIELD
13	00754331	1	RETIANING COLALR FOR INNER TUBE
14	00761216	1	INNER SHIELD
15	00754330	6	BOLT

DRIVELINE LIFT TYPE - 540 RPM


Order replacement parts from this page if the profile of your driveline is lemon shaped.

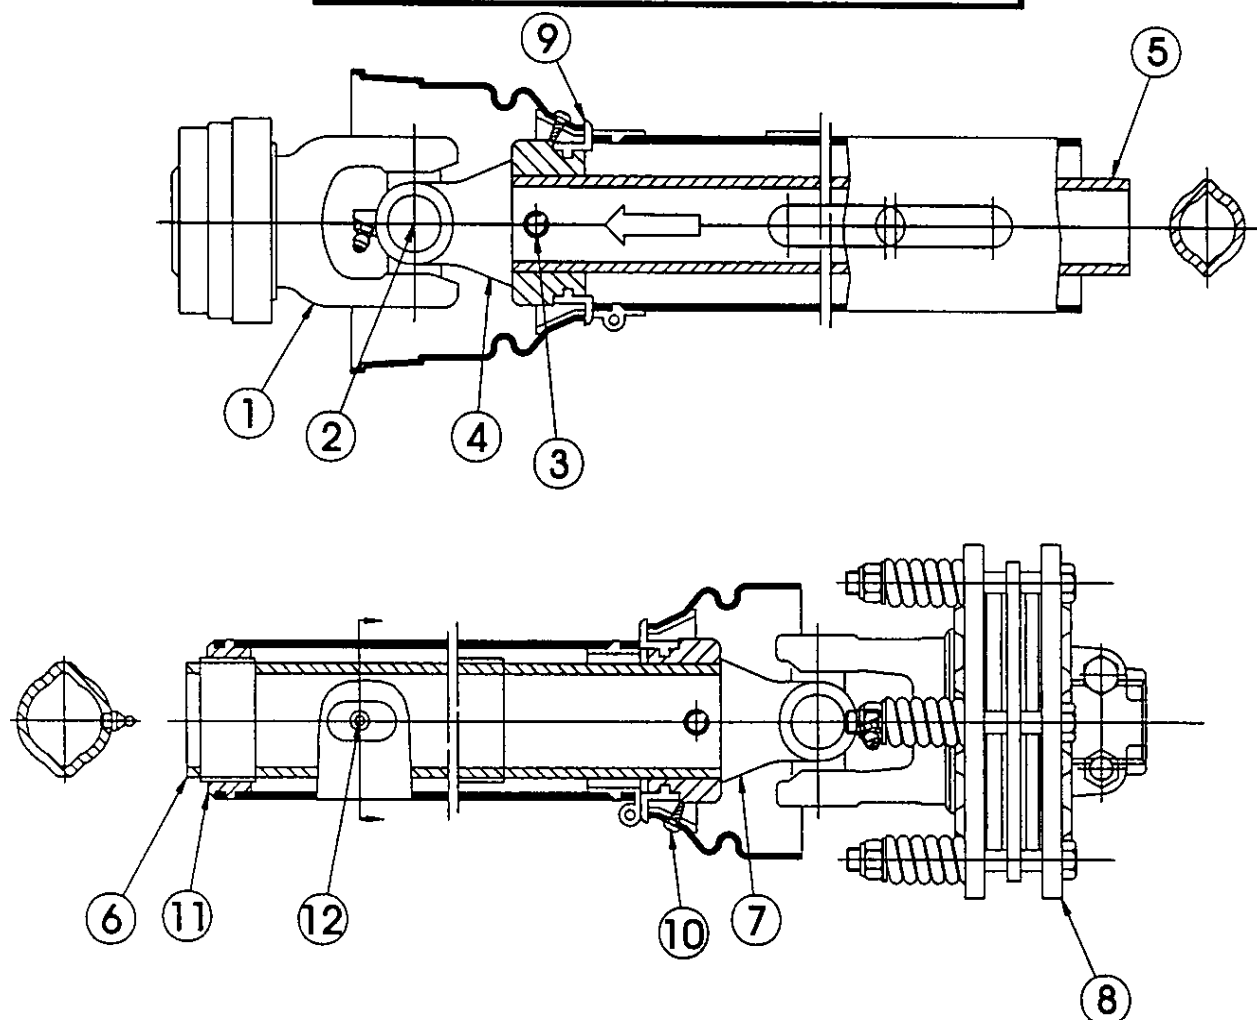

ITEM	PART NO.	QTY.	DESCRIPTION
	00775369	-	DRIVELINE ASSEMBLY (540 RPM)
1	00775353	1	YOKE
2	W279R	2	CROSS & BEARING KIT
3	8384	2	SPRING PIN
4	00775317	1	INBOARD YOKE
5	0921000332	1	INNER PROFILE
6	00775378	1	PROFILE & SLEEVE
7	00775318	1	INBOARD YOKE
8	00775331	1	FRICTION CLUTCH
9	8393	2	BEARING RING
10	4797	2	SCREW
11	8974	1	SUPPORT BEARING
12	1416601	1	GREASE FITTING
	00775372	1	OUTER SHIELD HALF
	00775373	1	INNER SHIELD HALF
	00767954	1	YOKE QD KIT

DRIVELINE LIFT TYPE - 1000 RPM


Order replacement parts from this page if the profile of your driveline is lemon shaped.

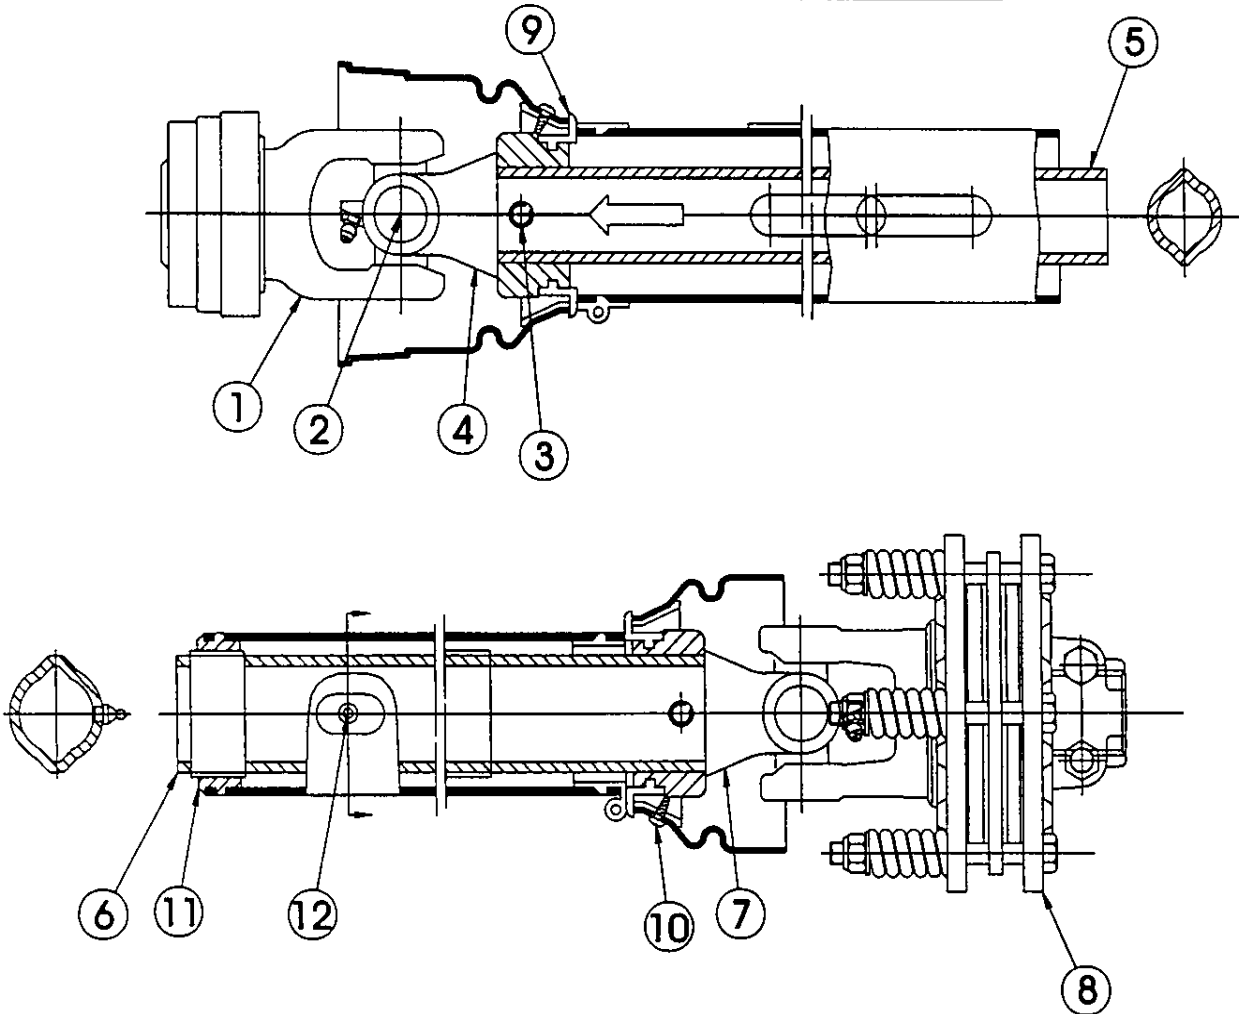

ITEM	PART NO.	QTY.	DESCRIPTION
	00775435	-	DRIVELINE ASSEMBLY (1000 RPM)
1	00761762	1	YOKE
2	W279R	2	CROSS & BEARING KIT
3	8384	2	SPRING PIN
4	00775317	1	INBOARD YOKE
5	0921000332	1	INNER PROFILE
6	00775378	1	PROFILE & SLEEVE
7	00775318	1	INBOARD YOKE
8	00775331	1	FRICTION CLUTCH
9	8393	2	BEARING RING
10	4797	2	SCREW
11	8974	1	SUPPORT BEARING
12	1416601	1	GREASE FITTING
	00775372	1	OUTER SHIELD HALF
	00775373	1	INNER SHIELD HALF
	00767953	1	YOKE QD KIT

DRIVELINE PULL TYPE - 540 RPM


Order replacement parts from this page if the profile of your driveline is triangle shaped.

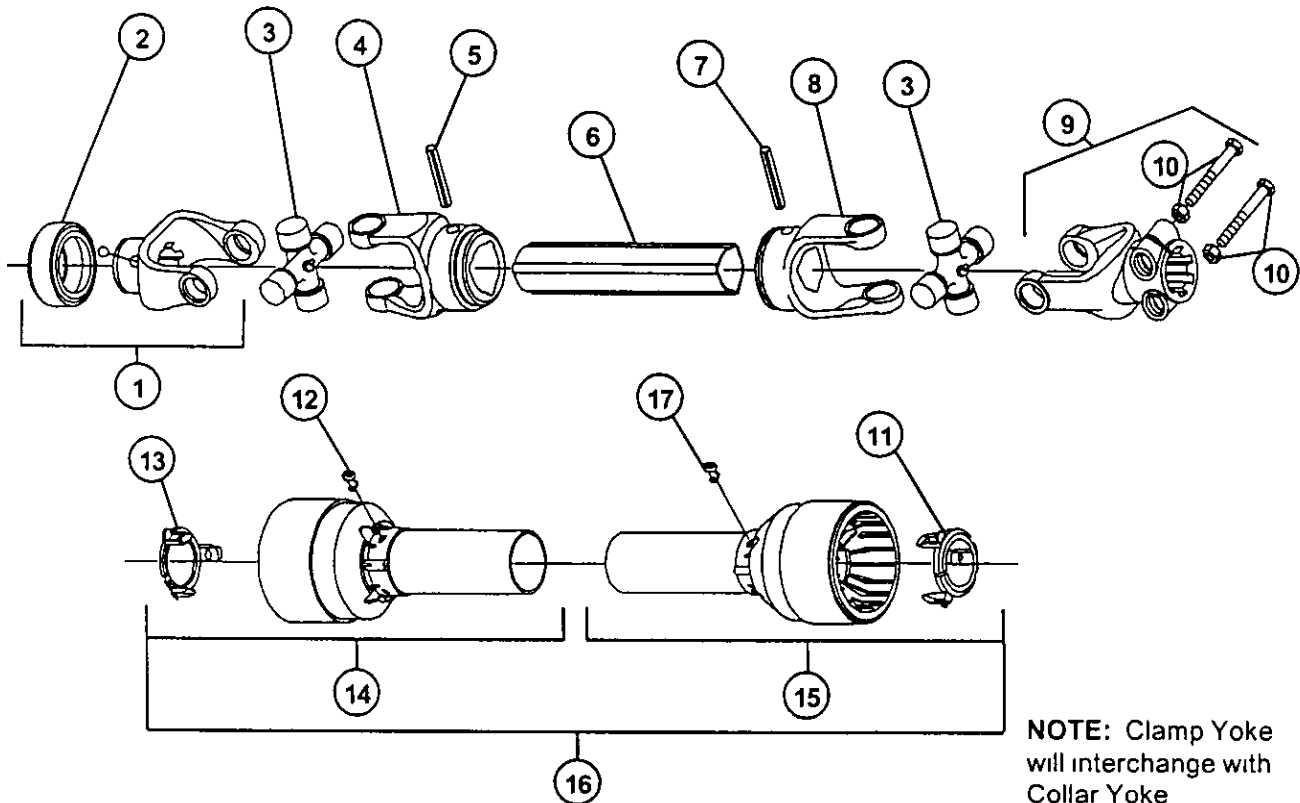

ITEM	PART NO.	QTY.	DESCRIPTION
	00760898A	-	DRIVELINE PULL TYPE(540 RPM)
1	00752883	1	COMPLETE COLLAR YOKE
2	00757144	1	COLLAR KIT
3	00752896	2	CROSS JOURNAL SET
4	00772793	1	OUTER YOKE
5	00754167	1	ROLL PIN FOR OUTER TUBE
6	00772795	1	INNER TUBE
7	00754167	1	ROLL PIN FOR INNER TUBE
8	00754153	1	INNER YOKE
9	00772530	1	COMPLETE CLAMP YOKE
10	00772531	2	NUT & BOLT SET
11	00754331	1	RETAINING COLLAR FOR INNER TUBE
12	00754330	6	BOLT
13	00754332	1	RETAINING COLLAR FOR OUTER TUBE
14	00773046	1	OUTER SHIELD
15	00773047	1	INNER SHIELD
16	00772794	1	COMPLETE SHIELD


DRIVELINE PULL TYPE - 1000 RPM

Order replacement parts from this page if the profile of your driveline is triangle shaped.

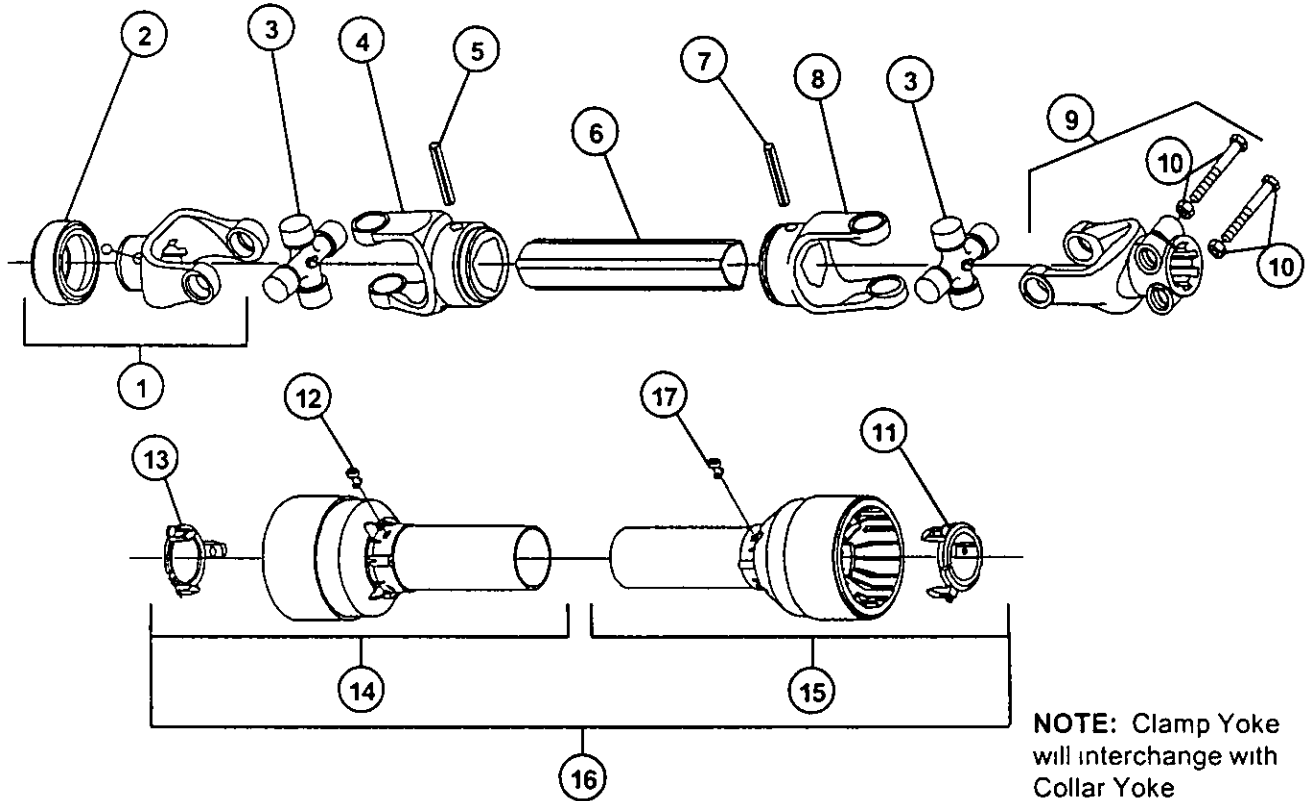


ITEM	PART NO.	QTY.	DESCRIPTION
	00760902A	-	DRIVELINE PULL TYPE(1000 RPM)
1	00760002	1	COMPLETE COLLAR YOKE
2	00757144	1	COLLAR KIT
3	00752896	2	CROSS JOURNAL SET
4	00772793	1	OUTER YOKE
5	00754167	1	ROLL PIN FOR OUTER TUBE
6	00772795	1	INNER TUBE
7	00754167	1	ROLL PIN FOR INNER TUBE
8	00754153	1	INNER YOKE
9	00772530	1	COMPLETE CLAMP YOKE
10	00772531	2	NUT & BOLT SET
11	00754331	1	RETAINING COLLAR FOR INNER TUBE
12	00754330	6	BOLT
13	00754332	1	RETAINING COLLAR FOR OUTER TUBE
14	00773046	1	OUTER SHIELD
15	00773047	1	INNER SHIELD
16	00772794	1	COMPLETE SHIELD

DRIVELINE - PULL TYPE 540 RPM Rev 08-07

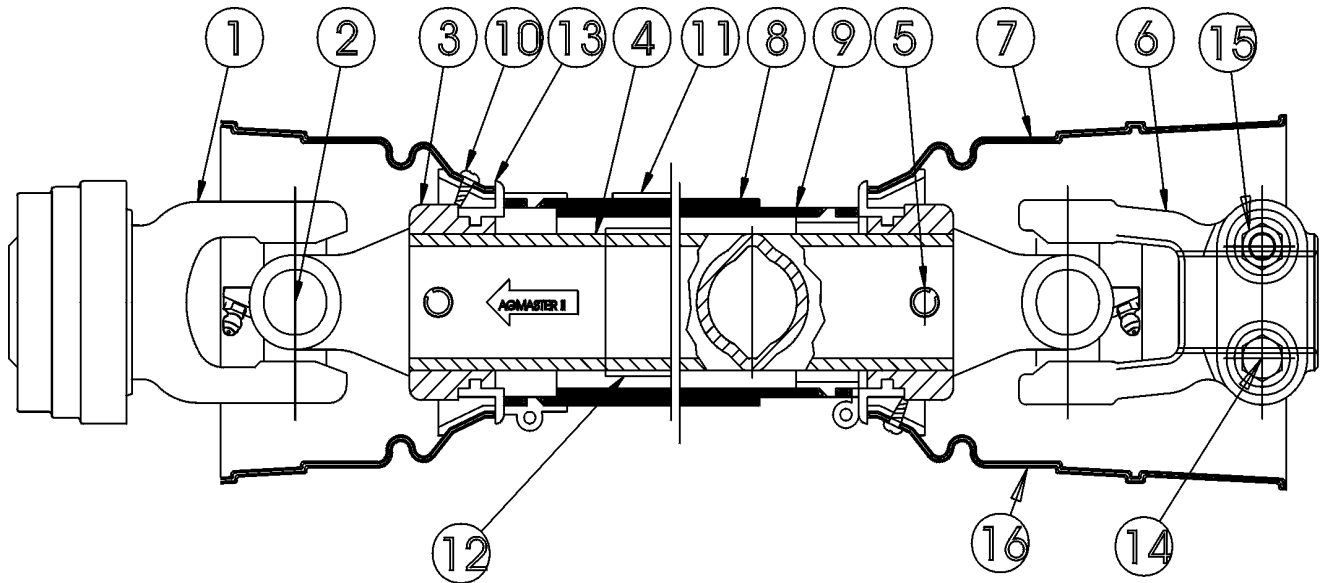


ITEM	PART NO.	QTY.	DESCRIPTION
	00775351	-	540 RPM DRIVELINE ASSEMBLY
1	00775353	1	YOKE 1-3/8-6 SPLINE ASGE
2	00189700	2	CROSSKIT 35R U -JOINT KIT 35R
3	00775318	2	YOKE INBOARD 2A
4	00775354	1	OUTER PROFILE 2A
5	00756934	2	PIN,ROLL 10 X 80
6	00775316	1	YOKE 1-3/4-20 SPL I.C.
7	-----	2	SHIELD CONE
8	-----	1	OUTER SHIELD TUBE OVL.
9	-----	1	INNER SHIELD TUBE RND.
10	00759217	2	SCREW 1/2 LG #8 PAN
11	00756005	1	DECAL-ROTATING DRIVELINE
12	00756004	1	DECAL-SHIELD MISSING
13	8393	2	BEARING RING
14	00775384	2	BOLT P1.75 M12 X 60
15	00775327	2	NUT P1.75 M12
16	-----	1	SHIELD CONE EXTENDED
	00767954	1	YOKE.Q.D.KIT - PLASTIC
	00775355	1	OUTER SHIELD HALF INCLUDES 7,8,10,11 & 13
	00775356	1	INNER SHIELD HALF INCLUDES 7,9,10 & 13

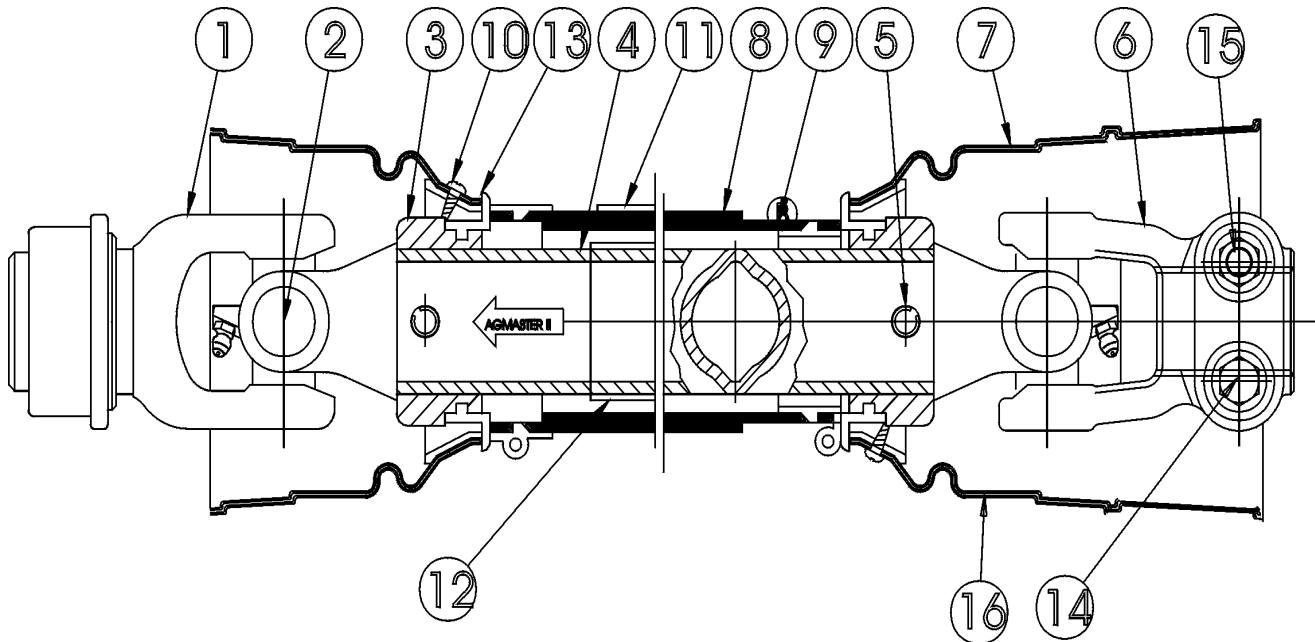

ITEM	PART NO.	QTY.	DESCRIPTION
	00775352	-	1000 RPM DRIVELINE ASSEMBLY
1	00761762	1	YOKE 1-3/8-21 SPL PAINT BLACK
2	00189700	2	CROSSKIT 35R U -JOINT KIT 35R
3	00775318	2	YOKE INBOARD 2A
4	00775354	1	OUTER PROFILE 2A
5	00756934	2	PIN,ROLL 10 X 80
6	00775316	1	YOKE 1-3/4-20 SPL I.C.
7	-----	2	SHIELD CONE
8	-----	1	OUTER SHIELD TUBE OVL.
9	-----	1	INNER SHIELD TUBE RND.
10	00759217	2	SCREW 1/2 LG #8 PAN
11	00756005	1	DECAL-ROTATING DRIVELINE
12	00756004	1	DECAL-SHIELD MISSING
13	8393	2	BEARING RING
14	00775384	2	BOLT P1.75 M12 X 60
15	00775327	2	NUT P1.75 M12
16	-----	1	SHIELD CONE EXTENDED
	00767953	1	YOKE.Q.D.KIT - METAL
	00775355	1	OUTER SHIELD HALF INCLUDES ITEMS 7,8,10,11, & 13
	00775356	1	INNER SHIELD HALF INCLUDES ITEMS 7,9,10, & 13


JACKSHAFT - PULL TYPE

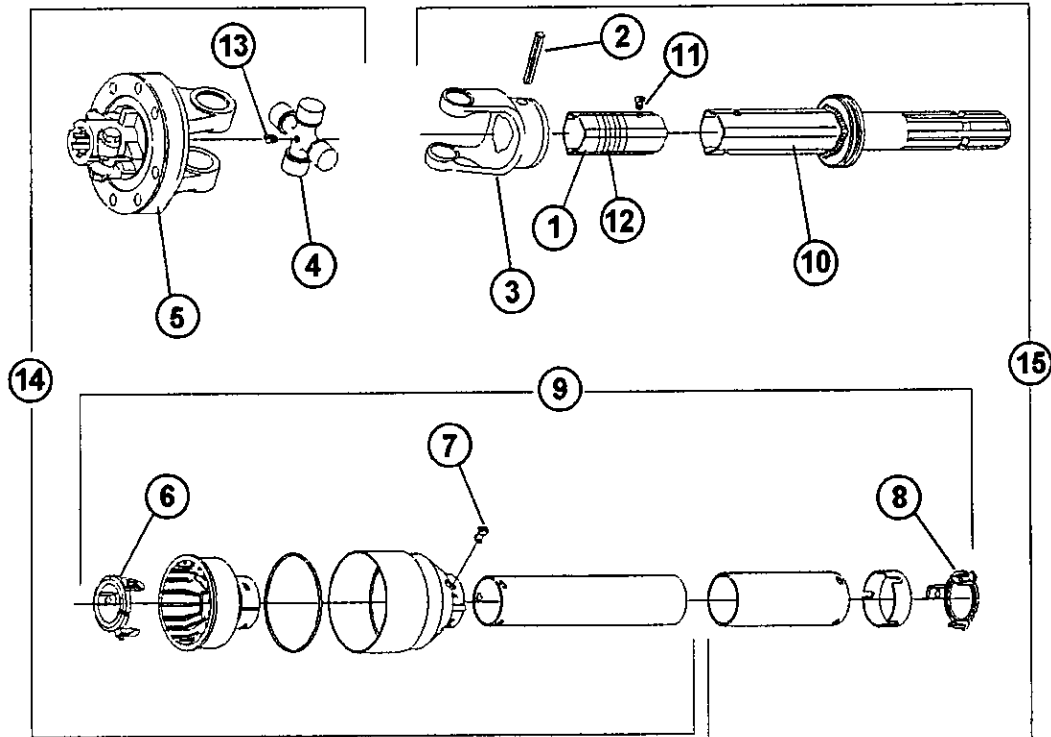

Order replacement parts from this page if the profile of your driveline is triangle shaped.

ITEM	PART NO.	QTY.	DESCRIPTION
	00760899	-	JACKSHAFT - PULL TYPE
1	00761259	1	OUTER TUBE
2	00754167	1	ROLL PIN
3	00754154	1	OUTER YOKE
4	00752896	1	CROSS BEARING SERIES 6
5	00756075	1	SLIP CLUTCH(W/ SPRING)
6	00754332	1	LOCKING COLLAR (OUTER TUBE)
7	00754330	6	BOLT
8	00754331	1	LOCKING COLLAR (INNER TUBE)
9	00761210	1	COMPLETE SHIELD
10	00761209	1	INNER TUBE 1-3/4-20 SPLINE
11	00754335	1	GREASE FITTING
12	00761075	1	CENTERING SPRING
13	00755610	1	GREASE FITTING
14	00773833	1	HALF FEMALE SHAFT WITH GUARDING
15	00773834	1	HALF MALE SHAFT WITH GUARDING


JACKSHAFT - PULL TYPE

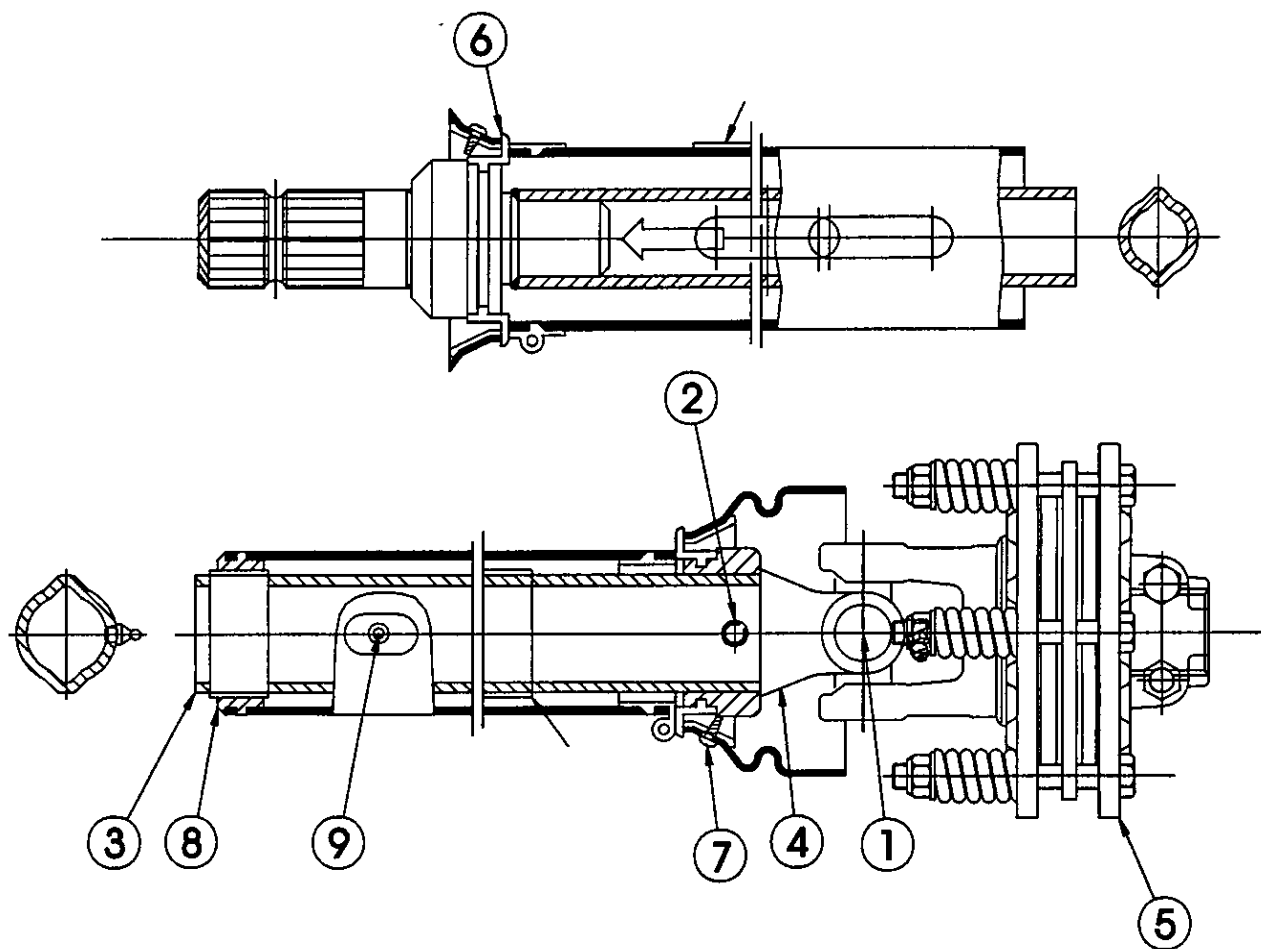

Order replacement parts from this page if the profile of your driveline is lemon shaped.

ITEM	PART NO.	QTY.	DESCRIPTION
	00775437	-	DRIVELINE ASSEMBLY
1	W279R	1	CROSS & BEARING KIT
2	8384	1	SPRING PIN
3	00775440	1	PROFILE & SLEEVE
4	00775318	1	INBOARD YOKE
5	00775331	1	FRICTION CLUTCH
6	8393	2	BEARING RING
7	4797	2	SCREW
8	8974	1	SUPPORT BEARING
9	1416601	1	GREASE FITTING


DRIVELINE - OUTER S/N 10699 & BELOW Rev 07-04

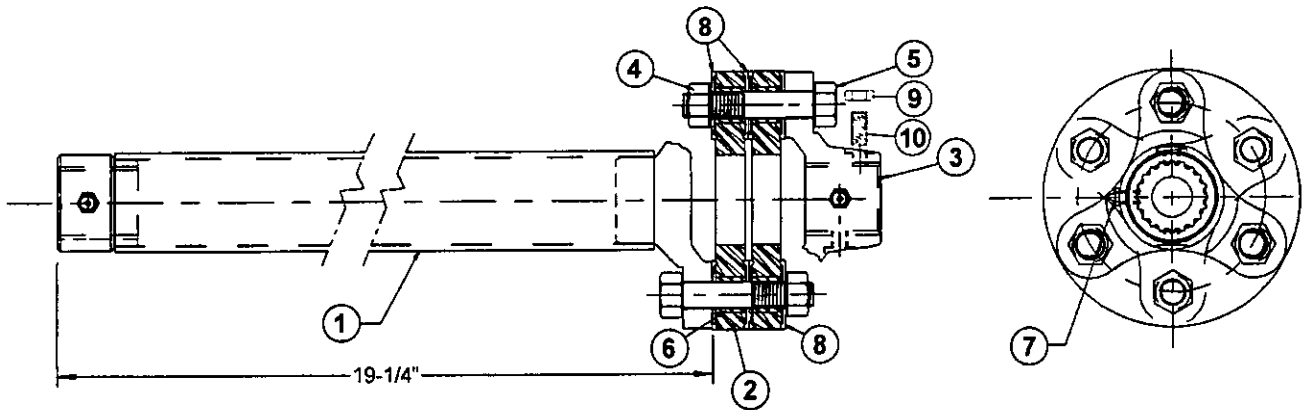

ITEM	PART NO.	QTY.	DESCRIPTION
	00761224A	-	DRIVELINE ASSY
1	00762214A	1	WELDMENT - SLEEVE
	00762214	1	WELDMENT - SLEEVE (OLD STYLE)
2	00762215	2	RUBBER DISC
3	00762216A	1	D/L SPIDER
	00762216	1	SPIDER (OLD STYLE)
4	00765962	6	LOCKNUT
5	00765902	6	BOLT
6	00771287	12	BUSHING RUBBER DISK
7	00764386	2	GREASE FITTING
8	00766475A	24	WASHER, BEADED
9	3167	1	SET SCREW
10	00751281	1	JAM NUT


DRIVELINE - OUTER S/N 10700 -CURRENT

S/N 10700
and Above

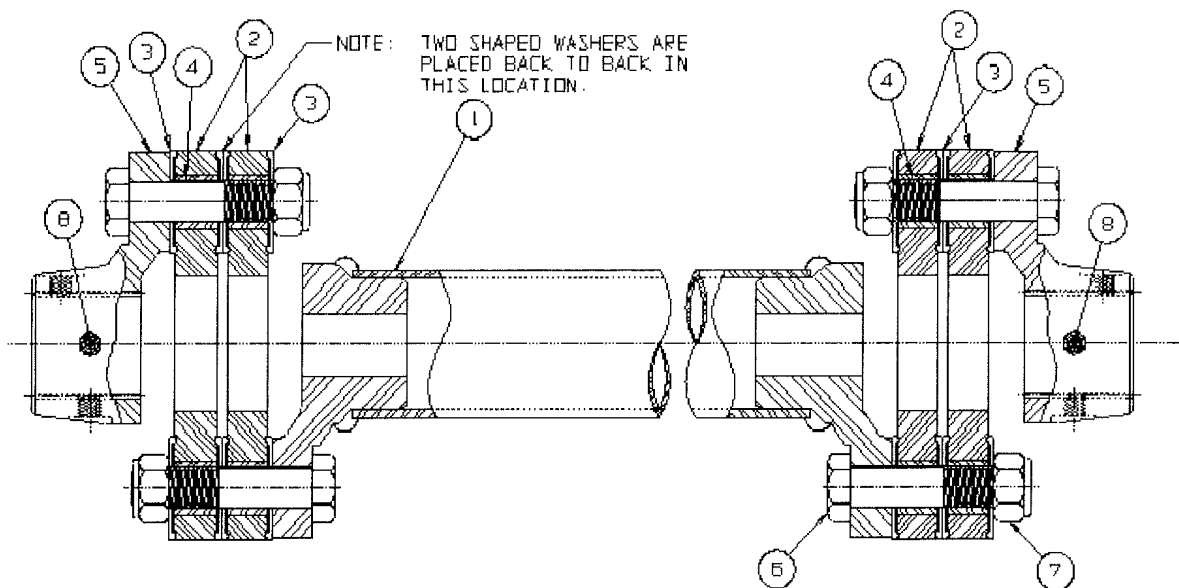


ITEM	PART NO.	QTY.	DESCRIPTION
	00776945	-	DOUBLE FLEX COUPLER SHAFT
1	00776948	1	ASSY, DOUBLE FLEX YOKE & TUBE
2	00762215	4	DISC,RUBBER (W/O BUSHINGS)
3	00766475A	48	WASHER,BEADED D/L COUPLER
4	00771287	24	BUSHING,RUBBER DISK
5	00762216A	2	YOKE OUTER
6	00765902	12	BOLT METRIC M16 X 90 UNI 5737
7	00765962	12	NUT MET TLE 16MM-P2.0 PL
8	00764386	2	GREASE FITTING,8MMX1 STRAIGHT

DRIVELINE COUPLER

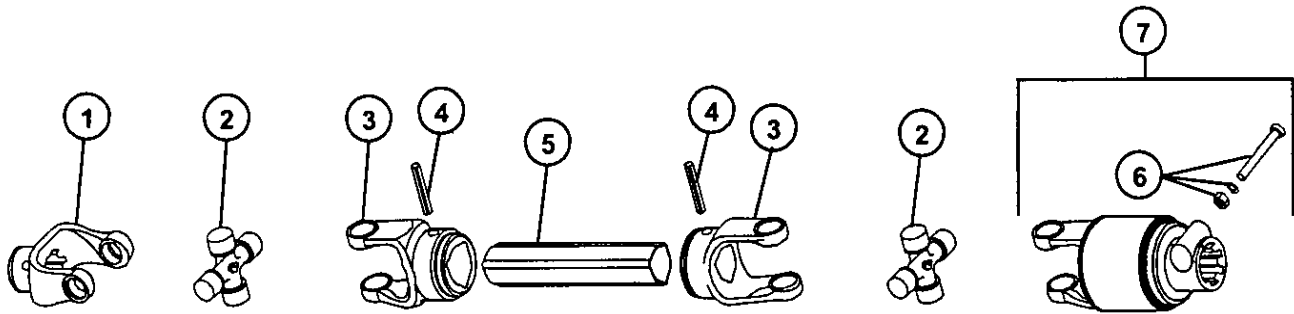

ITEM	PART NO.	QTY.	DESCRIPTION
	00773946	-	COMPLETE ASSEMBLY
1	00774144	1	SPECIAL YOKE
2	00752896	2	CROSS JOURNAL SET
3	00754154	2	OUTER YOKE
4	00754167	2	ROLL PIN
5	00774145	1	OUTER TUBE
6	00774147	1	TAPERED PIN SET
7	00774146	1	COMPLETE RUBBER ELEMENT


SLIP CLUTCH ASSEMBLY

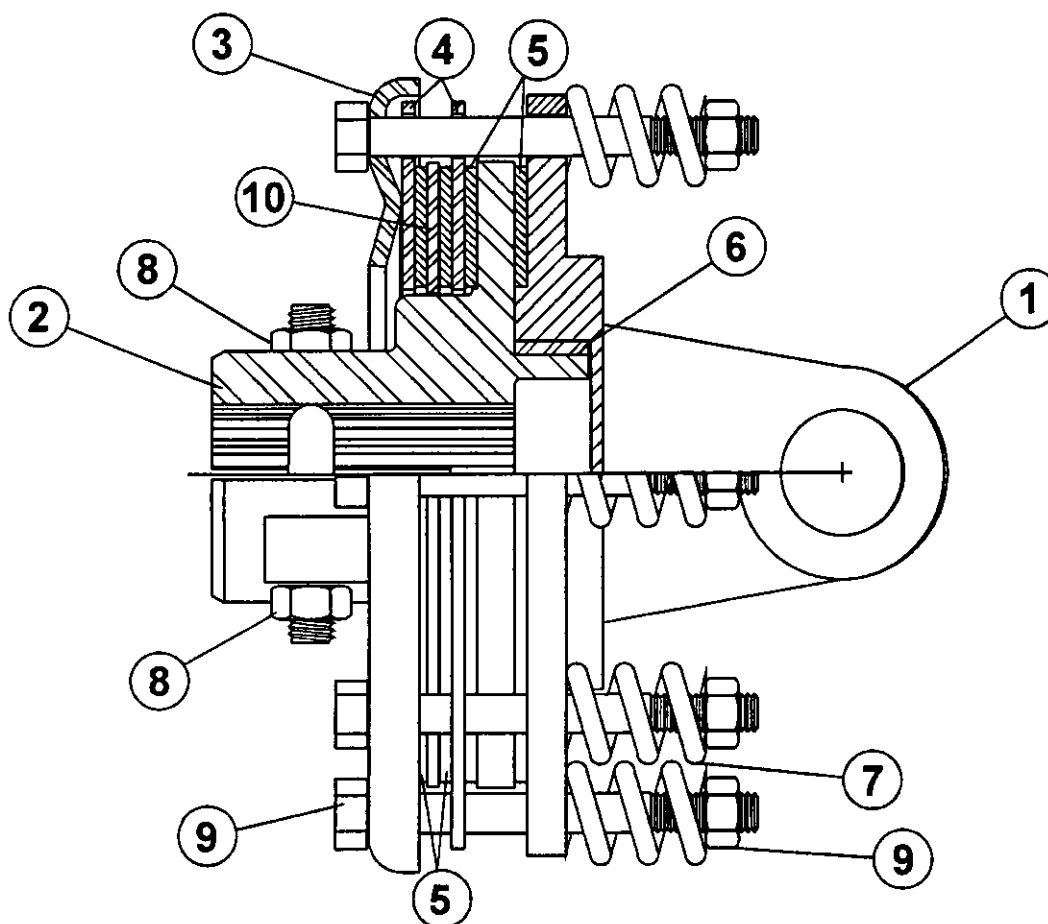

USED ON DRIVELINES
P/N 00760900, P/N 00760901, P/N 00760899

ITEM	PART NO.	QTY.	DESCRIPTION
	00756075	-	SLIP CLUTCH ASSEMBLY
1	00754302	1	FLANGE YOKE
2	00755599	1	CLUTCH SUPPORT
3	00766810	1	PRESSURE PLATE
4	00754314	2	PLATE WITH HOLES
5	00754202	4	LINING RING
6	00754301	1	BUSHING
7	00754303	8	SPRING
8	00755600	2	NUT & BOLT
9	00754199	8	NUT & BOLT
10	00754201	1	INTERMEDIATE PLATE


SLIP CLUTCH ASSEMBLY

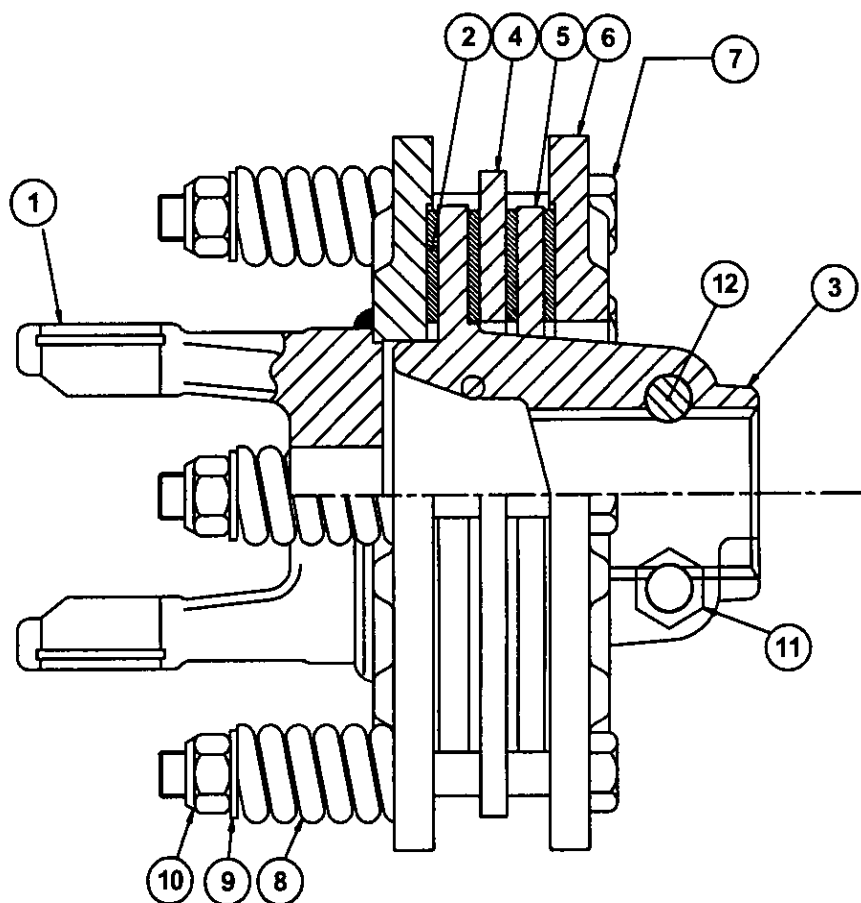

**USED ON DRIVELINE P/N 00775369 & 00775435
JACKSHAFT P/N 00775437**


ITEM	PART NO.	QTY.	DESCRIPTION
	00775331	-	SLIP CLUTCH
1	00775333	1	FLANGE YOKE
2	8366	4	FRICTION DISK
3	00775334	1	HUB
4	00775335	1	DRIVE PLATE
5	00775336	1	DRIVE PLATE
6	00775337	1	THRUST PLATE
7	00775338	6	BOLT
8	00775339	6	COMPRESSION SPRING
9	00754566	6	LOCKWASHER
10	00756164	6	LOCKNUT
11	00775327	2	LOCKNUT
12	00775328	2	BOLT

JACKSHAFT SUPPORT - PULL TYPE

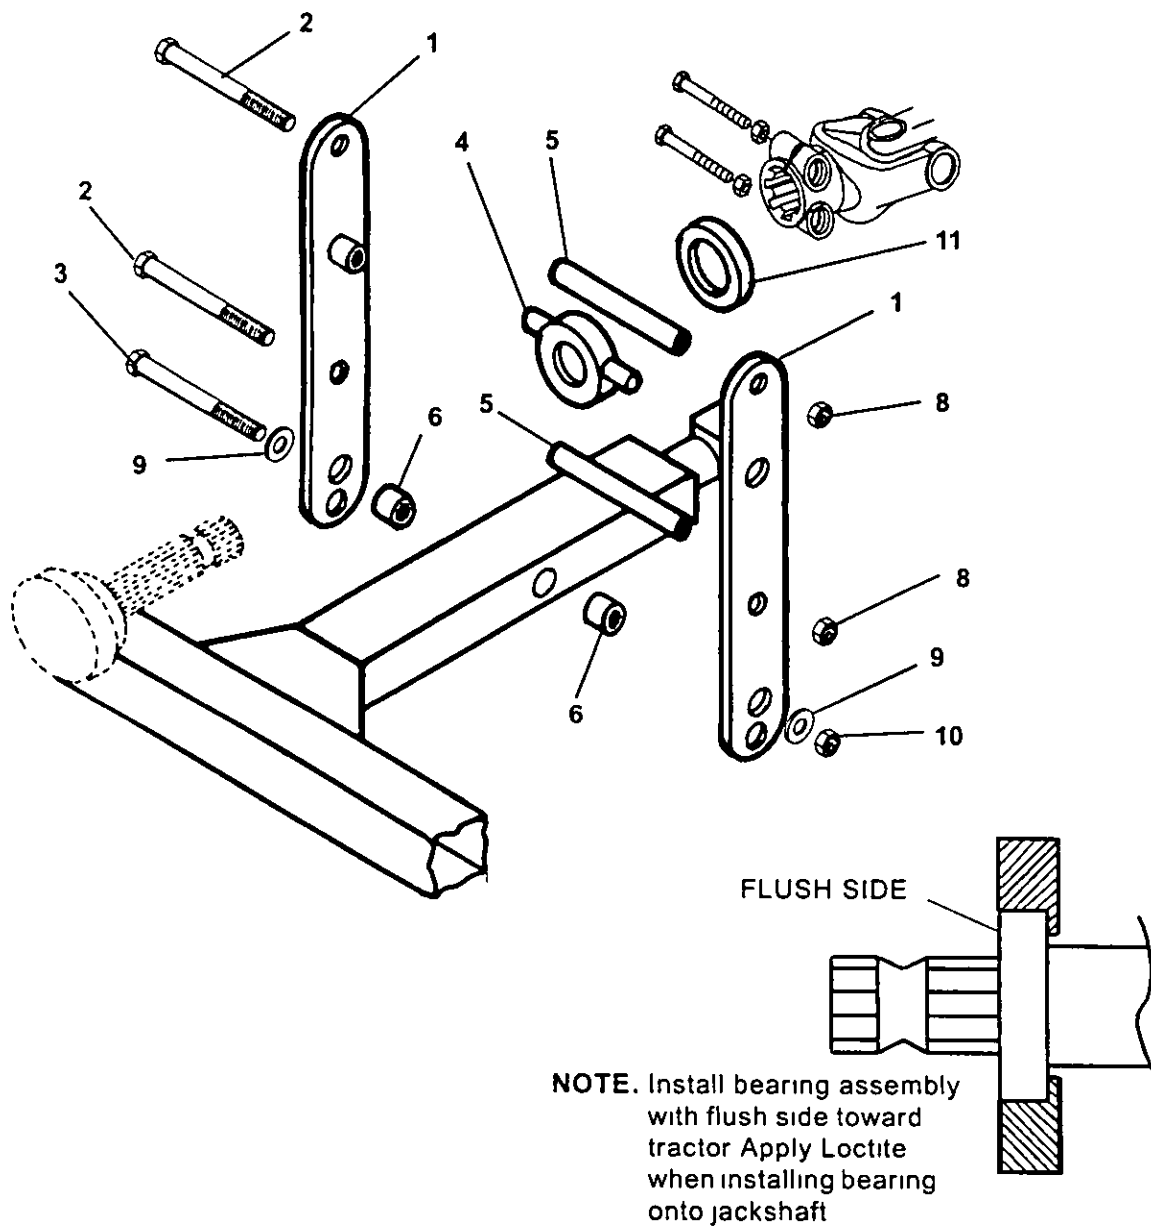


ITEM	PART NO.	QTY.	DESCRIPTION
1	00760944	2	FLAT BEARING SUPPORT
2	02963243	2	BOLT
3	00751582	1	BOLT
4	00759100	1	BEARING AND HOUSING ASSEMBLY
	00759286	1	BEARING
5	00760943	2	PIPE SPACER
6	681112	2	BUSHING
8	00001800	2	LOCKNUT
9	00002700	2	FLATWASHER
10	00001800	1	LOCKNUT
11		1	TUBE SPACER (SERIAL NO. BREAK 10563 AND AFTER)

JACKSHAFT SUPPORT - PULL TYPE Rev 03-05

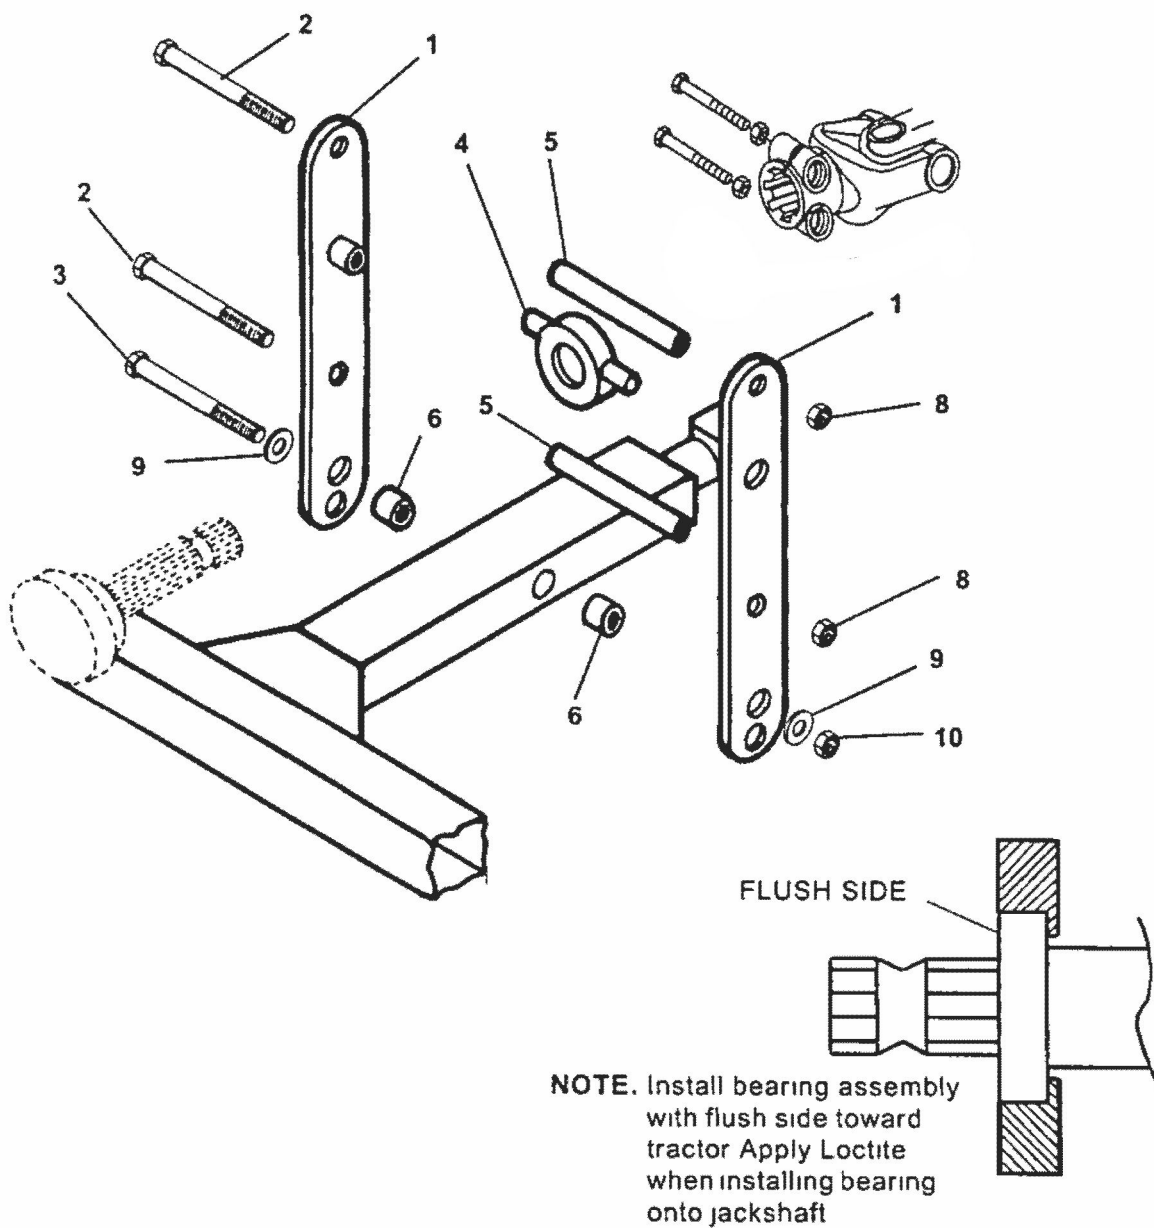


ITEM	PART NO.	QTY.	DESCRIPTION
1	00764455	2	FLAT BEARING SUPPORT
2	02956953	2	BOLT
3	00016400	1	BOLT
4	00764416	1	BEARING AND HOUSING ASSEMBLY
	00764417	1	BEARING
5	00764457	2	PIPE SPACER
6	0811180520	2	BUSHING
8	00001800	2	LOCKNUT
9	00001400	2	FLATWASHER
10	00695100	1	LOCKNUT

SHIELD AND SMV ASSEMBLY Rev 01-05

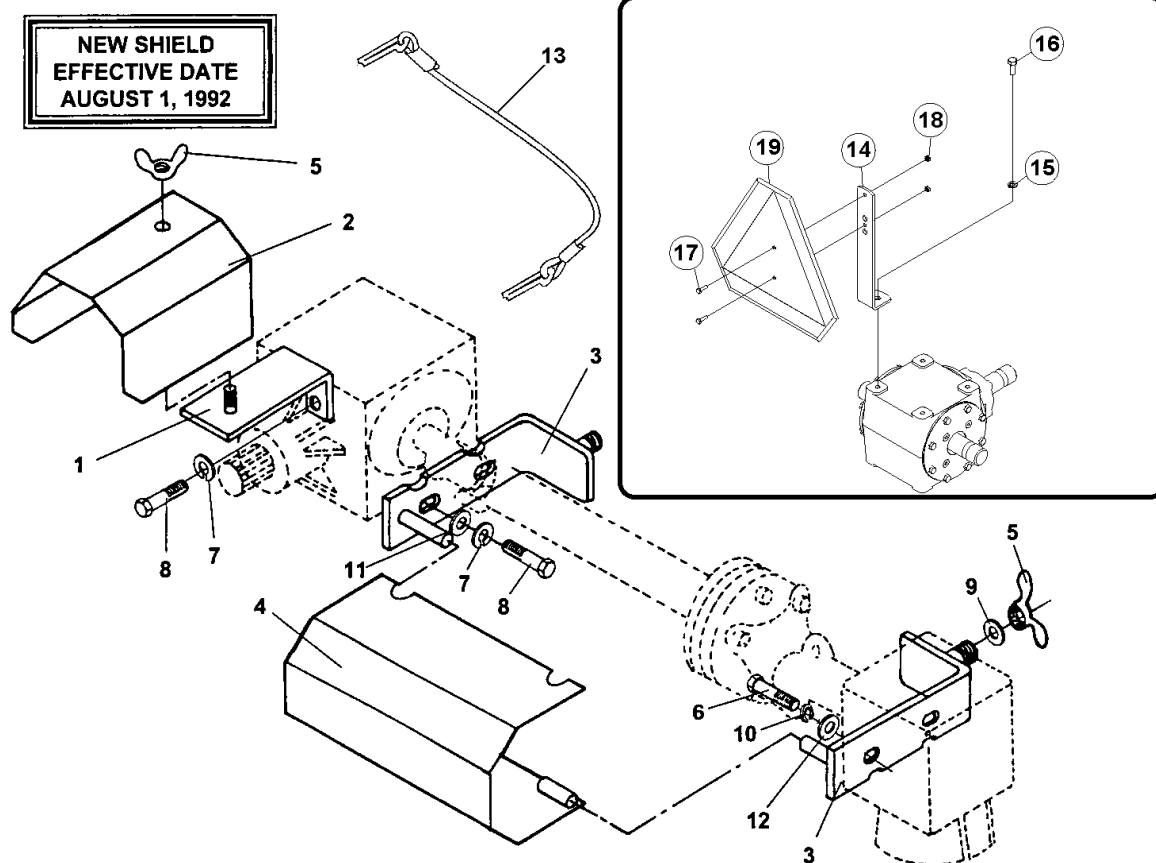


ITEM	PART NO.	QTY.	DESCRIPTION
1	00761405	1	WLDMT-BRKT
2	00760909	1	SHIELD
3	00763236	4	WLDMT SHIELD BRACKET RH
4	00761332	2	WLDMT SHIELD
5	5F8130	5	1/2 NC WING NUT
6	00751693	4	HEXB METRIC 8-P1.25- 16MM PL5
7	00022200	6	LOCKWASHER STD 7/16 PL
8	02958784	6	BOLT METRIC 8-P1.25- 20MM PL5
9	00002700	4	FLATWASHER 1/2 PL STD
10	00011700	4	LOCKWASHER 5/16 PL STD
11	00019700	4	FLATWASHER STD 7/16 PL
12	00023500	4	FLATWASHER,5/16,TYPE AW,ZP
13	00770066	1	ASSY-CHAIN WITH PIN
14	00778576	1	SMV BRACKET
15	00001300	1	LOCKWASHER 1/2 PL STD
16	02030700	1	HHCS 1/2-13UNC 1-1/4 PL5
17	10058000	2	HHCS 1/4 NC 1 PL5
18	02959924	2	NUT TOPLOCK 1/4 NC PLB
19	03200347	1	EMBLEM, SMV

GEARBOX DIVIDER- 540 RPM

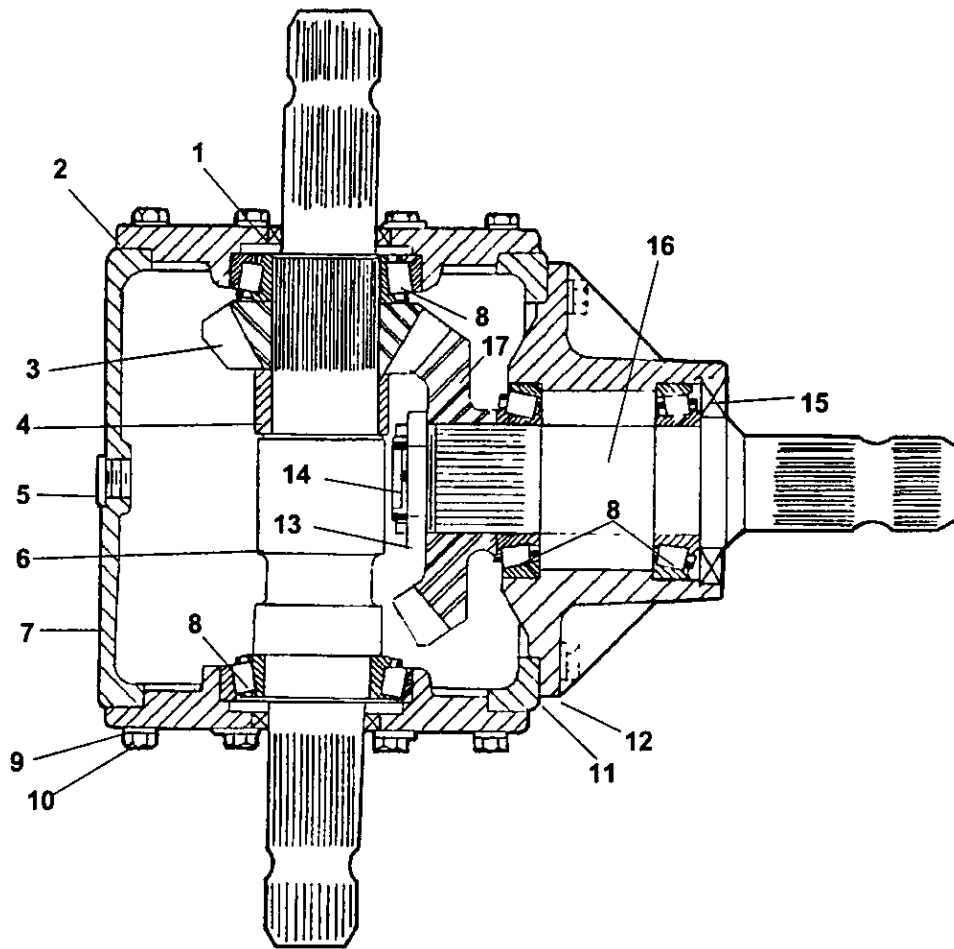


ITEM	PART NO.	QTY.	DESCRIPTION
	00760880	-	GEARBOX DIVIDER-540 RPM
1	00758653	2	SEAL
2	00762516	2	CAP - THRU
3	00758693	1	GEAR - 13 TOOTH
4	00758657	1	SPACER
5	00762517	2	PIPE PLUG
6	00762518	1	SHAFT-THRU
7	00762519	1	HOUSING
8	00755628	4	BEARING
9	00755954	24	LOCKWASHER
10	00758659	24	BOLT
11	00748531	AR	SHIM KIT (INCLUDES 0.40,0.25, & 0.30)
12	00762520	1	CAP - HUB INPUT
13	00762121	1	NUT METRIC SLOTTED
14	00026200	1	COTTER PIN
15	00762521	1	SEAL
16	00762522	1	SHAFT - INPUT
17	00758694	1	GEAR - 19 TOOTH
18	00762114	1	PIPE PLUG VENTED (NOT ILLUSTRATED)
	00765444	3 1/ 4qts	QT,ALAMO 000 GEAR LUBE

GEARBOX DIVIDER- 1000 RPM

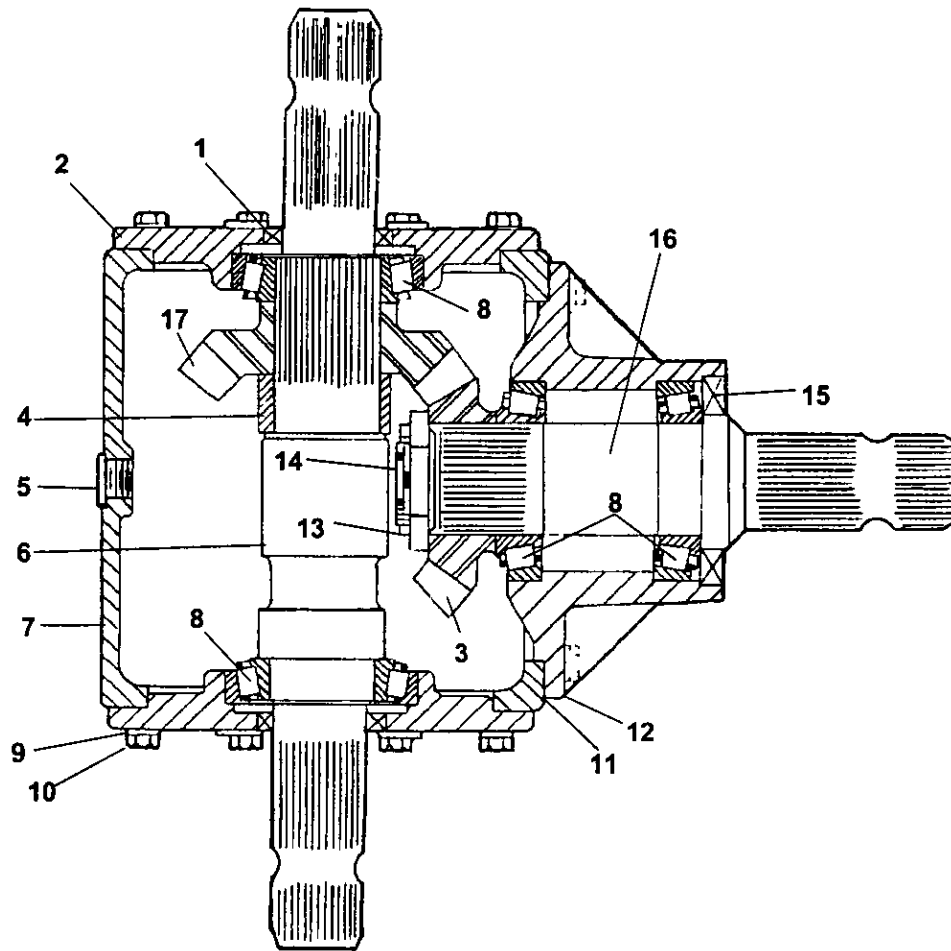

ITEM	PART NO.	QTY.	DESCRIPTION
	00758996	-	GEARBOX DIVIDER
1	00758653	2	SEAL
2	00762516	2	CAP - THRU
3	00759487	1	GEAR - 14 TOOTH
4	00758657	1	SPACER INPUT SHAFT
5	00762517	2	PIPE PLUG
6	00762518	1	SHAFT - THRU
7	00762519	1	HOUSING
8	00755628	4	BEARING
9	00755954	24	LOCKWASHER
10	00758659	24	BOLT
11	00748531	AR	SHIM KIT (INCLUDES 0.40,0.25, & 0.30)
12	00762520	1	CAP - HUB INPUT
13	00762121	1	NUT METRIC SLOTTED
14	00026200	1	COTTER PIN
15	00762521	1	SEAL
16	00762522	1	SHAFT-INPUT
17	00759488	1	GEAR - 17 TOOTH
18	00762114	1	PIPE PLUG VENTED (NOT ILLUSTRATED)
	00765444	3 1/ 4qts	QT,ALAMO 000 GEAR LUBE

GEARBOX ASSEMBLY 00771225 Rev 02-07

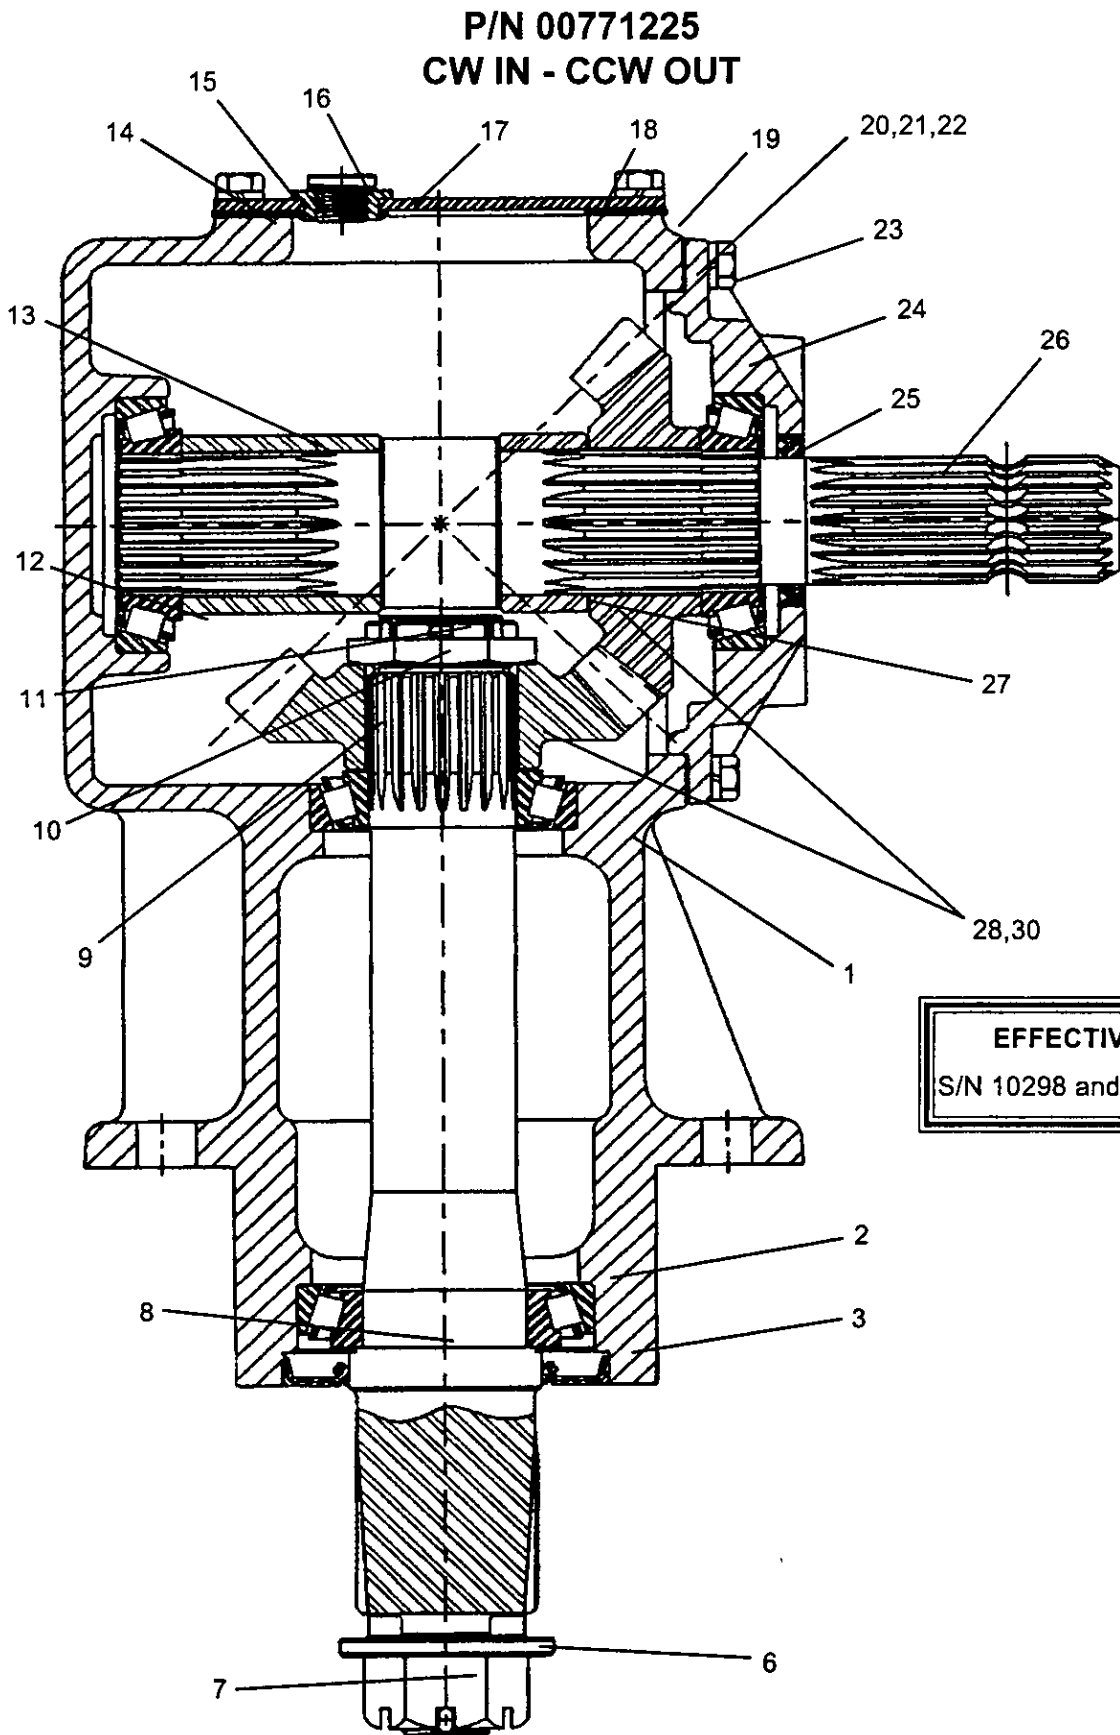

GEARBOX ASSEMBLY 00771225 Rev 02-07


ITEM	PART NO.	QTY.	DESCRIPTION
	00771225	-	GEARBOX ASSEMBLY (1000 RPM) CW IN - CCW OUT
1	00770724	1	HOUSING
2	00770725	1	BEARING ASSEMBLY
3	00770726	1	OIL SEAL
6	00771226	1	NUT
7	01422502	1	COTTER PIN
8	00770728	1	OUTPUT SHAFT
9	00773412	2	PINION(17 TOOTH)
10	00762121	1	NUT METRIC SLOTTED
11	00606000	1	COTTER PIN
12	00755628	3	BEARING ASSEMBLY
13	00770731	1	SHAFT SPACER
14	00766083	12	LOCKWASHER
15	00754338	4	BOLT
16	00762517	2	PLUG
17	00769321	3	WASHER, SEALING
18	00770732	1	INSPECTION COVER
19	00770733	1	INSPECTION GASKET
20	00758646	VAR	SHIM ADJUSTMENT(0.10)
21	00758647	VAR	SHIM ADJUSTMENT(0.25)
22	00758648	VAR	SHIM ADJUSTMENT(0.50)
23	00765905	8	BOLT
24	00770734	1	INPUT CAP
25	00758653	1	SEAL
26	00770735	1	INPUT SHAFT
27	00758657	1	SPACER, INPUT SHAFT
28	00758667	VAR	SHIM (0.30)
30	00758668	VAR	SHIM (0.50)
31	00762114	1	PRESSURE RELIEF VALVE
	00765444	4qts	QT,ALAMO 000 GEAR LUBE

NOTE: Inspect side of gear housing to determine which gearbox is used.

00771225 has flat sides

00771225A has raised circular area

GEARBOX ASSEMBLY 00771225A Rev 02-07

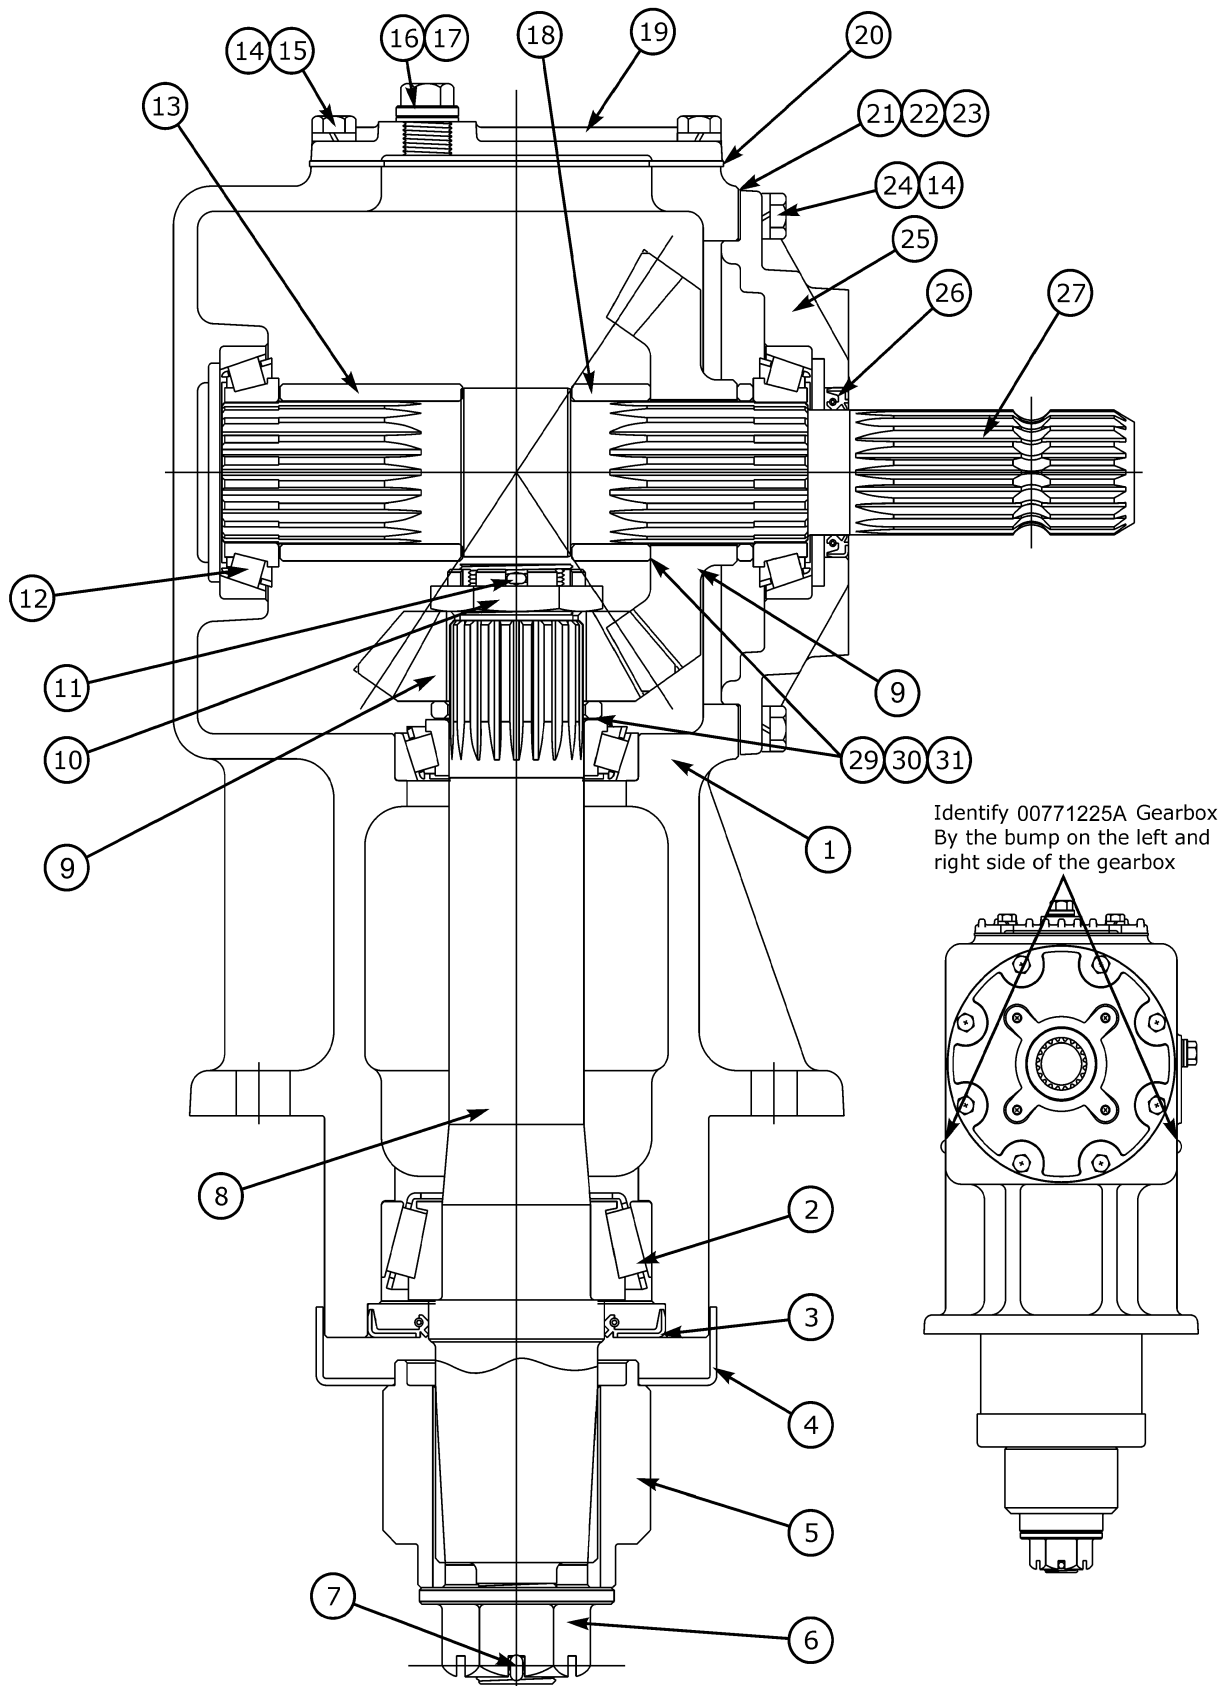


GEARBOX ASSEMBLY 00771225A Rev 02-07

ITEM	PART NO.	QTY.	DESCRIPTION
	00771225A	-	ASY,GEARBOX -AG100 - W/GREASE
1	00779330	1	HOUSING
2	00779329	1	BEARING ASSEMBLY #33211
3	00770726	1	OIL SEAL
4	00770727	1	PROTECTOR, SEAL
5	00771227	1	HUB W/2-7/8 SHOULDER
6	00771226	1	NUT,M30-P2.00 FLANGED SLOTTED
7	01422502	1	PIN-COTTER 3/16 X 2-1/2
8	00770728	1	SUPER-AG-100 VERTICAL OUTPUT
9	00773412	1	GEAR 17 TOOTH
10	00762121	1	NUT,HEX THIN SLOTTED
11	00770421	1	PIN, COTTER 3.6MM x 65MM
12	00755628	3	USE 00769938
13	00770731	1	SUPER-AG-100 INPUT SHAFT SPCR
14	00755954	12	LOCKWASHER M10
15	00754338	4	HEXB METRIC 10-P1.5 - 20MM
16	00762123	2	PLUG,LEVEL M18 X 1.5
17	00769321	3	WASHER,SEALING,17.8M
18	00758657	1	SPACER,INPUT SHAFT
19	00770732	1	INSPECTION COVER
20	00770733	1	INSPECTION COVER GASKET
21	00758646	VAR	SHIM, ADJUSTMENT - .004"
22	00758647	VAR	SHIM, ADJUSTMENT - .010"
23	00758648	VAR	SHIM ,ADJUSTMENT - .020"
24	00765905	8	HEXB METRIC 10-P1.5 - 30MM
25	00770734	1	INPUT CAP
26	00758653	1	SEAL 1-3/4IDX2.378OD
27	00770735	1	SUPER-AG-100 INPUT SHAFT
28	00773412	1	GEAR 17 TOOTH
29	00758667	VAR	SHIM .012 2.44 O.D.
30	00762153	VAR	SHIM .016
31	00758668	VAR	SHIM,0.020 2.44 O.D.
32	00762114	1	PLUG,VENT W/WASHER 18M-P1.5
35	00774064	2	GEAR SPACER

GEARBOX ASSEMBLY - SIDE

P/N 00764053

EFFECTIVE
S/N 10297 and Below

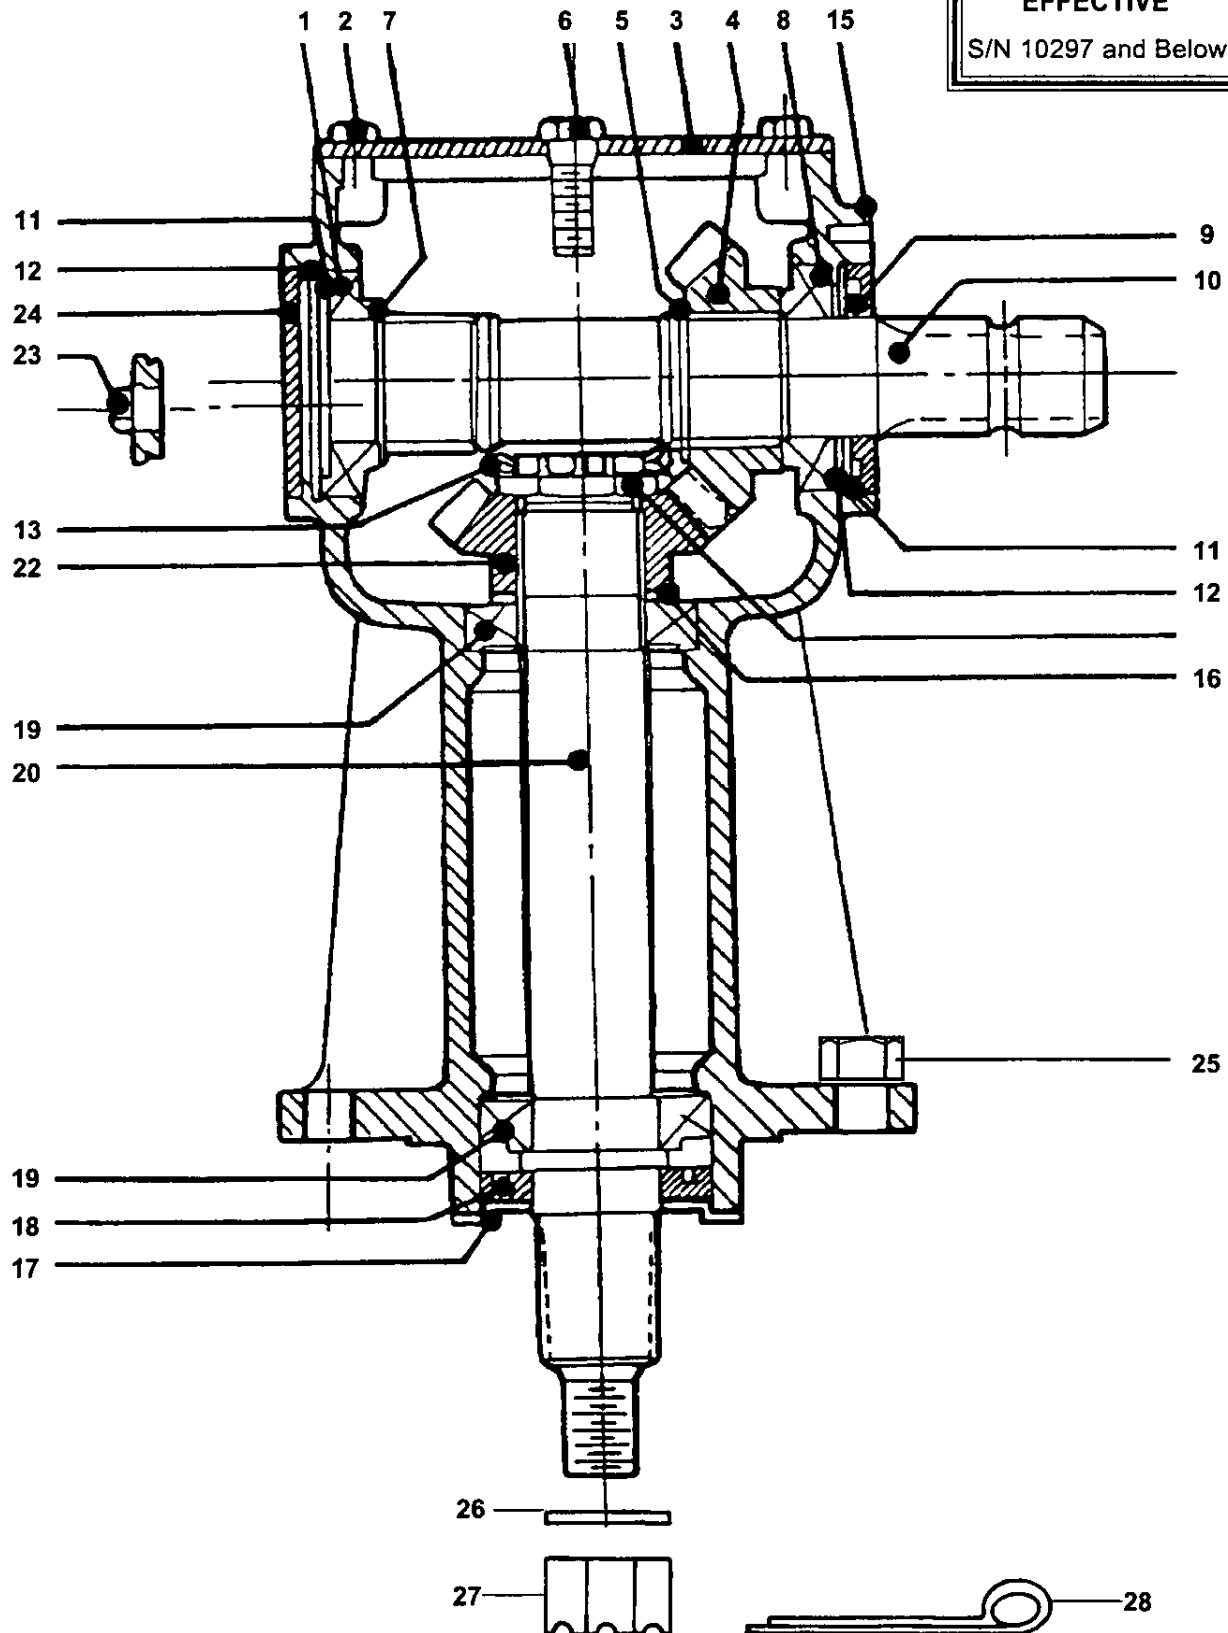


GEARBOX ASSEMBLY - SIDE

ITEM	PART NO.	QTY.	DESCRIPTION
	00764053	-	GEARBOX ASSEMBLY SIDE (540 RPM 1:1 RATIO)
1	00755615	2	BEARING
2	00755635	4	BOLT
3	00755637	1	COVER
4	00758506	1	GEAR-SIDE GEARBOX
5	00755620	1	EXTERNAL CIRCLIP
6	00757342	1	PLUG PRESSURIZED VENT
7	00755632	1	SHIM
8	00755615	2	BEARING
9	00753238	1	OIL SEAL
10	00755617	1	SHAFT
11	00755619	2	SHIM
12	00755618	2	INTERNAL CIRCLIP
13	00756946	1	COTTER PIN
14	00756943	1	NUT METRIC SLOTTED
15	00755613	1	HOUSING GEARBOX
16	00755622	1	SHIM
17	00755626	1	PROTECTIVE WASHER
18	00755627	1	OIL LIP SEAL
19	00769938	2	BEARING, TIMKEN
20	00756945	1	SHAFT, OUTPUT
22	00758506	1	GEAR-SIDE GEARBOX
23	00755633	1	PLUG
24	00755634	1	CAP
25	5JRC12100	6	NUT
26	00755623	1	WASHER
27	00755624	1	NUT
28	00606000	1	COTTER PIN
	00765444	3qts	QT,ALAMO 000 GEAR LUBE

BLADEPAN ASSEMBLY


EFFECTIVE
S/N 10298 and Above

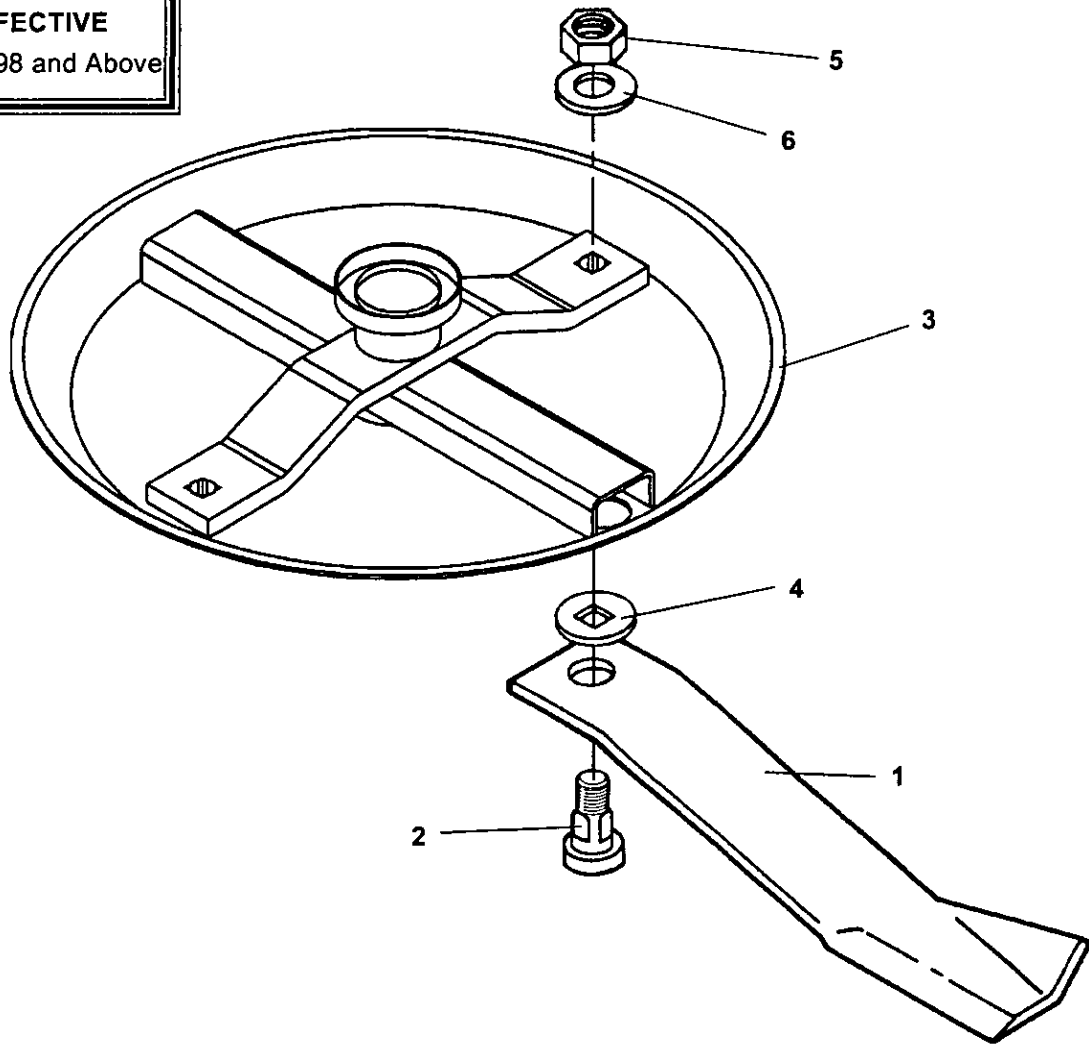

ITEM	PART NO.	QTY.	DESCRIPTION
1	8588A	2	BLADE (CCW ROTATION)
	00761273	2	BLADE (CW ROTATION)
2	8251	2	BOLT
3	00770392	1	WELDMENT - DISHPAN
4	00758579	2	WASHER-BLADE
5	5JRC16140	2	LOCKNUT
6	9216	2	WASHER


BLADEPAN ASSEMBLY

EFFECTIVE
S/N 10297 and Below

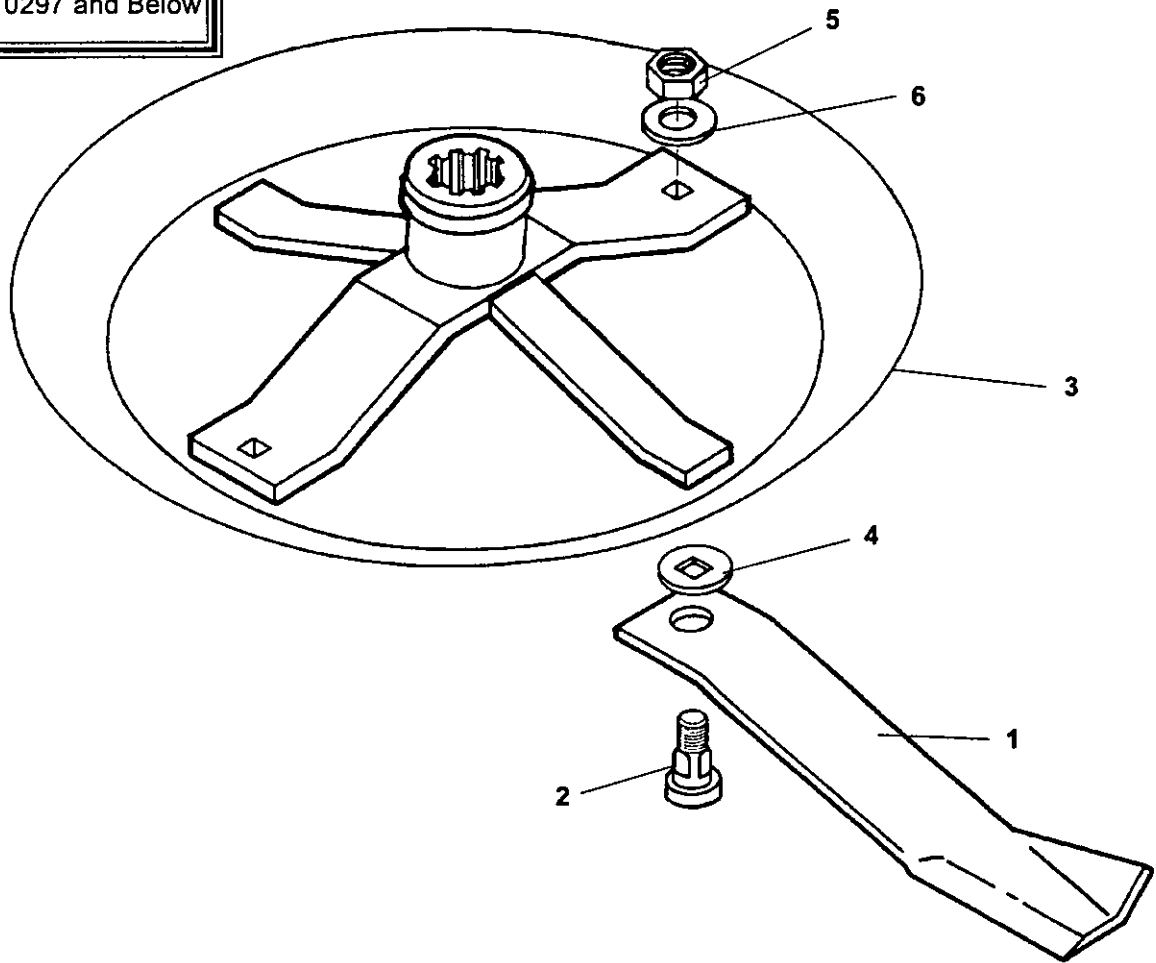


ITEM	PART NO.	QTY.	DESCRIPTION
1	8588A	2	BLADE (CCW ROTATION)
	00761273	2	BLADE (CW ROTATION)
2	8251	2	BOLT
3	00761180	1	WELDMENT - DISPHAN
4	00758579	2	WASHER
5	5JRC16140	2	LOCKNUT
6	9216	2	WASHER

DEFLECTOR ASSEMBLY - FRONT

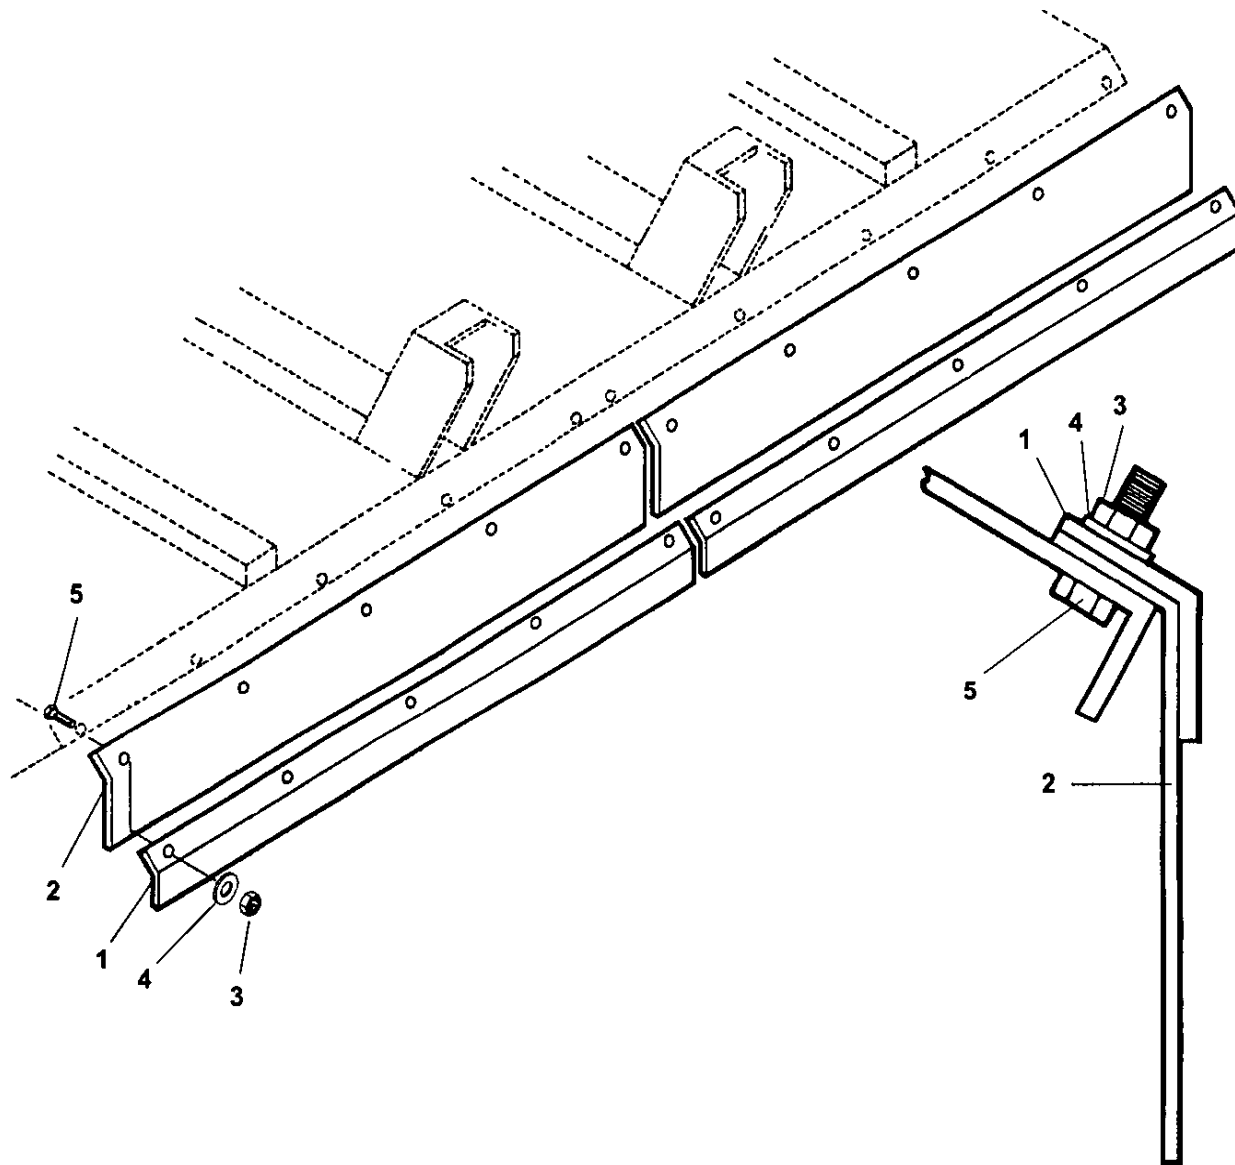


ITEM	PART NO.	QTY.	DESCRIPTION
	00761238	-	DEFLECTOR ASSEMBLY-FRONT
1	00762001	2	BRACKET STRAP
2	00762002	2	SHIELD DEF FRT.
3	00001800	10	LOCKNUT
4	00002700	10	FLATWASHER
5	02030700	10	BOLT

DEFLECTOR ASSEMBLY-REAR

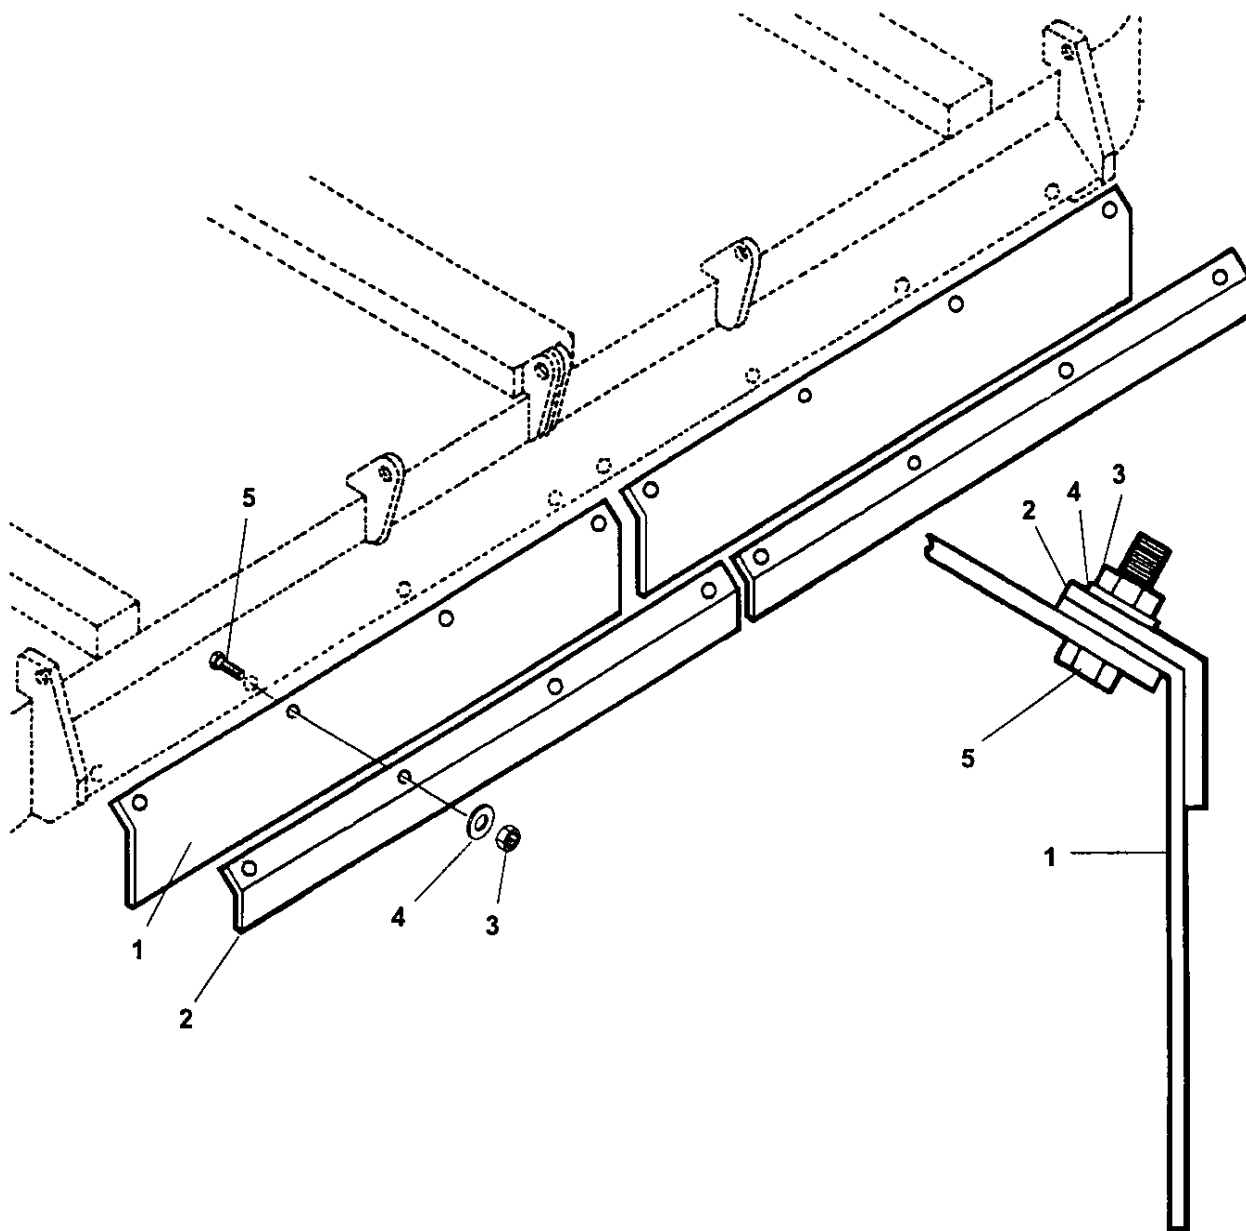


ITEM	PART NO.	QTY.	DESCRIPTION
	00761241	-	DEFLECTOR ASSEMBLY-REAR
1	00761998	2	SHIELD DEF REAR
2	00761999	2	BAR STRAP
3	00001800	8	LOCKNUT
4	00002700	8	FLATWASHER
5	02030700	8	BOLT

CHAIN GUARD ASSEMBLY-FRONT

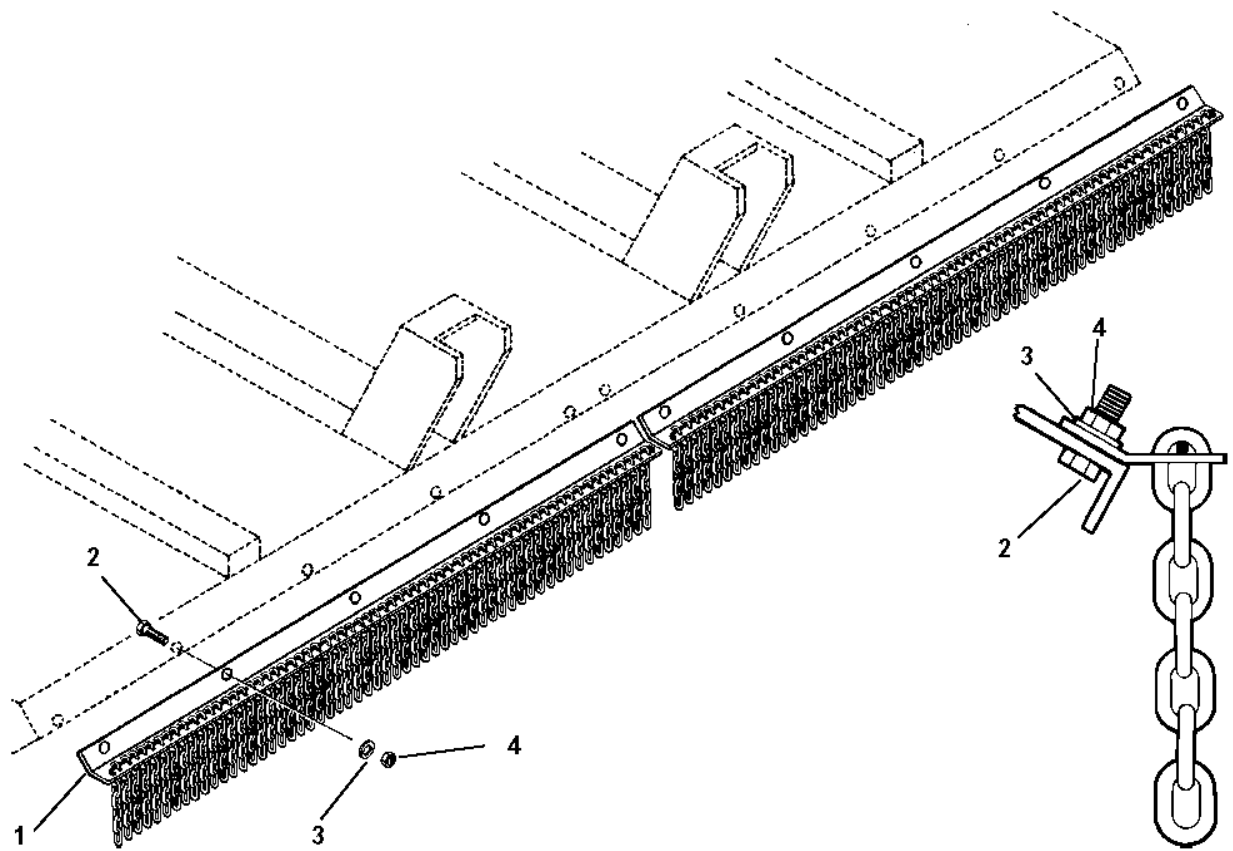


ITEM	PART NO.	QTY.	DESCRIPTION
1	00761239	2	BNDL-CG FRT, RHINO
2	02030700	10	HHCS 1/2-13UNC 1-1/4 PL5
3	00002700	10	WASHER
4	00001800	10	NUT

CHAINGUARD ASSEMBLY-REAR

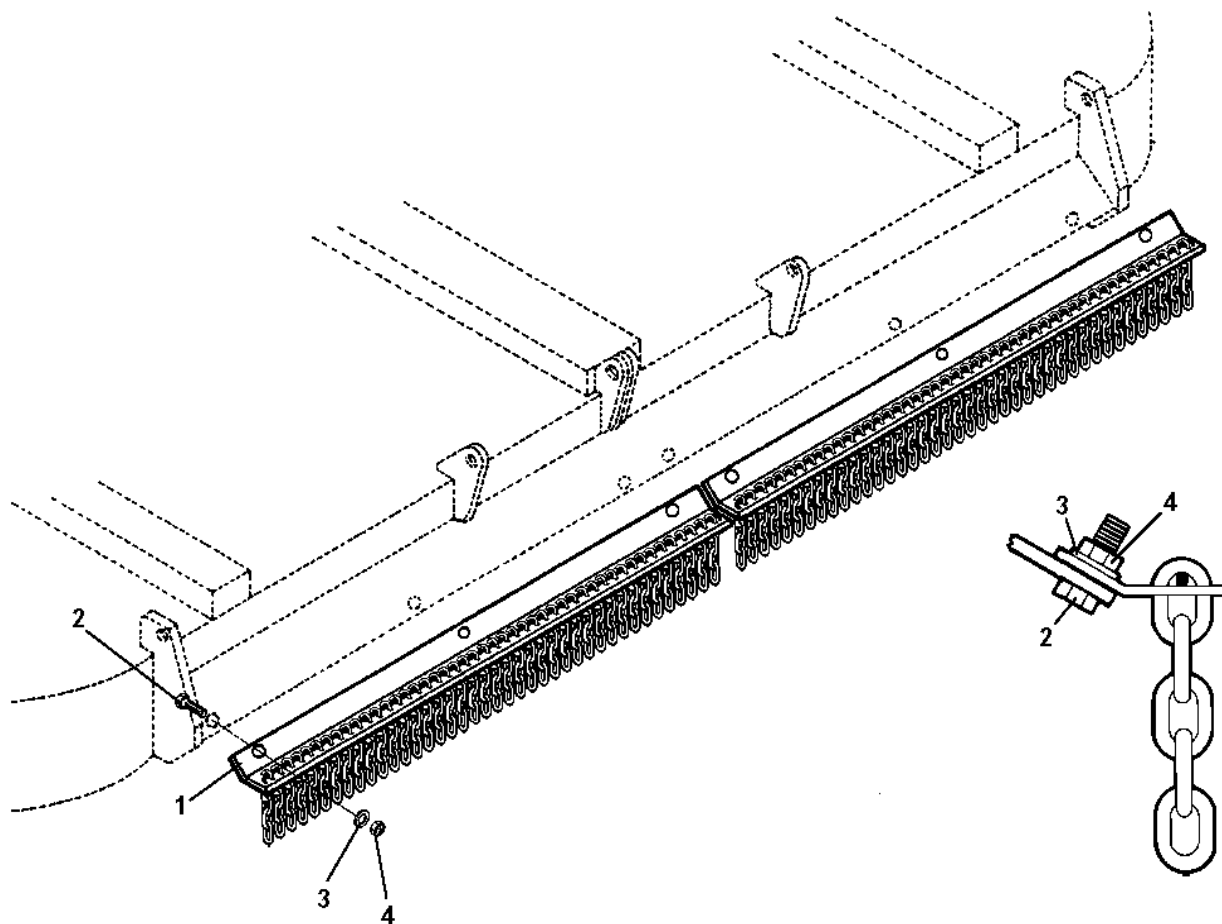


ITEM	PART NO.	QTY.	DESCRIPTION
1	00761242	2	BNDL-CG REAR, RHINO
2	02030700	8	HHCS 1/2-13UNC 1-1/4 PL5
3	00002700	8	FLATWASHER
4	00001800	8	NUT

SKID SHOE ASSEMBLY

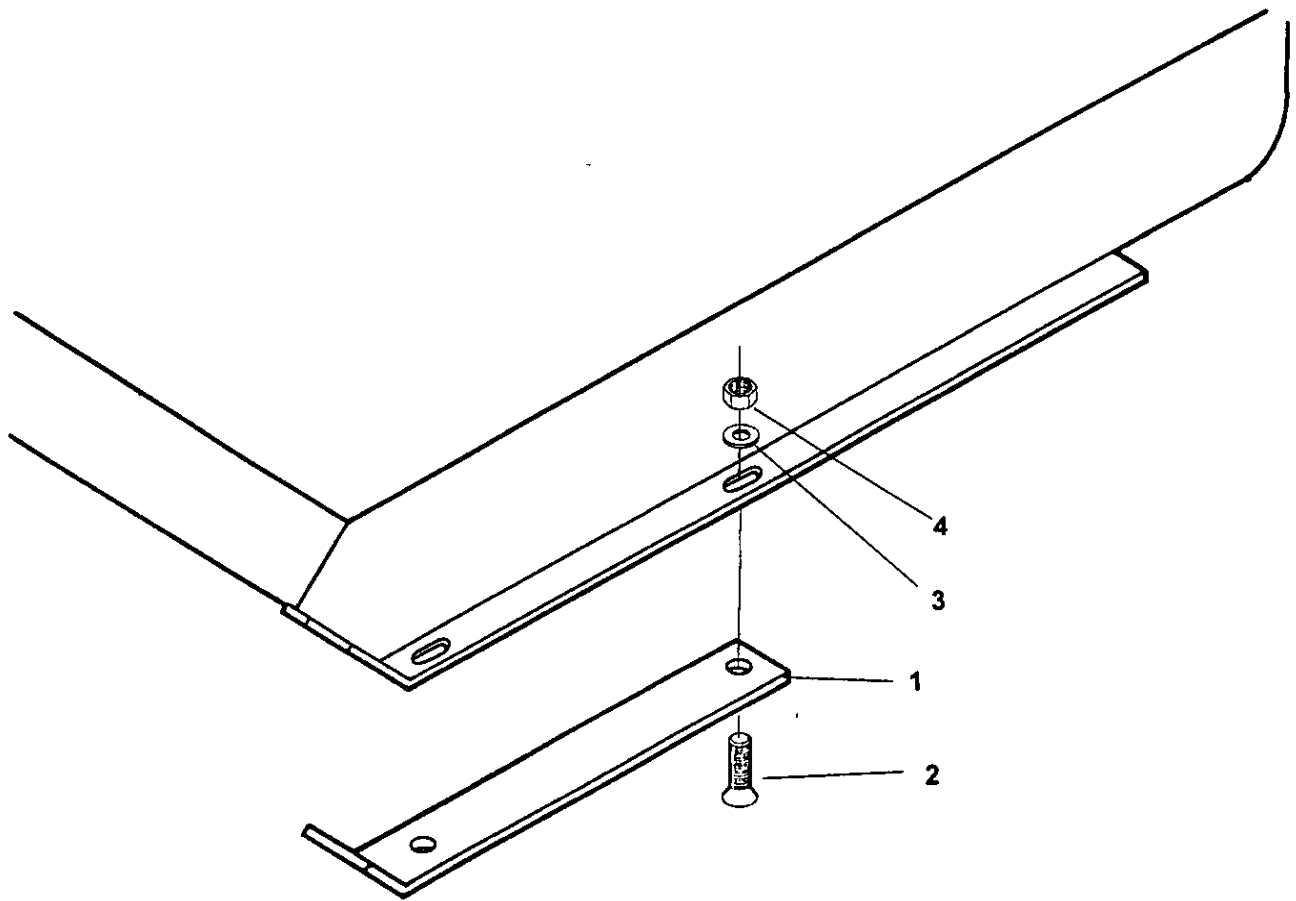


ITEM	PART NO.	QTY.	DESCRIPTION
1	0622000001	2	SKID SHOE
2	2A361612	6	PLOW BOLT
3	00011100	6	FLATWASHER
4	00013901	6	NUT

CASTER ASSEMBLY (AXLE) - FOAM FILLED

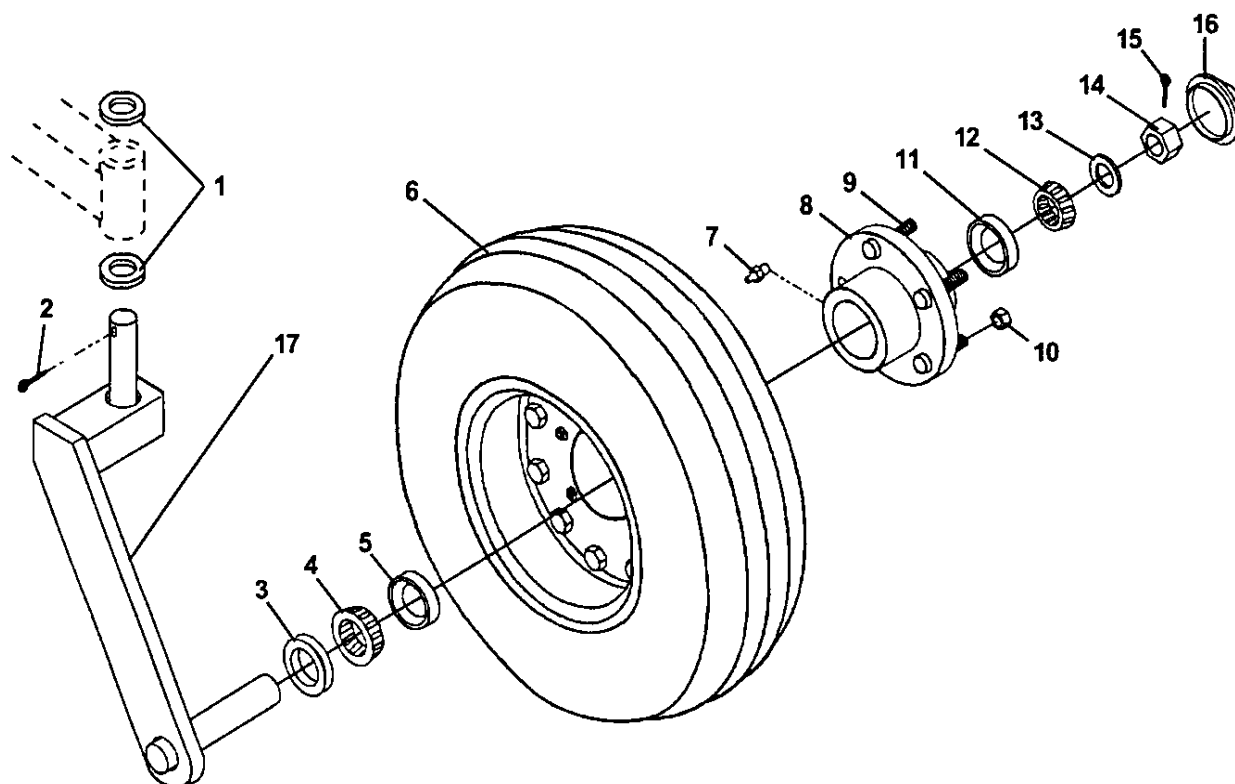


ITEM	PART NO.	QTY.	DESCRIPTION
	00763516	-	COMPLETE CASTER ASSY (W/ CASTER ARM) NOT SHOWN
1	00765807	2	WASHER
2	165024	1	COTTER PIN
3	00750616	1	SEAL
4	00750434	1	INSIDE BEARING CONE
5	00756577	1	INSIDE BEARING CUP
6	00766911A	1	AIRCRAFT FOAM FILLED TIRE
7	00003500	1	GREASE FITTING
8	00756489	1	HUB ASSY W/ CUPS & STUDS
9	00752177	5	STUD BOLT
10	00750614	5	NUT
11	00756576	1	OUTSIDE BEARING CUP
12	0371242102	1	OUTSIDE BEARING CONE
13	00756493	1	WASHER
14	00756490	1	SPINDLE NUT
15	00026200	1	COTTER PIN
16	00756492	1	DUST CAP
17	00758151	1	CASTER WHEEL

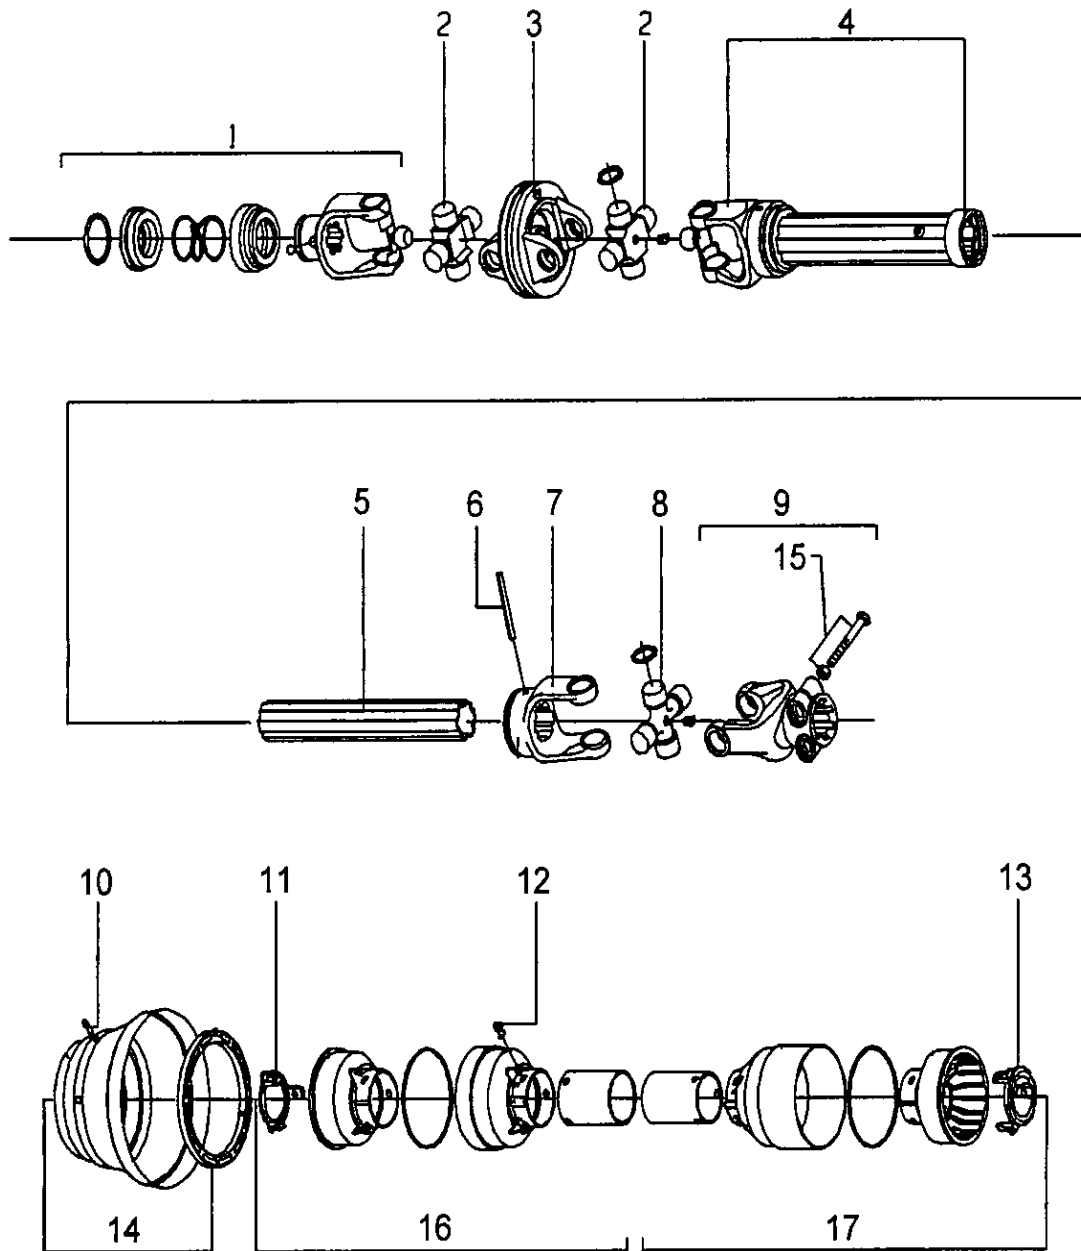

DRIVELINE ASSEMBLY - CV

ITEM	PART NO.	QTY.	DESCRIPTION
	00772707		DRIVELINE ASSEMBLY (540 RPM)
	00772706		DRIVELINE ASSEMBLY (1000 RPM)
1	00773483	1	COMPLETE COLLAR YOKE (540 RPM)
	00773473	1	COMPLETE COLLAR YOKE (1000 RPM)
2	00773474	2	CROSS JOURNAL SET
3	00773475	1	WIDE ANGLE DOUBLE YOKE
4	00773476	1	COMPLETE OUTER TUBE W/ YOKE
5	00773477	1	INNER TUBE
6	00754167	1	ROLL PIN FOR INNER TUBE
7	00754153	1	INNER YOKE
8	00773478	1	CROSS JOURNAL SET
9	00771337	1	INTERFERING CLAMP BOLT YOKE
10	00773479	6	SCREW
11	00754332	1	LOCKING COLLAR OUTER SHIELD
12	00754330	6	BOLT
13	00754331	1	LOCKING COLLAR INNER SHIELD
14	00773480	1	GUARD CONE SET
15	00773289	2	BOLT
16	00773481	1	HALF OUTER GUARD
17	00773482	1	HALF GUARD

DRIVELINE ASSEMBLY - CV

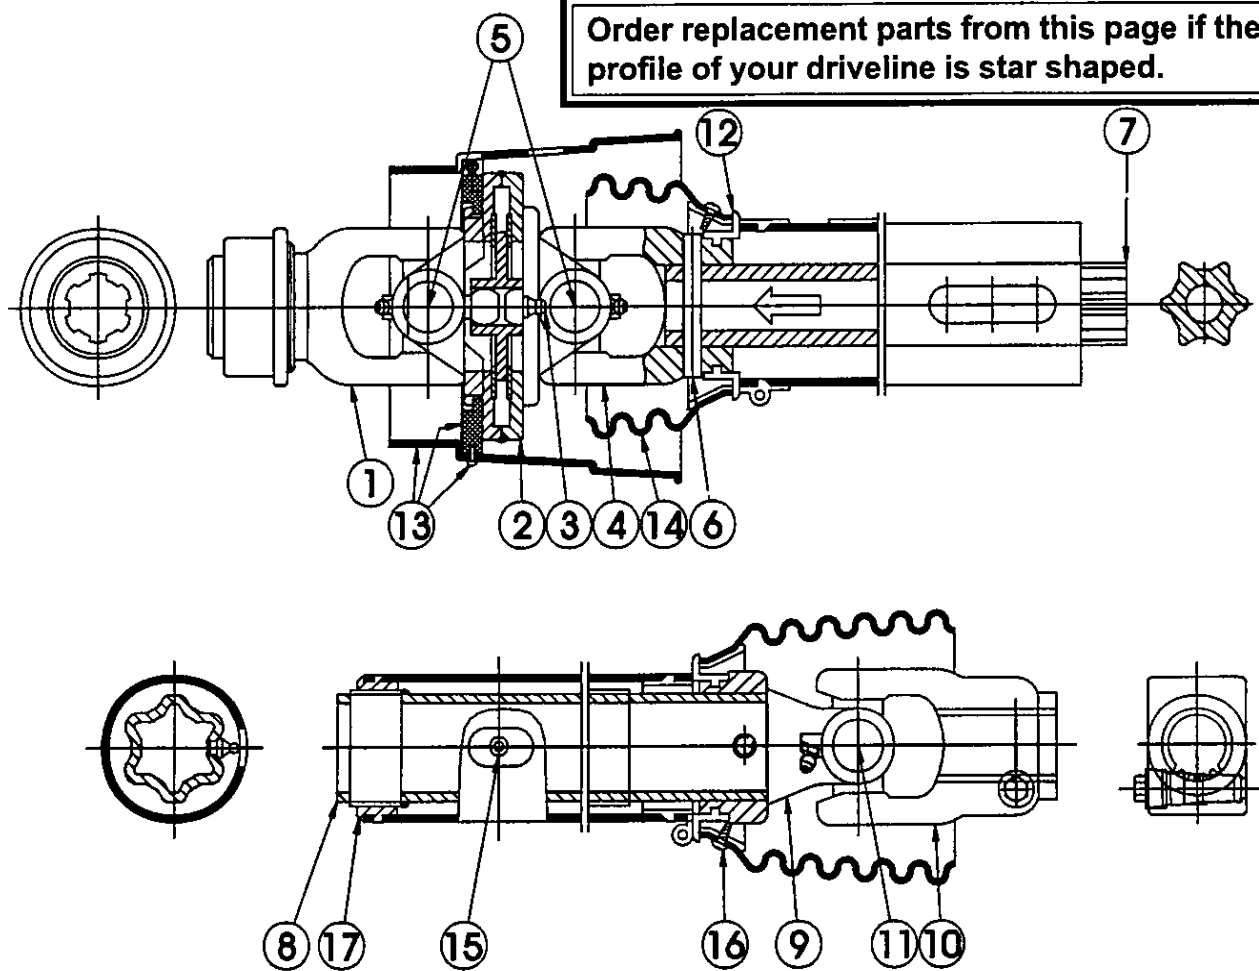


DRIVELINE ASSEMBLY - CV

ITEM	PART NO.	QTY.	DESCRIPTION
	00775301	-	DRIVELINE ASSEMBLY (540 RPM)
	00775306	-	DRIVELINE ASSEMBLY (1000 RPM)
1	8380	1	YOKE (540 RPM)
	00775379	1	YOKE (1000 RPM)
2	8381	1	DOUBLE YOKE
3	8382	1	GREASE FITTING
4	00775309	1	INBOARD YOKE
5	8396	2	CROSS & BEARING KIT
6	0921000333	2	SPRING PIN
7	00775380	1	INNER PROFILE
8	00775381	1	PROFILE & SLEEVE
9	00775310	1	INBOARD YOKE
10	00775311	1	YOKE
11	8388	1	CROSS & BEARING KIT
12	8393	1	BEARING RING
13	00763951	1	CV CONE & BEARING
14	8949	1	SHIELD CONE
15	1416601	1	GREASE FITTING
16	4797	8	SCREW
17	8974	1	SUPPORT BEARING
	00775304	1	OUTER SHIELD HALF
	00775305	1	INNER SHIELD HALF
	00767953	1	Q.D. YOKE KIT
	00774208	1	C.C. YOKE LOCK ASSY


JACKSHAFT ASSEMBLY - PULL TYPE CV

Order replacement parts from this page if the profile of your driveline is triangle shaped.

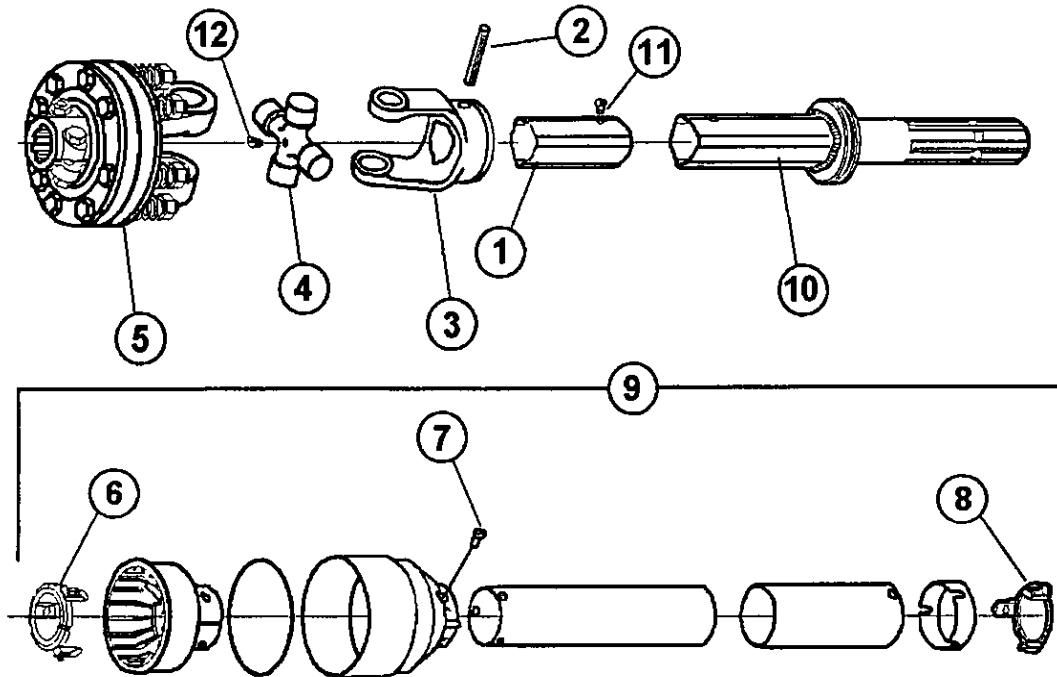

ITEM	PART NO.	QTY.	DESCRIPTION
	00762045	1	JACKSHAFT ASSY
1	00762730	1	OUTER TUBE TUBE
2	00754167	1	ROLL PIN
3	00754154	1	OUTER YOKE TUBE
4	00752896	1	CROSS BEARING SERIES 6
5	00756075	1	SLIP CLUTCH (W/SPRING)
6	00754332	1	LOCKING COLLAR (OUTER TUBE)
7	00754330	6	BOLT
8	00754331	1	LOCKING COLLAR (INNER TUBE)
9	00762727	1	KIT- COMPLETE SHIELD
10	00762729	1	INNER TUBE 1-3/4 - 20 SPLINE
11	00754335	1	GREASE FITTING
12	00755610	1	GREASE FITTING


JACKSHAFT ASSEMBLY - PULL TYPE CV

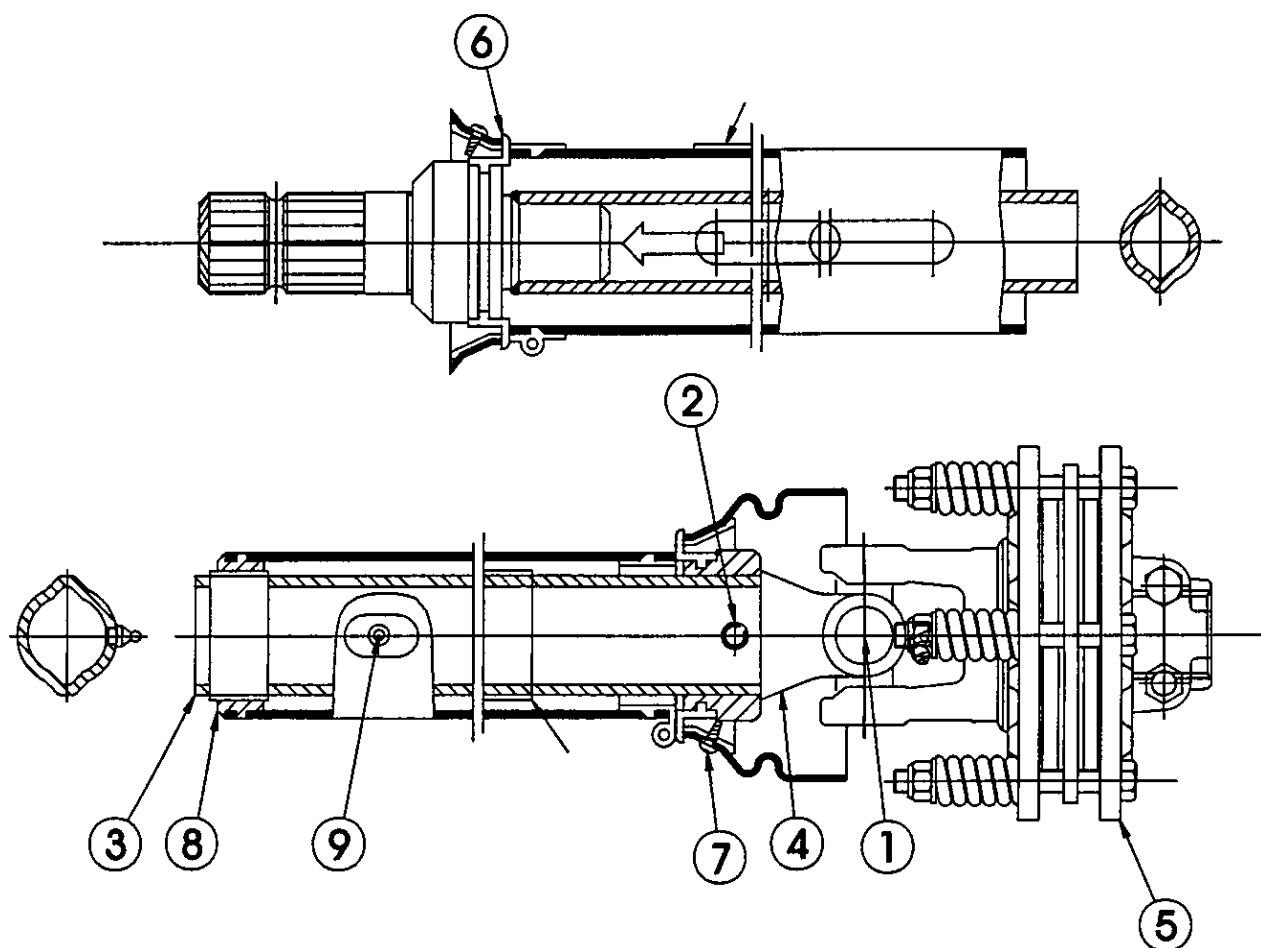

Order replacement parts from this page if the profile of your driveline is lemon shaped.

ITEM	PART NO.	QTY.	DESCRIPTION
	00775397	-	DRIVELINE ASSEMBLY
1	W279R	1	CROSS & BEARING KIT
2	8384	1	SPRING PIN
3	00775400	1	PROFILE & SLEEVE
4	00775318	1	INBOARD YOKE
5	00775331	1	FRICTION CLUTCH
6	8393	2	BEARING RING
7	4797	2	SCREW
8	8974	1	SUPPORT BEARING
9	1416601	1	GREASE FITTING
	00775401	1	OUTER SHIELD HALF
	00775402	1	INNER SHIELD HALF


TONGUE & JACKSHAFT ASSY - CV DRIVELINE OPTION

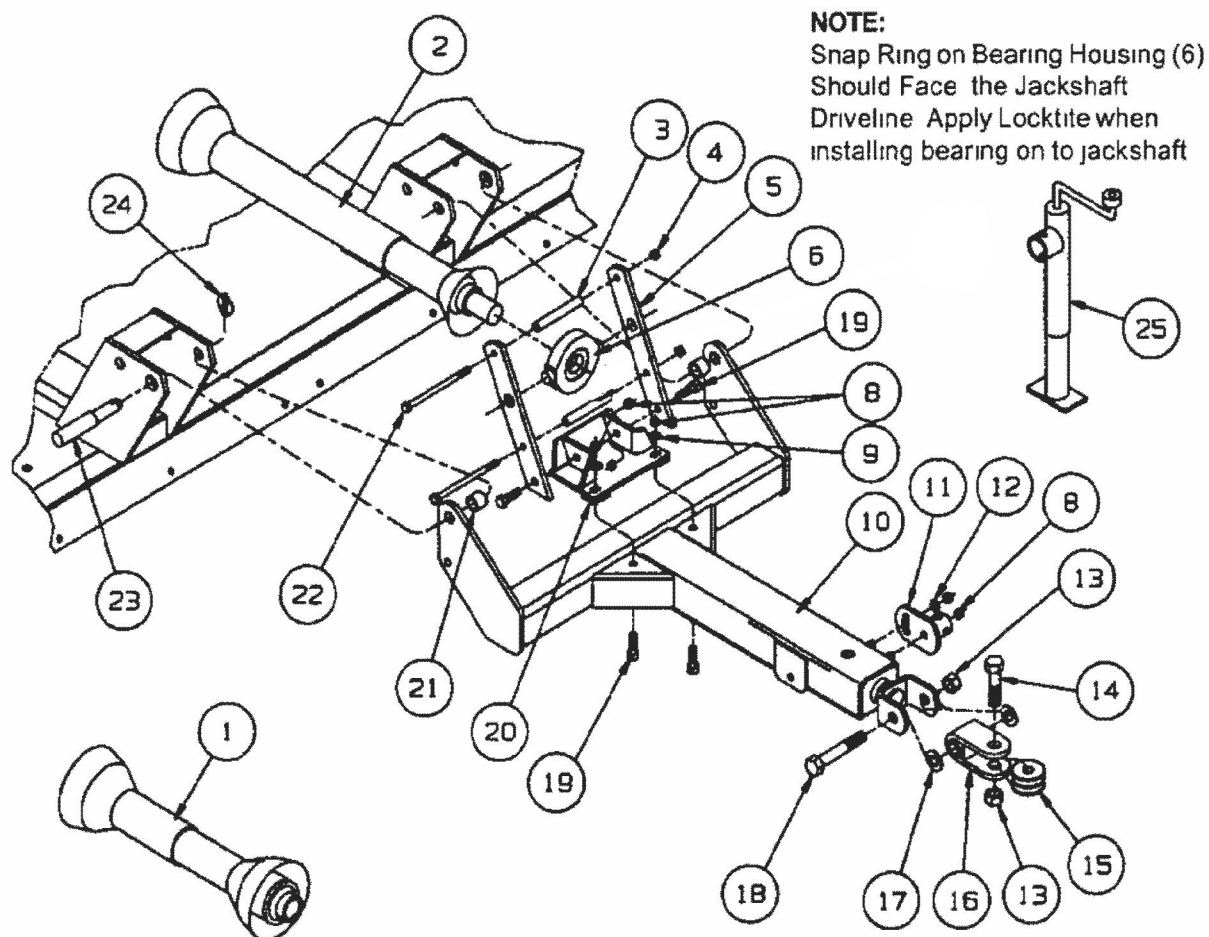

TONGUE & JACKSHAFT ASSY - CV DRIVELINE OPTION


ITEM	PART NO.	QTY.	DESCRIPTION
1	00772707	1	MAIN DRIVELINE 540 RPM CV
	00772706	1	MAIN DRIVELINE 1000 RPM CV
2	00762045	1	D/L JACKSHAFT ASSY - 42"
3	00764457	2	PIPE SPACER
4	00001800	2	LOCKNUT
5	00773059	2	FLAT JACKSHAFT SUPPORT
6	00773088	1	BEARING & HOUSING
	00764417	1	BEARING, BALL
7	02675800	2	BOLT
8	00695100	6	LOCKNUT
9	00756077	2	WASHER
10	00765810	1	WLDMT. TONGUE
11	00760941	1	WLDMT. JACK TUBE MOUNT
12	00001400	1	FLATWASHER
13	02030300	2	LOCKNUT
14	02712500	1	BOLT
15	00759275	3	HITCH CLEVIS WASHER
16	00748807	1	CLEVIS
17	00757478	2	SPRING WASHER
18	00755305	1	BOLT
19	02845500	2	BOLT
20	00773068	1	WLDMT. JACKSHAFT MOUNT
21	00761890	2	BUSHING
22	00751582	2	BOLT
23	00758146	2	PIVOT PIN
24	2196	2	LYNCH PIN
25	00756655	1	PARKING JACK

HYDRAULIC CYLINDER (OPTIONAL)

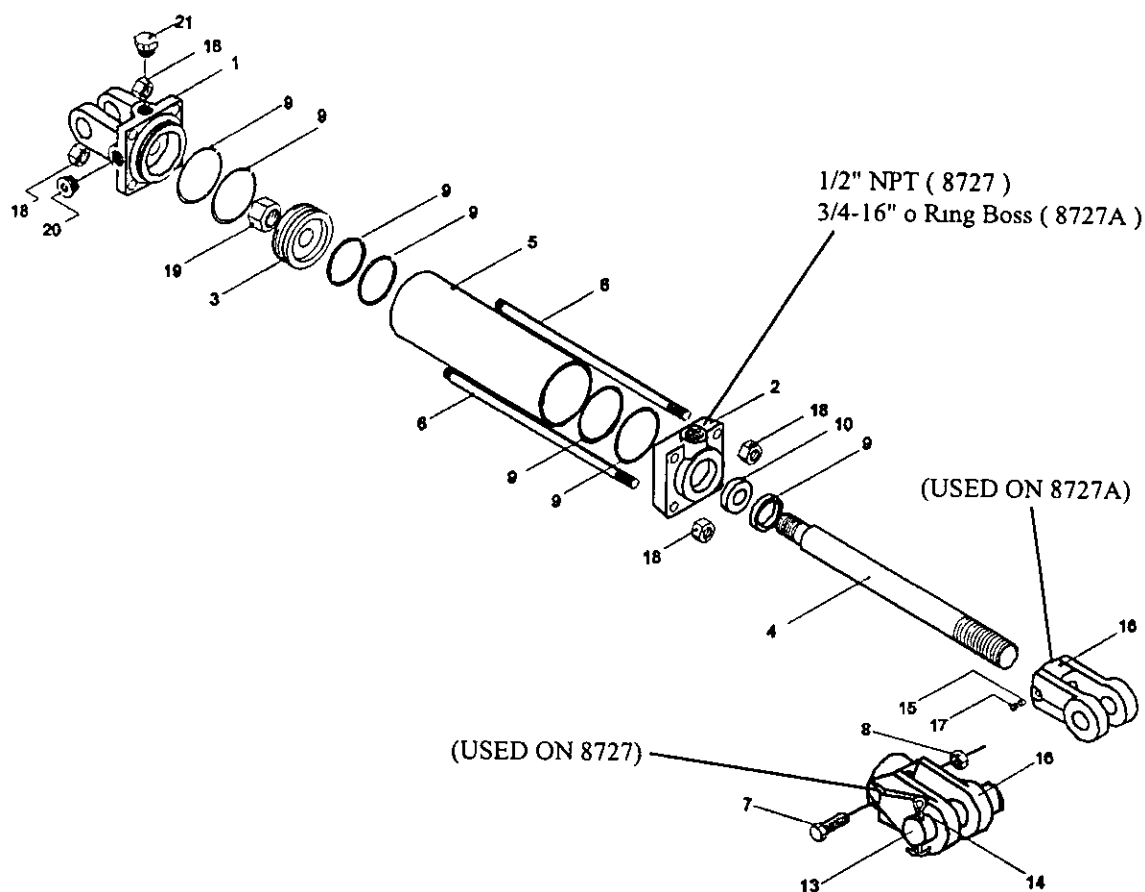


ITEM	PART NO.	QTY.	DESCRIPTION
	8727		COMPLETE ASSEMBLY
1	8755	1	CAP
2	8757	1	HEAD
3	00760671	1	PISTON
4	8753	1	PISTON ROD
5	8752	1	TUBE
6	8756	4	TIE ROD
7	00023100	1	BOLT
8	00013901	1	HEX NUT
9	8763	1	SEAL KIT
13	8354	2 ref	PIVOT PIN
14	00606000	2 ref	COTTER PIN
16	8754	1	OUTER CLEVIS
18	02031800	8	TIE ROD NUT
19	4675	1	PISTON NUT
21	7339	1	BREATHER PLUG
	651132	2 ref	HYDRAULIC HOSE (NOT SHOWN)
	94514	2 ref	SWIVEL FITTING 90 DEGREES (NOT SHOWN)

AXLE ASSEMBLY (SEMI-MOUNT)

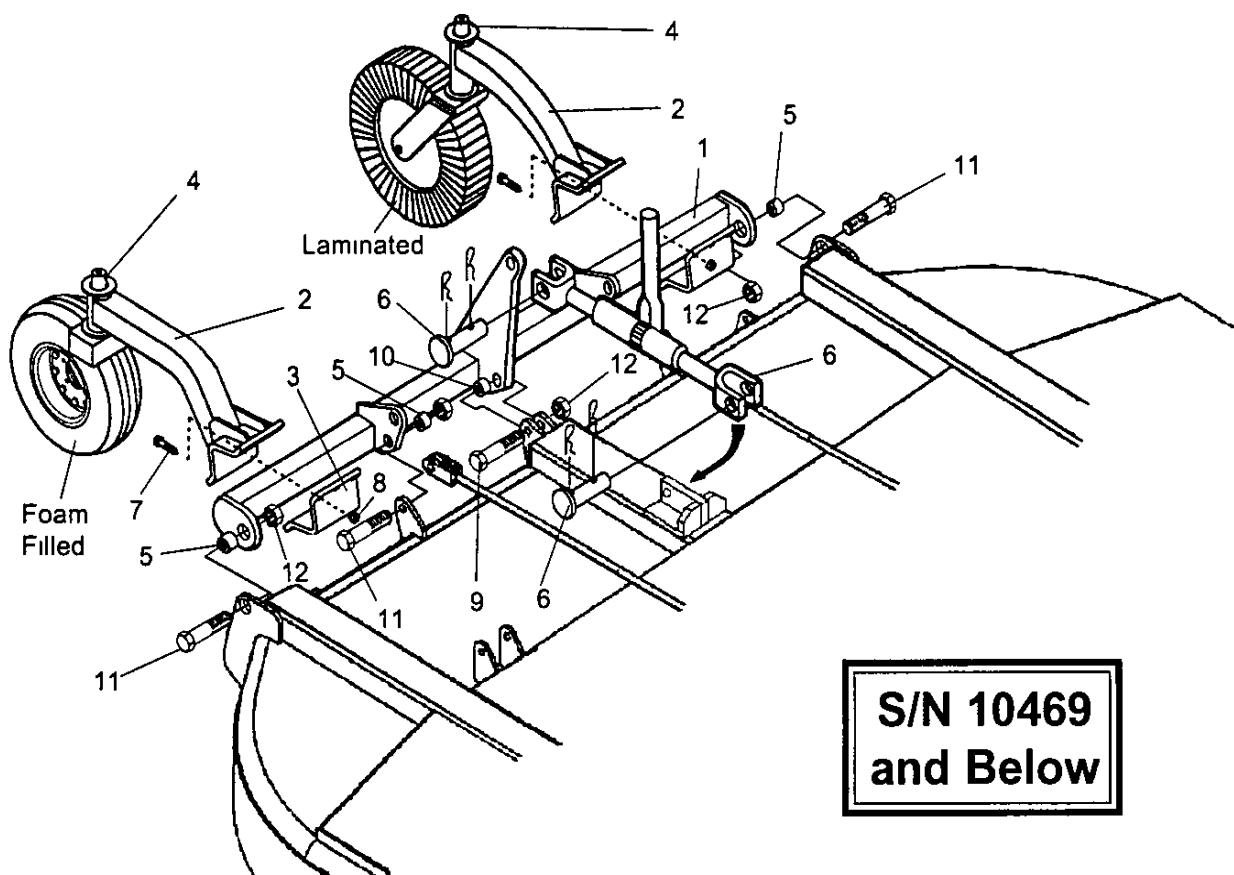


ITEM	PART NO.	QTY.	DESCRIPTION
1	00761104	1	CENTER AXLE WELDMENT
2	00769690	2	CASTER ARM (LAMINATED TIRE)
	00763097	2	CASTER ARM (FOAMED FILLED)
3	0683030200	2	WELDMENT CAP
4	0585020200	2	CASTER FORK ASSY.(LAMINATED TIRE)
	0585020210	2	CASTER FORK ASSY. (FOAMED FILLED)
5	00759561	4	BUSHING
6	00554600	1	RATCHET JACK ASSEMBLY
7	00750952	12	BOLT
8	00695100	12	NUT
9	00007800	1	BOLT
10	8327	1	BUSHING-LEVEL & ROD
11	00037100	4	BOLT
12	00037200	5	LOCKNUT

AXLE ASSEMBLY (SEMI-MOUNT)

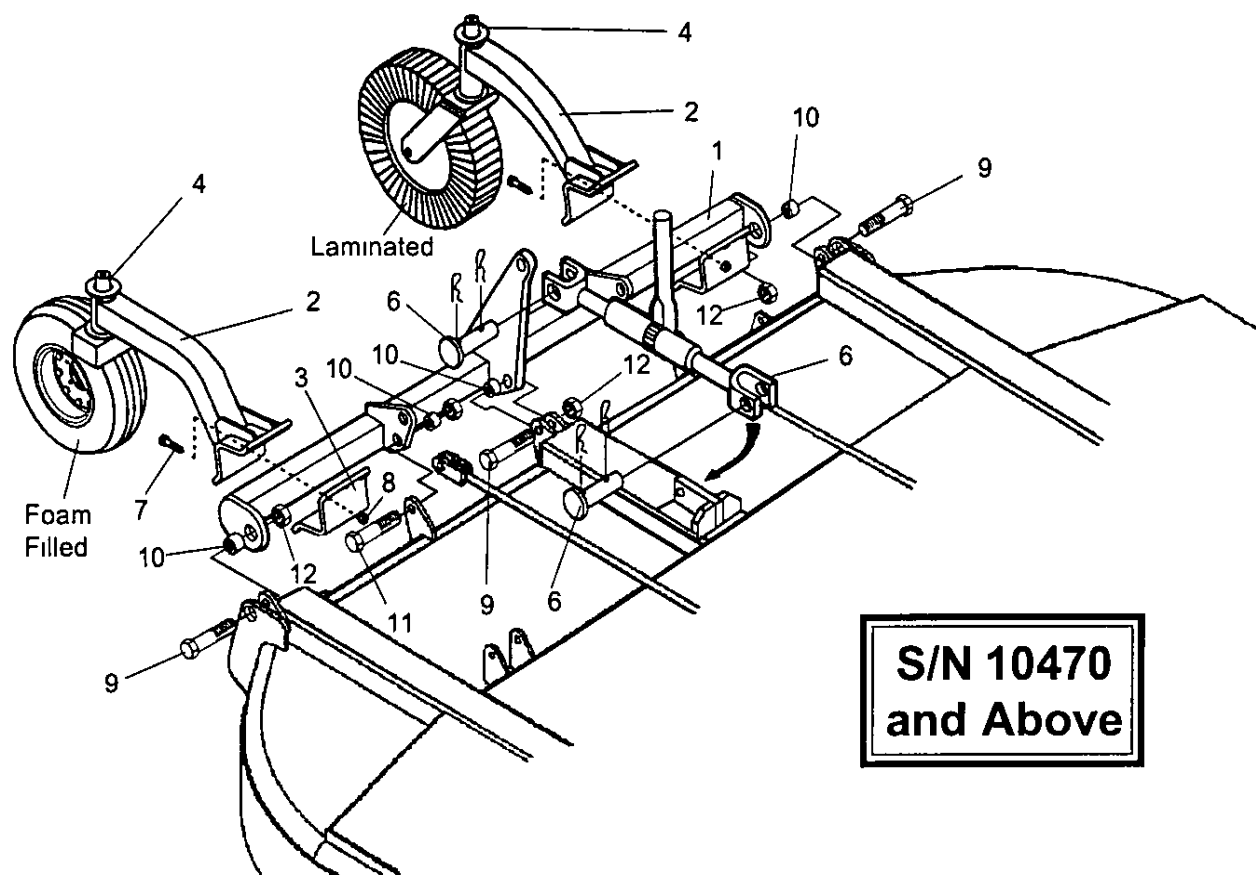




ITEM	PART NO.	QTY.	DESCRIPTION
1	00761104	1	CENTER AXLE WELDMENT
2	00769690	2	CASTER ARM (LAMINATED TIRE)
	00763097	2	CASTER ARM (FOAMED FILLED)
3	0683030200	2	WELDMENT CAP
4	0585020200	2	CASTER FORK ASSY.(LAMINATED TIRE)
	0585020210	2	CASTER FORK ASSY. (FOAMED FILLED)
6	00554600	1	RATCHET JACK ASSEMBLY
7	00750952	12	BOLT
8	00695100	12	NUT
9	00007800	3	BOLT
10	8327	5	BUSHING-LEVEL & ROD
11	00037100	2	BOLT
12	00037200	5	LOCKNUT

HYDRAULIC CYLINDER (OPTIONAL)

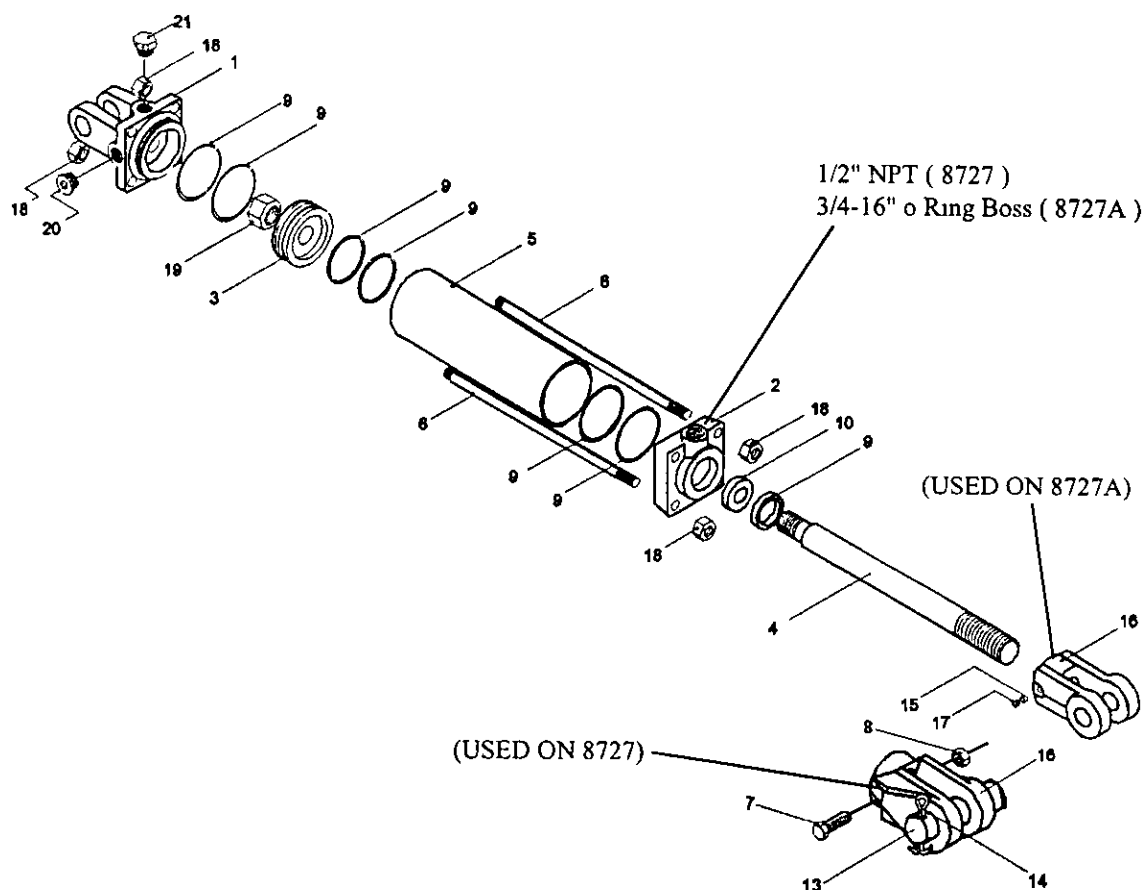

ITEM	PART NO.	QTY.	DESCRIPTION
	8727A		COMPLETE ASSEMBLY
1	00774729	1	CLEVIS CAP
2	00774734	1	ROD CAP
3	00774730	1	PISTON
4	00774753	1	ROD
5	3047111	1	TUBE
6	3047112	4	TIE ROD
9	00774760	1	SEAL KIT
15	3047117	1	NYLON THREAD PROTECTOR
16	1917140	1	ROD CLEVIS
17	00774740	1	SET SCREW
18	33003H5C	8	TIE ROD NUT
19	5JRC12160	1	PISTON NUT
20	1917132	1	PORT PLUG
21	2417154	1	BREATHER
	651132	2 ref	HOSE(NOT SHOWN)
	94514	2 ref	ELBOW(NOT SHOWN)
	00768343	2 ref	ADAPTER(NOT SHOWN)
	8354	2 ref	PIN(NOT SHOWN)
	00606000	2 ref	COTTER PIN (NOT SHOWN)


TIRE & WHEEL OPTIONS - PULL TYPE

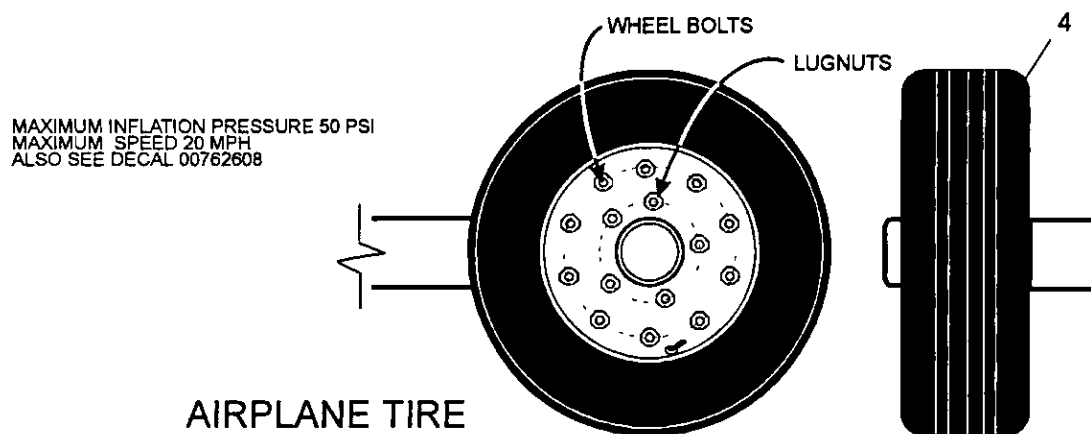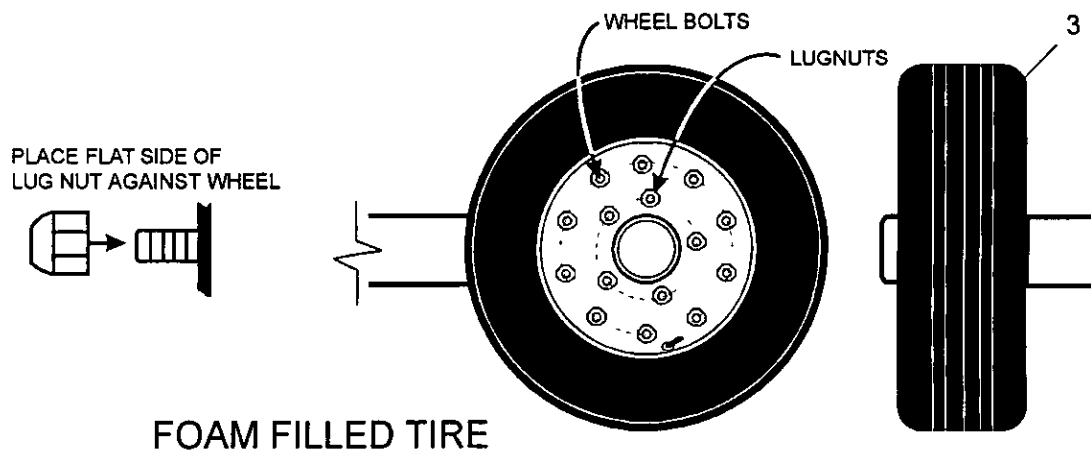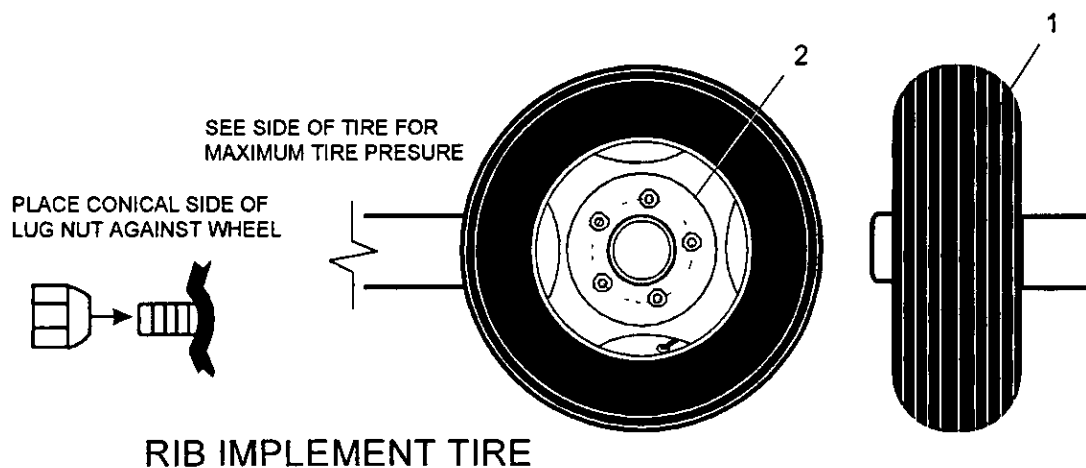

TIRE & WHEEL OPTIONS - PULL TYPE

ITEM	PART NO.	QTY.	DESCRIPTION
1	00749698	2	IMPLEMENT TIRE (COMPLETE ASSY)
2	00008700	2	15" RIM
3	00766911A	2	FOAM FILLED AIRPLANE TIRE
4	00771461	2	AIRPLANE TIRE

LIGHT KIT

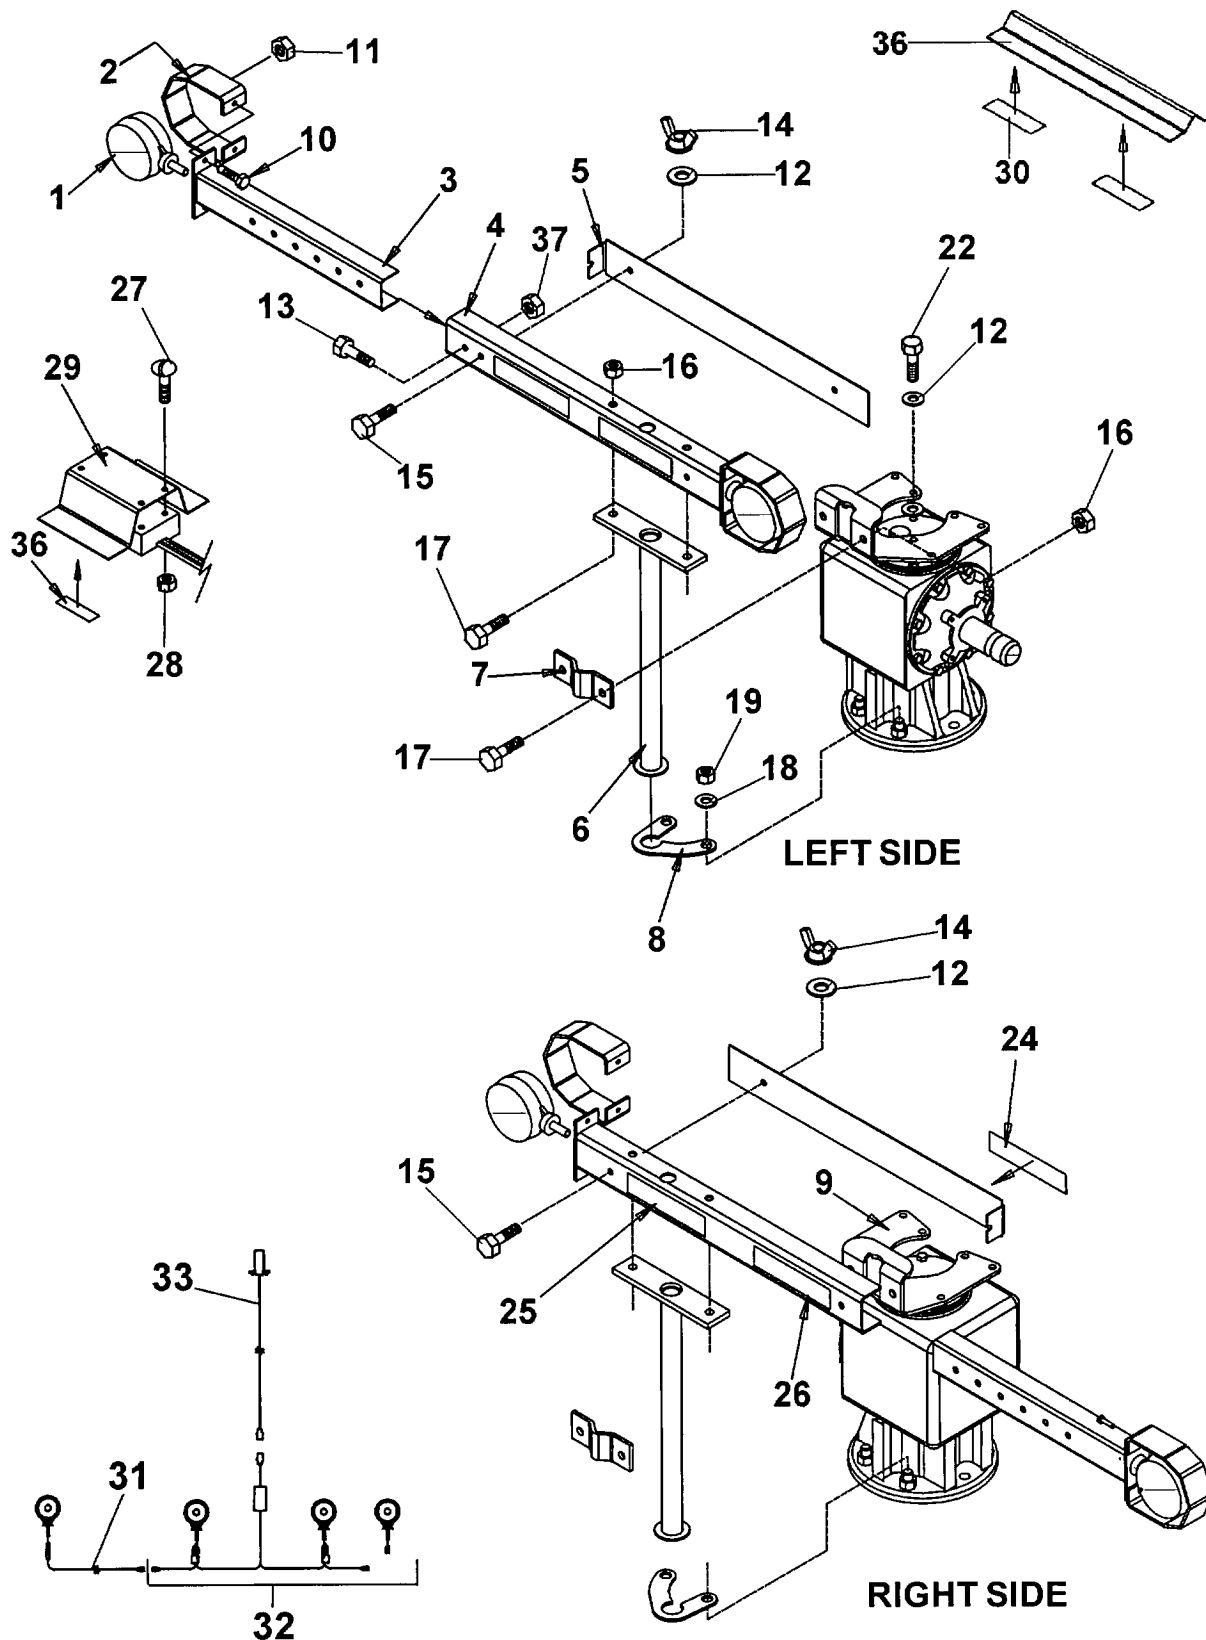

LIGHT KIT

ITEM	PART NO.	QTY.	DESCRIPTION
	00776325	1	LIGHT KIT
1	-----	N/A	AMBER LOLLIPOP LIGHT
2	00776935	4	LAMP COVER FLAT
3	00776933	2	INNER CHANNEL WLDMT
4	00776932	2	OUTER LIGHT CHANNEL WLDMT
5	00776928	2	LIGHT BAR COVER
6	00776934	2	LIGHT PEDESTAL COVER
7	00776937	2	TUBE CLAMP
8	00776936	2	LIGHT STAND HOLDER
9	00776938	2	LIGHT MOUNT PLATE
10	10058000	8	HHCS 1/4 NC 1 PL5
11	02969924	8	LOCKNUT
12	00012101	12	LOCKWASHER 3/8 PL HVY
13	00011400	2	HHCS 3/8 NC 1 PL5
14	5F6160	4	NUT WING 3/8 NC
15	00013900	4	HHCS 3/8 NC 2-1/2 PL5
16	00001800	8	LOCKNUT TLM 1/2 NC PLB
17	02030700	4	HHCS 1/2-13UNC 1-1/4 PL5
18	00010300	4	LOCKWASHER 5/8 PL STD
19	00010400	4	NUT 5/8 NC HEX PL
21	00760838	1	CARTON; WAXED
22	00762398	8	HEXB METRIC 10-P1.5 - 30MM PL5
23	15B600	24	WASHER 3/8 SAE P
24	1458393	2	DECAL;YELLOW REFLECTOR
25	1458398	2	DECAL;ORANGE REFLECTOR
26	1458392	2	DECAL;RED REFLECTOR
27	3263N13C	6	PHLP SCRW PN HD 10-24 X 1 1/4
28	329023C	6	HEX LOCKNUT #10-24
29	00776336	1	MODULE BRACKET
30	00776326	7	CABLE COVER PLATE
31	00776940	2	CABLE EXTENSION
32	6B1030	1	LIGHT BOX KIT
33	2457900	1	MAIN CONNECTION CABLE
34	00776327	1	ASSEMBLY INSTRUCTIONS
35	4352	1	HARDWARE BAG
36	00776613	16	ADHESIVE TAPE
37	00015800	2	NUT;TOPLOCK 3/8NC PLB


SAFETY DECAL SHEETS



2



3

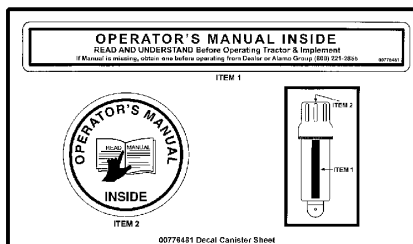

1

ITEM	PART NO.	QTY.	DESCRIPTION
1	00776481	1	SHEET,MANUALCANISTER DECAL
2	00773346	1	DECAL SHEET PAGE 1 TW144
3	00773347	1	DECAL SHEET PAGE 2 TW144
4	1458392	1	DECAL,RED REFLECTOR (NOT SHOWN)
5	1458393	1	DECAL,YELLOW REFLECTOR (NOT SHOWN)

SERVIS-RHINO

LIMITED WARRANTY

1. LIMITED WARRANTIES

- 1.01. Servis-Rhino warrants for one year from the purchase date to the original non-commercial, governmental, or municipal purchaser ("Purchaser") and warrants for six months to the original commercial or industrial purchaser ("Purchaser") that the goods purchased are free from defects in material or workmanship.
- 1.02. Manufacturer will replace for the Purchaser any part or parts found, upon examination at one of its factories, to be defective under normal use and service due to defects in material or workmanship.
- 1.03. This limited warranty does not apply to any part of the goods which has been subjected to improper or abnormal use, negligence, alteration, modification, or accident, damaged due to lack of maintenance or use of wrong fuel, oil, or lubricants, or which has served its normal life. This limited warranty does not apply to any part of any internal combustion engine, or expendable items such as blades, shields, guards, or pneumatic tires except as specifically found in your Operator's Manual.
- 1.04. Except as provided herein, no employee, agent, Dealer, or other person is authorized to give any warranties of any nature on behalf of Manufacturer.

2. REMEDIES AND PROCEDURES.

- 2.01. This limited warranty is not effective unless the Purchaser returns the Registration and Warranty Form to Manufacturer within 30 days of purchase.
- 2.02. Purchaser claims must be made in writing to the Authorized Dealer ("Dealer") from whom Purchaser purchased the goods or an approved Authorized Dealer ("Dealer") within 30 days after Purchaser learns of the facts on which the claim is based.
- 2.03. Purchaser is responsible for returning the goods in question to the Dealer.
- 2.04. If after examining the goods and/or parts in question, Manufacturer finds them to be defective under normal use and service due to defects in material or workmanship, Manufacturer will:
 - (a) Repair or replace the defective goods or part(s) or
 - (b) Reimburse Purchaser for the cost of the part(s) and reasonable labor charges (as determined by Manufacturer) if Purchaser paid for the repair and/or replacement prior to the final determination of applicability of the warranty by Manufacturer.The choice of remedy shall belong to Manufacturer.
- 2.05. Purchaser is responsible for any labor charges exceeding a reasonable amount as determined by Manufacturer and for returning the goods to the Dealer, whether or not the claim is approved. Purchaser is responsible for the transportation cost for the goods or part(s) from the Dealer to the designated factory.

3. LIMITATION OF LIABILITY.

- 3.01. MANUFACTURER DISCLAIMS ANY EXPRESS (EXCEPT AS SET FORTH HEREIN) AND IMPLIED WARRANTIES WITH RESPECT TO THE GOODS INCLUDING, BUT NOT LIMITED TO, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
- 3.02. MANUFACTURER MAKES NO WARRANTY AS TO THE DESIGN, CAPABILITY, CAPACITY, OR SUITABILITY FOR USE OF THE GOODS.
- 3.03. EXCEPT AS PROVIDED HEREIN, MANUFACTURER SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO PURCHASER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS, OR DAMAGE CAUSED OR ALLEGED TO BE CAUSED DIRECTLY OR INDIRECTLY BY THE GOODS INCLUDING, BUT NOT LIMITED TO, ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES RESULTING FROM THE USE OR OPERATION OF THE GOODS OR ANY BREACH OF THIS WARRANTY. NOTWITHSTANDING THE ABOVE LIMITATIONS AND WARRANTIES, MANUFACTURER'S LIABILITY HEREUNDER FOR DAMAGES INCURRED BY PURCHASER OR OTHERS SHALL NOT EXCEED THE PRICE OF THE GOODS.
- 3.04. NO ACTION ARISING OUT OF ANY CLAIMED BREACH OF THIS WARRANTY OR TRANSACTIONS UNDER THIS WARRANTY MAY BE BROUGHT MORE THAN TWO (2) YEARS AFTER THE CAUSE OF ACTION HAS OCCURRED.

4. MISCELLANEOUS.

- 4.01. Proper Venue for any lawsuits arising from or related to this limited warranty shall be only in Guadalupe County, Texas.
- 4.02. Manufacturer may waive compliance with any of the terms of this limited warranty, but no waiver of any terms shall be deemed to be a waiver of any other term.
- 4.03. If any provision of this limited warranty shall violate any applicable law and is held to be unenforceable, then the invalidity of such provision shall not invalidate any other provisions herein.
- 4.04. Applicable law may provide rights and benefits to purchaser in addition to those provided herein.

KEEP FOR YOUR RECORDS

ATTENTION: Purchaser should fill in the blanks below for his reference when buying repair parts and/or for proper machine identification when applying for warranty.

Servis-Rhino Implement Model _____ Serial Number _____

Date Purchased _____ Dealer _____

ATTENTION:
READ YOUR OPERATOR'S MANUAL

RHINO®
1020 S. Sangamon Ave.
Gibson City, IL 60936
800-446-5158
Email: parts@servis-rhino.com





TO THE OWNER/OPERATOR/DEALER

To keep your implement running efficiently and safely, read your manual thoroughly and follow these directions and the Safety Messages in this Manual. The Table of Contents clearly identifies each section where you can easily find the information you need.

The OCCUPATIONAL SAFETY AND HEALTH ACT (1928.51 Subpart C) makes these minimum safety requirements of tractor operators:

REQUIRED OF THE OWNER:

1. Provide a Roll-Over-Protective Structure that meets the requirements of this Standard; and
2. Provide Seatbelts that meet the requirements of this paragraph of this Standard and SAE J4C; and
3. Ensure that each employee uses such Seatbelt while the tractor is moving; and
4. Ensure that each employee tightens the Seatbelt sufficiently to confine the employee to the protected area provided by the ROPS.

REQUIRED OF THE OPERATOR

1. Securely fasten seatbelt if the tractor has a ROPS.
2. Where possible, avoid operating the tractor near ditches, embankments, and holes.
3. Reduce speed when turning, crossing slopes, and on rough, slick, or muddy surfaces.
4. Stay off slopes too steep for safe operation.
5. Watch where you are going - especially at row ends, on roads, and around trees.
6. Do not permit others to ride.
7. Operate the tractor smoothly - no jerky turns, starts, or stops.
8. Hitch only to the drawbar and hitch points recommended by the tractor manufacturer.
9. When the tractor is stopped, set brakes securely and use park lock, if available.



Keep children away from danger all day, every day...



Equip tractors with rollover protection (ROPS) and keep all machinery guards in place...



Please work, drive, play and live each day with care and concern for your safety and that of your family and fellow citizens.

