GRILLE GUARD NEW HOLLAND 3415 TRACTOR

Grille guard can be installed using tools ordinarily available. Shut off engine and engage brakes during installation.

INSTALLING GRILLE GUARD (Figures 1, 2 & 3)

NOTE: To install grille guard on tractors without auxiliary valve or loader refer to Figure 1, tractors with auxilliary valve Figure 2 and tractors with loader and auxilliary valve Figure 3.

NOTE: If installing mounting kit with grille guard, leave hardware loose untill right mid mounting is installed to facilitate installation. Discard extra hardware from mounting kit parts carton.


- If so equipped, remove and discard hardware and spacer tubes securing hydraulic coupler bracket to tractor frame.
- Install grille guard (1) to tractor frame using 1/2 x 2 cap screws (6) and 1/2 lock nuts (4).


NOTE: If tractor is so equipped, reattach hydraulic coupler bracket using 1/2 x 3-3/4 cap screws (10), spacer tubes (9) and lock nuts (4). Longer spacer tubes provide clearance between oil lines and grille quard brackets.

- Install brackets (2) to grille guard (1) using 1/2 x 1-1/4 carriage bolts (3) and 1/2 lock nuts (4).
- Install brackets (2) to tractor frame using 1/2 x 2-1/2 cap screws (5), spacer (7) and 1/2 lock nuts (4).

PARTS LIST - GRILLE GUARD

ITEM	PART NO.	DESCRIPTION	QTY.
1	43617	GUARD, Grille, Assembly	1
2	43614	BRACKET, Grille Guard	2
3	G126485	BOLT, Carriage, 1/2-13 x 1-1/4	2
4	G9414074	NUT, Lock, 1/2-13	10
5	G180185	SCREW, Cap, 1/2-13 x 2-1/2	4
6	G180181	SCREW, Cap, 1/2-13 x 2 (Use without Mount Kit or Valve)	6
7	39068-5	SPACER, Tube, .75 Long (Use without Mount Kit)	2
8	G120390	WASHER, Flat, 1/2 (Use with Mount Kit)	. 4
9	39068-6	SPACER, Tube, 2" Long (Use with Valve Kit)	2
10	G180194	SCREW, Cap, 1/2-13 x 4 (Use with Valve Kit)	2

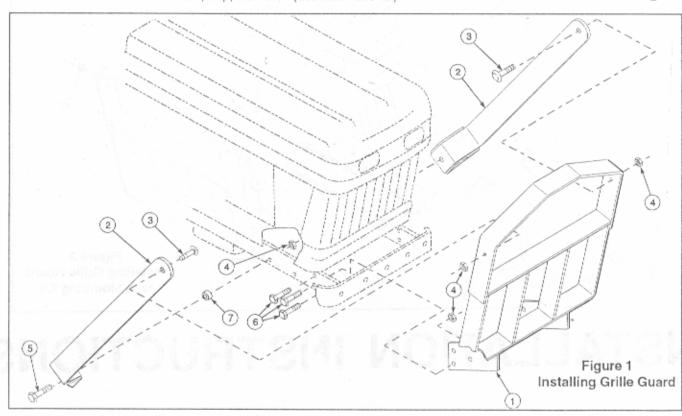

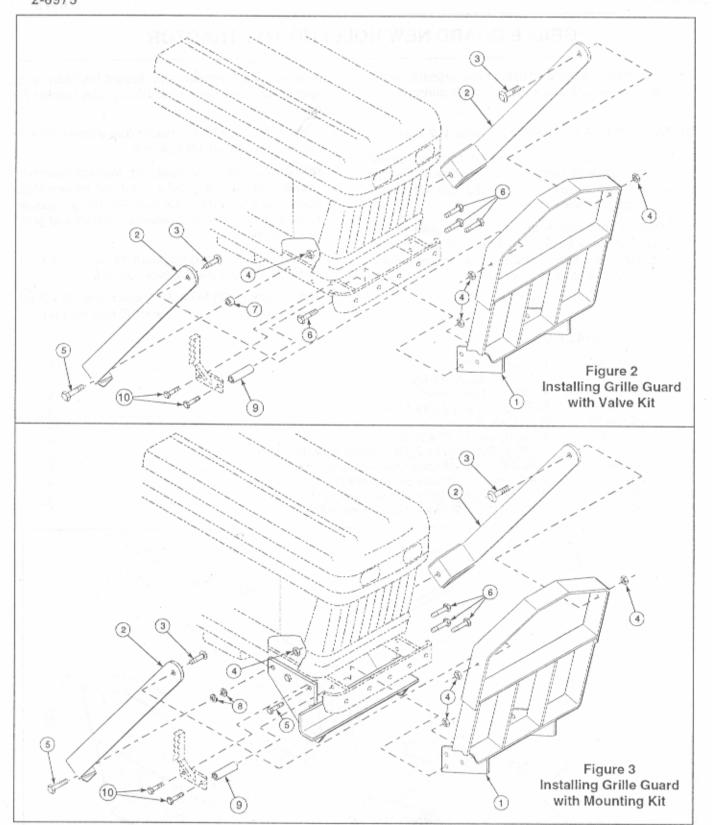

INSTALLATION INSTRUCTIONS